ROUSH CLEANTECH

2011-2014

# Ford E-Series and F-Series Products

## Liquid Propane Autogas Fuel System (3rd Generation)

**Includes:**

**E-150/E-250/E-350 Cargo Van/Wagon**
**E-150/E-250/E-350 Extended Range Cargo Van/Wagon**
**E-450 Custom Body**
**F-250/F-350/F-450/F-550/F-650**
**F-53/F-59**

| Revision History | | |
|---|---|---|
| -AA | Intital Release | 2/2013 |
| -AB | Revised | 5/2013 |
| -AC | Revised | 7/2013 |
| -AD | Revised | 11/2013 |
| -AE | Revised | 3/2014 |

# DIAGNOSTIC MANUAL
# P-01B101-AE

# TABLE OF CONTENTS

SAFETY INFORMATION . . . . . .2
Alert Messages . . . . . .2
Installation, Garaging and Training . . . . . .3
Purging and Venting (Tanks and Lines) . . . . . .3
DIAGNOSTIC TROUBLE CODES . . . . . .5
About Diagnostic Trouble Codes . . . . . .5
System and Diagnostic Terminology . . . . . .5
Diagnostic Trouble Code List . . . . . .6
Calibration Release OBD Summary Chart . . . . . .7
Calibration Release OBD Summary Chart . . . . . .8
Calibration Release OBD Summary Chart . . . . . .9
Flow Control Solenoid . . . . . .10
Bleed Solenoid . . . . . .10
Tank Solenoid . . . . . .11
Fuel Rail Pressure Control Module Supply Solenoid and Wiring . . . . . .12
SRM, CAN Bus Circuit Wiring . . . . . .13
Fuel System . . . . . .13
Heated Exhaust Gas Oxygen Sensor . . . . . .14
Electronic Fuel Pump Relay (A/B) . . . . . 15
Integrated Pressure Temperature Sensor . . . . . .16
Fuel Level Sender . . . . . .18
DIAGNOSTIC TESTS AND PROCEDURES . . . . . .21
General Information . . . . . .21
No Fill . . . . . .22
Slow Fill . . . . . .24
Over Fill . . . . . .26
Engine Does Not Crank . . . . . .27
Engine Cranks, No Start . . . . . .28
Engine Stumble, Stall, Rough Idle . . . . . .30
Excess Flow Valve Check . . . . . .31
Maximum Pressure Check . . . . . .32
Supply Solenoid Check . . . . . .32
Fuel System Fails to Bleed . . . . . .34
Fuel Pressure Drop . . . . . .35
Fuel Level Indication Check . . . . . .36
Tank Solenoid Electrical Check . . . . . .37
Fuel Rail Pressure Control Module Electrical Check . . . . . .39
Integrated Pressure Temperature Sensor Electrical Check . . . . . .41
Fuel Pump Electrical Test . . . . . .42
Fuel Pump Control Module Electrical Continuity Test . . . . . .44
Smart Relay Module Electrical Test . . . . . .46
Fuel Level Sender Electrical Check . . . . . .48
Fuel Level Interface Module Electrical Test . . . . . .50
WIRING DIAGRAMS AND ELECTRICAL SCHEMATICS . . . . . .51
E-150/250/350 Wiring Harnesses and Connector Layout . . . . . .52
E-150/250/350 Extended Range Wiring Harnesses and Connector Layout . . . . . .53
E-450 Custom Body Wiring Harnesses and Connector Layout . . . . . .54
F-250/350 Pickup, In-Bed Tank Wiring Harnesses and Connector Layout . . . . . .55

# TABLE OF CONTENTS

F-650 Chassis Cab Wiring Harness and Connector Layout . . . . . .56
F-450/550 Roush Wiring Harness . . . . . 57
F-650 Chassis Cab, Roush Wiring Harnesses . . . . . .58
F-53/59 Roush Wiring Harnesses . . . . . .59
E-Series, Extended Range and E-450 Electrical Schematic — Underhood Harness . . . . . .60
E-Series, Extended Range and E-450 Electrical Schematic — CAN Bus Harness . . . . . .61
E-Series, Extended Range and E-450 Electrical Schematic — Rear Frame Harness . . . . . .62
E-Series, Extended Range and E-450 Electrical Schematic — In-Tank Harness . . . . . .63
E-Series, Extended Range and E-450 Electrical Schematic — Solenoid Harness . . . . . .64
E-450 Stripped Chassis CAN Harness . . . . . .65
F-250/350 Pickup, CAN Bus Jumper Harness Electrical Schematic . . . . . .66
F-250/350 Pickup, F-450/550 and F-650, Tank Solenoid Harness Electrical Schematic . . . .67
F-250/350 Pickup, In-Bed Fuel Tank Jumper Harness Electrical Schematic . . . . . .68
F-250/350 Pickup, FTPT Jumper Harness Electrical Harness . . . . . .69
F-650 CAN Harness . . . . . .70
F-650 Fuel Tank Jumper Harness . . . . . .71
F-650 Underhood Harness Electrical Schematic . . . . . .72
F-53/59 CAN Harness . . . . . .73
F-53/59/250/350/450 Rear Frame Harness Electrical Schematic . . . . . .74
F-53/59/250/350/450 Underhood Harness Electrical Schematic. . . . . .75
F-53/59/450 Fuel Tank Jumper Harness Electrical Schematic . . . . . .76

# INTRODUCTION

## SAFETY INFORMATION

The National Fire Protection Association (NFPA) publishes a code book of rules that apply to the storage, handling, transportation and use of liquefied petroleum gas (LP-Gas or LPG). The book is known as NFPA 58. It is revised as necessary and published every other year. This code is adopted as law in virtually every political subdivision in the United States. Check with your local authorities for regulations applicable to liquid propane.

### Alert Messages

The following alert messages may appear from time to time in appropriate places in this manual. Ensure that all personnel read and adhere to these alert messages.

**⚠ DANGER**

***Although propane is nontoxic, nonpoisonous, has the lowest flammability range of any alternative fuel and dissipates quickly when released into the atmosphere, propane vapor is heavier than air and seeks the lowest point. When the ratio of propane to air is between 2.2% and 9.6%, propane will burn in the presence of an ignition source at 940°F (504°C) or hotter. Keep away from heat, sparks, flames, static electricity or other sources of ignition. Failure to heed this danger may result in severe personal injury or death.***

**⚠ DANGER**

***The fuel supply lines remain pressurized after engine shutdown. Keep away from heat, sparks, flames, static electricity or other sources of ignition. Do NOT enter storage areas or confined space unless they are adequately ventilated. Failure to heed this danger may result in severe personal injury or death.***

**⚠ DANGER**

***Do NOT carry lighted smoking materials or smoke while working on fuel system components. Failure to heed this danger could result in severe personal injury or death.***

**⚠ DANGER**

***Disconnect the battery ground at the battery to ensure that the vehicle electrical system has no current. Failure to heed this danger could result in severe personal injury or death.***

**⚠ DANGER**

***Propane is heavier than air and seeks the lowest available level when released to the atmosphere. Keep heat, sparks, flames, static electricity or other sources of ignition out of the area when venting or purging the fuel lines or tank. Failure to heed this danger can result in severe personal injury or property damage.***

**⚠ DANGER**

***Technicians working with, or around, fuel systems should be properly trained to utilize extreme care and caution at all times. Failure to exercise extreme caution and care may lead to serious accidents which can result in property damage, personal injury and/or death.***

**⚠ WARNING**

**Liquid propane is cold. The temperature of propane in its liquid state at atmospheric pressure is –44°F (–42°C). Wear eye and ear protection during venting and repair operations. Keep moisture away from the valves. Failure to heed this warning can result in personal injury.**

## Installation, Garaging and Training

Chapter 11 of NFPA 58 applies to engine fuel systems using LP-Gas in internal combustion engines, including containers, container appurtenances, carburetion equipment, piping, hose and fittings and their installation. Additionally, this chapter applies to garaging of vehicles and to the training of personnel.

Paragraph 11.2 specifies that each person engaged in installing, repairing, filling or otherwise servicing an LP-Gas engine fuel system shall be trained. Contact the Propane Education and Research Council to learn more about their CETP E-Learning computer-based training program: courtney.gendron@propanecouncil.org, or vincent.sibilia@propanecouncil.org.

## Purging and Venting (Tanks and Lines)

Venting of LP-Gas to the atmosphere is covered by paragraphs 7.3.1, General, and 7.3.2, Purging of NFPA 58, 2008 edition. Refer to NFPA 58, Local Codes and Proper Training for specific information relating to safe venting of LPG.

# TROUBLESHOOTING

# DIAGNOSTIC TROUBLE CODES

## About Diagnostic Trouble Codes

All diagnostic trouble codes (DTCs) known to be affected by the liquid propane autogas (LPA) system are covered in this manual. For all other DTCs, refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* at www.motorcraft.com.

## System and Diagnostic Terminology

| Acronym or Abbreviation | Description |
|---|---|
| BS | Bleed Solenoid |
| CAN | Controller Area Network |
| DTC | Diagnostic Trouble Code |
| EFPR | Electronic Fuel Pump Relay |
| ERFS | Electronic Returnless Fuel System |
| EVAP | Evaporative |
| FCS | Flow Control Solenoid |
| FLIM | Fuel Level Interface Module |
| FLS | Fuel Level Sender |
| FP | Fuel Pump |
| FPCM | Fuel Pump Control Module |
| FRP | Fuel Rail Pressure |
| FRPCM | Fuel Rail Pressure Control Module |
| FTS | Fuel Temperature Sensor |
| GRD | Ground |
| HEGO | Heated Exhaust Gas Oxygen |
| IC | Instrument Cluster |
| IPTS | Integrated Pressure Temperature Sensor |
| KOEO | Key On Engine Off |
| KOER | Key On Engine Running |
| LPA | Liquid Propane Autogas |
| MAF | Mass Air Flow |
| OEM | Original Equipment Manufacturer |
| OPD | Overfill Protection Device |
| PCM | Powertrain Control Module |
| PID | Parameter Identification |
| PWR GND | Power Ground |
| SIG RTN | Signal Return |
| SRM | Smart Relay Module |
| SS | Supply Solenoid |
| TS | Tank Solenoid |

| Acronym or Abbreviation | Description |
|---|---|
| VMV | Vapor Management Valve |
| VPWR | Voltage Power |
| VREF | Voltage Reference |
| WOT | Wide Open Throttle |

## Diagnostic Trouble Code List

| Code | Description |
|---|---|
| P0005 | Fuel Shutoff Valve A Control Circuit Open |
| P0090 | Fuel Pressure Regulator Circuit Open |
| P009B | Fuel Pressure Relief Control Circuit Open |
| P009E | Fuel Pressure Relief Control Performance Stuck Off |
| P009F | Fuel Pressure Relief Control Stuck On |
| P0148 | Fuel Delivery Error |
| P0171 | System Too Lean (Bank 1 and Bank 2) |
| P0174 | System Too Lean (Bank 1 and Bank 2) |
| P0182 | Fuel Temperature Sensor (A) Circuit Low |
| P0183 | Fuel Temperature Sensor (A) Circuit High |
| P0190 | Fuel Pressure Sensor A Circuit |
| P0192 | Fuel Pressure Sensor A Circuit Low |
| P0193 | Fuel Pressure Sensor A Circuit High |
| P025A | Fuel Pump Control Module Circuit Range/Performance A |
| P027A | Fuel Pump Control Module Circuit Range/Performance B |
| P03xx | Misfire |
| P0460 | Fuel Level Sender A Circuit |
| P0461 | Fuel Level Sender A Circuit Range/Performance |
| P0462 | Fuel Level Sender A Circuit Low |
| P0463 | Fuel Level Sender A Circuit High |
| P0627 | Fuel Pump A Control Circuit Open |
| P116E | Exceeded Maximum Pressure |
| P2067 | Fuel Level Sensor B Circuit Low |
| P2068 | Fuel Level Sensor B Circuit High |
| P2195 | Heated Exhaust Gas Oxygen Sensor Stuck |
| P2197 | Heated Exhaust Gas Oxygen Sensor Stuck |
| P25B1 | Fuel Level Sensor B Stuck |
| P2632 | Fuel Pump B Control Circuit Open |
| P2665 | Supply Solenoid Circuit Fault |
| P26B5 | Fuel Shutoff Valve B Function Check |
| U0108 | Lost Communication with Alternative Fuel Control Module |
| U0109 | Lost Communication with Fuel Pump Control Module A |
| U016C | Lost Communication with Fuel Pump Control Module B |
| U0309 | Alt Fuel Module-Wrong SRM |

## Calibration Release OBD Summary Chart

| | OEM MY | HDE MY | Cert | Calibration | OBD Class | Detail Chart | Comments |
|---|---|---|---|---|---|---|---|
| **Vehicle** | | | | **(03P150)** | | | |
| **E-Series** | 2011 | N/A | Fed Only | PBGD-Ax & Bx | OBD II | E-Series 5.4L Group | FED OBD Identifier |
| | 2012 | N/A | 50S | PBGD-Cx & Dx | OBD II | E-Series 5.4L Group | |
| | 2013 | N/A | Fed | PBGD-Ax & Bx | OBD II | E-Series 5.4L Group | FED OBD Identifier |
| | 2013 | N/A | 50S | PBGD-Cx & Dx | OBD II | E-Series 5.4L Group | Fuel Pump Codes Added |
| | | | | | | | |
| **F-250/F-350** | 2012 | N/A | 50S Only | PCDH-Ax & Bx | OBD II | F-Series 6.2L Group | |
| | 2013 | N/A | Fed | PCDH-Cx & Dx | OBD II | F-Series 6.2L Group | Fuel Pump Codes Added |
| | 2013 | N/A | 50S | PCDH-Ax & Bx | OBD II | F-Series 6.2L Group | Fuel Pump Codes Added |
| | | | | | | | |
| **E-450** | 2011 | 2011 | Fed | PBJC-Bx & Dx | Non-OBD (EMD) | E-Series 6.8L HDE | OBD I / EMD Level |
| | 2012 | 2012 | 50S | PBJC-Ax & Cx | Non-OBD (EMD) | E-Series 6.8L HDE | OBD I / EMD Level |
| | 2013 | 2013 | 50S | PDJC-Ax & Bx | EMD+ | E-Series 6.8L HDE | Cat Monitor Added |
| | | | | | | | |
| **F-450/F-550** | 2012 | 2011 | Fed | PCEB-Ax | Non-OBD (EMD) | F-Series 6.8L HDE | OBD I / EMD Level |
| | 2012 | 2012 | Fed | PCEB-Ax | Non-OBD (EMD) | F-Series 6.8L HDE | OBD I / EMD Level |
| | 2013 | 2012 | Fed | PCEB-Ax | Non-OBD (EMD) | F-Series 6.8L HDE | OBD I / EMD Level |
| | 2013 | 2013 | 50S | PDEB-Ax | EMD+ | F-Series 6.8L HDE | Cat Monitor Added |
| | | | | | | | |
| **F-59 (Step Van)** | 2013 | 2012 | Fed | PCEB-Sx | Non-OBD (EMD) | F-Series 6.8L HDE | OBD I / EMD Level |
| | 2013 | 2013 | 50S | PDEB-Sx | EMD+ | F-Series 6.8L HDE | Cat Monitor Added |
| | | | | | | | |
| **F-53 (Motorhome)** | 2013 | 2012 | Fed | PCEB-Mx | Non-OBD (EMD) | F-Series 6.8L HDE | OBD I / EMD Level |
| | 2013 | 2013 | 50S | PDEB-Mx | EMD+ | F-Series 6.8L HDE | Cat Monitor Added |
| | | | | | | | |
| **F-650** | 2012 | 2012 | Fed | PCFB-Ax | Non-OBD (EMD) | F-Series 6.8L HDE | OBD I / EMD Level |
| | 2013 | 2013 | 50S | PDFB-Ax | EMD+ | F-Series 6.8L HDE | Cat Monitor Added |

**Note:** HDE MY - Heavy Duty Engine Model Year (Some HD products have different engine certifications within the vehicle model year.)

## Calibration Release OBD Summary Chart

| | | E-Series 5.4L Group E-150/E-250/E-350 | | | F-Series 6.2L Group F-250/F-350 | | |
|---|---|---|---|---|---|---|---|
| **Code** | **Descriptions** | **2012 50S** | **2013 Fed** | **2013 50S** | **2012 50S** | **2013 Fed** | **2013 50S** |
| P0005 | Fuel Shutoff Valve A Control Circuit Open | 1 | 1 | 1 | 1 | 1 | 1 |
| P0090 | Fuel Pressure Regulator Circuit Open | 1 | 1 | 1 | 1 | 1 | 1 |
| P009B | Fuel Pressure Relief Control Circuit Open | 2 | 2 | 2 | 2 | 2 | 2 |
| P009E | Fuel Pressure Relief Control Performance Stuck Off | 2 | 2 | 2 | 2 | 2 | 2 |
| P009F | Fuel Pressure Relief Control Stuck On | 2 | 2 | 2 | 2 | 2 | 2 |
| P0148 | Fuel Delivery Error | 1 | 1 | 1 | 1 | 1 | 1 |
| P0171 | System Too Lean (Bank 1 and Bank 2) | 2 | 2 | 2 | 2 | 2 | 2 |
| P0174 | System Too Lean (Bank 1 and Bank 2) | 2 | 2 | 2 | 2 | 2 | 2 |
| P0182 | Fuel Temperature Sensor (A) Circuit Low | 2 | 2 | 2 | 2 | 2 | 2 |
| P0183 | Fuel Temperature Sensor (A) Circuit High | 2 | 2 | 2 | 2 | 2 | 2 |
| P0190 | Fuel Pressure Sensor A Circuit | 2 | 2 | 2 | 2 | 2 | 2 |
| P0192 | Fuel Pressure Sensor A Circuit Low | 2 | 2 | 2 | 2 | 2 | 2 |
| P0193 | Fuel Pressure Sensor A Circuit High | 2 | 2 | 2 | 2 | 2 | 2 |
| P025A | Fuel Pump Control Module Circuit Range/Performance A | 1 | 1 | 2 | 1 | 2 | 2 |
| P025B | Electronic Fuel Pump Relay Invalid Control Data | 1 | 1 | 2 | 1 | 2 | 2 |
| P027A | Fuel Pump Control Module Circuit Range/Performance B | 1 | 1 | 2 | 1 | 2 | 2 |
| P027B | Electronic Fuel Pump Relay Invalid Control Data | 1 | 1 | 2 | 1 | 2 | 2 |
| P03xx | Misfire | 2 | 2 | 2 | 2 | 2 | 2 |
| P0460 | Fuel Level Sender A Circuit | 2 | 2 | 2 | 2 | 2 | 2 |
| P0461 | Fuel Level Sender A Circuit Range/Performance | 2 | 2 | 2 | 2 | 2 | 2 |
| P0462 | Fuel Level Sender A Circuit Low | 2 | 2 | 2 | 2 | 2 | 2 |
| P0463 | Fuel Level Sender A Circuit High | 2 | 2 | 2 | 2 | 2 | 2 |
| P0627 | Fuel Pump A Control Circuit Open | 1 | 1 | 2 | 1 | 2 | 2 |
| P116E | Exceeded Maximum Pressure | 1 | 1 | 1 | 1 | 1 | 1 |
| P2195 | Heated Exhaust Gas Oxygen Sensor Stuck | 2 | 2 | 2 | 2 | 2 | 2 |
| P2197 | Heated Exhaust Gas Oxygen Sensor Stuck | 2 | 2 | 2 | 2 | 2 | 2 |
| P2632 | Fuel Pump B Control Circuit Open | 1 | 1 | 2 | 1 | 2 | 2 |
| P2665 | Supply Solenoid Circuit Fault | 1 | 1 | 1 | 1 | 1 | 1 |
| P26B5 | Fuel Shutoff Valve B Function Check | 1 | 1 | 1 | 1 | 1 | 1 |
| U0108 | Lost Communication with Alternative Fuel Control Module | 2 | 2 | 2 | 2 | 2 | 2 |
| U016C | Lost Communication with Fuel Pump Control Module B | 1 | 1 | 2 | 1 | 2 | 2 |
| U0309 | Alt Fuel Module-Wrong SRM | 2 | 2 | 2 | 2 | 2 | 2 |

| | |
|---|---|
| 0 | Code not present |
| 1 | DTC – non MIL |
| 2 | DTC – MIL (two trips) |

## Calibration Release OBD Summary Chart

| | | E-Series 6.8L HDE Group E-450 | | F-Series 6.8L HDE Group F-450/550/650/53/59 | |
|---|---|---|---|---|---|
| **Code** | **Descriptions** | **2012 50S** | **2013+ 50S** | **2012 50S** | **2013+ 50S** |
| P0005 | Fuel Shutoff Valve A Control Circuit Open | 1 | 1 | 1 | 1 |
| P0090 | Fuel Pressure Regulator Circuit Open | 1 | 1 | 1 | 1 |
| P009B | Fuel Pressure Relief Control Circuit Open | 1 | 2 | 2 | 2 |
| P009E | Fuel Pressure Relief Control Performance Stuck Off | 1 | 2 | 2 | 2 |
| P009F | Fuel Pressure Relief Control Stuck On | 0 | 0 | 0 | 0 |
| P0148 | Fuel Delivery Error | 1 | 1 | 1 | 1 |
| P0171 | System Too Lean (Bank 1 and Bank 2) | 2 | 2 | 2 | 2 |
| P0174 | System Too Lean (Bank 1 and Bank 2) | 2 | 2 | 2 | 2 |
| P0182 | Fuel Temperature Sensor (A) Circuit Low | 1 | 2 | 2 | 2 |
| P0183 | Fuel Temperature Sensor (A) Circuit High | 1 | 2 | 2 | 2 |
| P0190 | Fuel Pressure Sensor A Circuit | 1 | 2 | 2 | 2 |
| P0192 | Fuel Pressure Sensor A Circuit Low | 1 | 2 | 2 | 2 |
| P0193 | Fuel Pressure Sensor A Circuit High | 1 | 2 | 2 | 2 |
| P025A | Fuel Pump Control Module Circuit Range/Performance A | 1 | 1 | 1 | 1 |
| P025B | Electronic Fuel Pump Relay Invalid Control Data | 1 | 1 | 1 | 1 |
| P027A | Fuel Pump Control Module Circuit Range/Performance B | 1 | 1 | 1 | 1 |
| P027B | Electronic Fuel Pump Relay Invalid Control Data | 1 | 1 | 1 | 1 |
| P03xx | Misfire | 1 | 1 | 1 | 1 |
| P0460 | Fuel Level Sender A Circuit | 1 | 1 | 1 | 1 |
| P0461 | Fuel Level Sender A Circuit Range/Performance | 0 | 0 | 0 | 0 |
| P0462 | Fuel Level Sender A Circuit Low | 1 | 1 | 1 | 1 |
| P0463 | Fuel Level Sender A Circuit High | 1 | 1 | 1 | 1 |
| P0627 | Fuel Pump A Control Circuit Open | 1 | 1 | 1 | 1 |
| P116E | Exceeded Maximum Pressure | 1 | 1 | 1 | 1 |
| P2195 | Heated Exhaust Gas Oxygen Sensor Stuck | 2 | 2 | 2 | 2 |
| P2197 | Heated Exhaust Gas Oxygen Sensor Stuck | 2 | 2 | 2 | 2 |
| P2632 | Fuel Pump B Control Circuit Open | 1 | 1 | 1 | 1 |
| P2665 | Supply Solenoid Circuit Fault | 1 | 1 | 1 | 1 |
| P26B5 | Fuel Shutoff Valve B Function Check | 1 | 1 | 1 | 1 |
| U0108 | Lost Communication with Alternative Fuel Control Module | 2 | 2 | 2 | 2 |
| U016C | Lost Communication with Fuel Pump Control Module B | 1 | 1 | 1 | 1 |
| U0309 | Alt Fuel Module-Wrong SRM | 2 | 2 | 2 | 2 |

| | |
|---|---|
| 0 | Code not present |
| 1 | DTC – non MIL |
| 2 | DTC – MIL (two trips) |

## Flow Control Solenoid

### P0090 — Fuel Pressure Regulator Circuit Open

| | |
|---|---|
| **Description** | FCS circuit fault. SRM monitors FCS circuit for open and short circuit faults. |
| **Possible Causes** | • Short to voltage<br>• Water in the harness connector<br>• Open power circuit<br>• GND circuit<br>• Low battery voltage<br>• Corrosion<br>• Incorrect connections<br>• Damaged FCS coil<br>• Blown fuse |
| **Symptom** | Fuel pressure in the rail does not change when commanded. Extended fuel rail flush time. |
| **Diagnostic Aid** | Check the FRPCM and SRM electrical connector for damage, corrosion and water intrusion. |
| **Action** | Refer to the *Fuel Rail Pressure Control Module Electrical Check* procedure in *Diagnostic Tests and Procedures*. |

## Bleed Solenoid

### P009E — Fuel Pressure Relief Control Performance Stuck Off

| | |
|---|---|
| **Description** | Fuel rail failed to bleed. The PCM measures fuel rail pressure on key-up to determine if fuel rail has been properly bled. |
| **Possible Causes** | • BS did not open<br>• FRPCM check valve leaked<br>• FRPCM supply solenoid leaked<br>• Bleed port (bleed rate restrictor in outlet to VMV) clogged<br>• EVAP line kinked<br>• Blown fuse |
| **Symptom** | Fuel pressure present in the fuel rail after bleed event should have occurred; this may result in hard starts. |
| **Diagnostic Aid** | Check that FRPCM bleeds fuel from rail. Leaks to FRPCM can also trigger a fault. |
| **Action** | Refer to the *Fuel System Fails to Bleed* procedure in *Diagnostic Tests and Procedures*. |

### P009F — Fuel Pressure Relief Control Stuck On

| | |
|---|---|
| **Description** | Bleed solenoid stuck open. While the engine is running, the PCM seals the EVAP system and checks for a rise in pressure. If pressure in the EVAP system exceeds the threshold, a fault is set. |
| **Possible Causes** | • Short to GRD<br>• Armature stuck in post<br>• Solenoid seal compromised |
| **Symptom** | There is a potential for fuel odor. |
| **Diagnostic Aid** | — |
| **Action** | Refer to the *Fuel Rail Pressure Control Module Electrical Check* procedure in *Diagnostic Tests and Procedures*. |

### P009B — Fuel Pressure Relief Control Circuit Open

| | |
|---|---|
| **Description** | Bleed solenoid circuit fault. The SRM monitors bleed solenoid circuit for open and short circuit faults. |
| **Possible Causes** | • Short to voltage<br>• Water in the harness connector<br>• Open power circuit<br>• Open GND circuit<br>• Low battery voltage<br>• Corrosion<br>• Incorrect connections<br>• Damaged BS coil |
| **Symptom** | Fuel rail bleed system does not operate correctly. There is a potential for fuel odor or hard start. |
| **Diagnostic Aid** | Check the FRPCM and SRM electrical  for damage, corrosion and water intrusion. |
| **Action** | Refer to the *Fuel Rail Pressure Control Module Electrical Check* procedure in *Diagnostic Tests and Procedures*. |

## Tank Solenoid

### P0005 — Fuel Shutoff Valve A Control Circuit Open

| | |
|---|---|
| **Description** | TS circuit fault. The SRM monitors tank solenoid circuit for open and short circuit faults. |
| **Possible Causes** | • Short to voltage<br>• Water in the harness connector<br>• Open power circuit<br>• Open GND circuit<br>• Low battery voltage<br>• Corrosion<br>• Incorrect connections<br>• Damaged TS coil<br>• Blown fuse |
| **Symptom** | Vehicle does not start. The pumps run but no pressure builds in the fuel rail. |
| **Diagnostic Aid** | Check the FRPCM and SRM electrical connectors for damage, corrosion and water intrusion. |
| **Action** | Refer to the *Tank Solenoid Electrical Check* procedure in *Diagnostic Tests and Procedures*. |

# Fuel Rail Pressure Control Module Supply Solenoid and Wiring

## P26B5 — Fuel Shutoff Valve B Function Check

| | |
|---|---|
| **Description** | Fuel supply solenoid stuck. The SRM monitors fuel rail pressure before and after the solenoid was commanded open. If the pressure rise is below a threshold, the fault is set. |
| **Possible Causes** | • Electrical fault<br>• Damaged SS coil<br>• Damaged SS armature<br>• Excess flow valve tripped<br>• Tank solenoid stuck closed<br>• Tank manual valve closed<br>• Fuel pumps not powering on<br>• Blown fuse |
| **Symptom** | Vehicle does not start. The pumps run (or may not) but no pressure builds in the fuel rail. |
| **Diagnostic Aid** | Check the FRPCM and SRM electrical connectors for damage, corrosion and water intrusion. |
| **Action** | Refer to the *Engine Cranks, No Start* procedure in *Diagnostic Tests and Procedures*. |

## P2665 — Supply Solenoid Circuit Fault

| | |
|---|---|
| **Description** | FRPCM supply solenoid circuit fault. SRM monitors supply solenoid circuit for open and short circuit faults. |
| **Possible Causes** | • Short to voltage<br>• Water in the harness connector<br>• Open power circuit<br>• Open GND circuit<br>• Low battery voltage<br>• Corrosion<br>• Incorrect connections<br>• Damaged SS coil<br>• Blown fuse |
| **Symptom** | Vehicle does not start. The pumps run but no pressure builds in the fuel rail. |
| **Diagnostic Aid** | Check the FRPCM and SRM electrical connectors for damage, corrosion and water intrusion. |
| **Action** | Refer to the *Fuel Rail Pressure Control Module Electrical Check* procedure in *Diagnostic Tests and Procedures.* |

## SRM, CAN Bus Circuit Wiring

### U0108 — Lost Communication with Alternative Fuel Control Module

| | |
|---|---|
| **Description** | Lost communication with SRM. The PCM monitors CAN bus communication for missing messages from the SRM. If the messages are continuously missing, a fault is set. |
| **Possible Causes** | • Wiring between the SRM and PCM<br>• SRM lacks power<br>• Blown fuse |
| **Symptom** | Rough idle. |
| **Diagnostic Aid** | Check the FRPCM and SRM electrical connectors for damage, corrosion and water intrusion. Check for power at the SRM. |
| **Action** | Refer to the *Smart Relay Module Electrical Check* procedure in *Diagnostic Tests and Procedures*. |

### U0309 — Alternate Fuel Module-Wrong SRM

| | |
|---|---|
| **Description** | Alternate Fuel Module (SRM) is not broadcasting over vehicle communication link the expected SRM module identifier. A U0309 code should only be expected during initial build or during service replacement of the SRM module. |
| **Possible Causes** | • Incorrect SRM was installed into the vehicle for initial build or during service of the SRM<br>• Loss of CAN communications between the SRM and PCM |
| **Symptom** | • MIL light<br>• Fuel gage may not read full or empty correctly |
| **Diagnostic Aid** | • Verify to latest calibration<br>• Verify SRM part number is correct for vehicle type and tank<br>• Verify that no other DTCs are set related to CAN communications<br>• Inspect CAN harness for connection issues and integrity |
| **Action** | Replace SRM to correct type or fix any CAN communication DTCs or wiring/connection concerns. |

## Fuel System

### P0148 — Fuel Delivery Error

| | |
|---|---|
| **Description** | LPA system is operating in vapor space. At least one bank is lean at WOT. |
| **Possible Causes** | • Severely restricted fuel filter<br>• Severely restricted fuel supply line<br>• Damaged or worn fuel pump<br>• Damaged or contaminated MAF sensor<br>• Excess flow valve tripped<br>• TS or SS closed<br>• Tank manual shutoff valve not completely open |
| **Symptom** | Vehicle hesitation or stall condition. |
| **Diagnostic Aid** | — |
| **Action** | Refer to the *Engine Cranks, No Start* procedure in *Diagnostic Tests and Procedures*. |

### P116E — Maximum Pressure

| | |
|---|---|
| **Description** | Maximum injection pressure reached. The PCM monitors fuel rail pressure and battery voltage. Based on these measurements, the PCM adjusts fuel pump speed to stay below the maximum operating pressure of the injectors. |
| **Possible Causes** | • Operating the vehicle in high ambient conditions<br>• Vehicle operated in a low voltage condition |
| **Symptom** | Vehicle hesitation, stall, rough idle, misfire or no start. |
| **Diagnostic Aid** | The P116E code is meant as an indication that the fuel system was operated at the limits of the system. The customer may have experienced drive issues although the system is performing as expected. |
| **Action** | Refer to the *Maximum Pressure Check* procedure in *Diagnostic Tests and Procedures.* |

### P0171, P0174 — System Too Lean (Bank 1 and Bank 2)

| | |
|---|---|
| **Description** | Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for more descriptive information. |
| **Possible Causes** | • The LPA system was operated in the vapor region<br>• Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for a list of other causes. |
| **Symptom** | — |
| **Diagnostic Aid** | Verify that no LPA system faults are present and then follow the Ford service manual procedure. |
| **Action** | Refer to the *Fuel Pressure Drop Check* procedure in *Diagnostic Tests and Procedures*. |

### P03xx — Misfire

| | |
|---|---|
| **Description** | Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for more descriptive information. |
| **Possible Causes** | • The LPA system was operated in the vapor region<br>• Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for a list of other causes. |
| **Symptom** | — |
| **Diagnostic Aid** | Verify that no LPA system faults are present and then follow the Ford service manual procedure. |
| **Action** | Refer to the *Fuel Pressure Drop Check* procedure in *Diagnostic Tests and Procedures*. |

## Heated Exhaust Gas Oxygen Sensor

### P2195, P2197 — Heated Exhaust Gas Oxygen Sensor Stuck

| | |
|---|---|
| **Description** | Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for more descriptive information. |
| **Possible Causes** | • The LPA system was operated in the vapor region<br>• Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for a list of other causes. |
| **Symptom** | — |
| **Diagnostic Aid** | Verify that no LPA system faults are present and then follow the Ford service manual procedure. |
| **Action** | Refer to the *Fuel Pressure Drop Check* procedure in *Diagnostic Tests and Procedures.* |

## Electronic Fuel Pump Relay (A/B)

### U0109, U016C — Lost Communication with Fuel Pump Control Module A/B

| | |
|---|---|
| **Description** | The SRM repeats the signal from the second EFPR to the PCM over the CAN bus. The PCM monitors this communication. If there is a lack of communication for a long enough period of time, a fault is set. |
| **Possible Causes** | • Wire fault between the EFPR and SRM<br>• Wire fault between SRM and PCM<br>• No power to the EFPR<br>• SRM fault<br>• CAN bus fault<br>• Blown fuse<br>• Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for a list of other causes. |
| **Symptom** | — |
| **Diagnostic Aid** | — |
| **Action** | Refer to the *Fuel Pump Control Module Electrical Continuity Test* procedure and also the *Smart Relay Module Electrical Test* procedure in *Diagnostic Tests and Procedures*. |

### P025A, P027A — Fuel Pump Control Module Circuit Range/Performance

| | |
|---|---|
| **Description** | The SRM receives the output of the second fuel pump monitor line and repeats the output over the CAN bus to the PCM. The PCM monitors the commanded output versus the monitor's feedback. If the monitor is out-of-range, a fault is set. |
| **Possible Causes** | Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for a list of other causes. |
| **Symptom** | Poor starts, rough idle, hesitation/surge. |
| **Diagnostic Aid** | — |
| **Action** | Refer to the *Fuel Pump Control Module Electrical Continuity Test* procedure in *Diagnostic Tests and Procedures*. |

## Integrated Pressure Temperature Sensor

### P0182 — Fuel Temperature Sensor (A) Circuit Low

| | |
|---|---|
| **Description** | The SRM reads the IPTS and passes the voltage reading over the CAN to the PCM monitors the voltage as if the sensor were plugged into the vehicle. |
| **Possible Causes** | • CAN bus fault between the SRM and PCM<br>• Wiring fault between IPTS and SRM<br>• Short in harness<br>• VREF open or short<br>• Low ambient temperature operation<br>• Incorrect harness connection<br>• Damaged IPTS (or FTS)<br>• IPTS failure<br>• SRM failure |
| **Symptom** | — |
| **Diagnostic Aid** | Verify the fuel rail temperature PID value to determine open or short. |
| **Action** | Refer to the *Integrated Pressure Temperature Sensor Electrical Check* procedure in *Diagnostic Tests and Procedures*. |

### P0183 — Fuel Temperature Sensor (A) Circuit High

| | |
|---|---|
| **Description** | The SRM reads the IPTS and passes the voltage reading over the CAN bus to the PCM. The PCM monitors the voltage as if the sensor were plugged into the vehicle. |
| **Possible Causes** | • CAN bus fault between the SRM and PCM<br>• Wiring fault between IPTS and SRM<br>• Open circuit<br>• Open or short to voltage in harness<br>• Incorrect harness connection<br>• Damaged IPTS (FTS)<br>• IPTS failure<br>• SRM failure |
| **Symptom** | — |
| **Diagnostic Aid** | Verify the fuel rail temperature PID value to determine open or short. |
| **Action** | Refer to the *Integrated Pressure Temperature Sensor Electrical Check* procedure in *Diagnostic Tests and Procedures*. |

## P0190 — Fuel Pressure Sensor A Circuit

| | |
|---|---|
| **Description** | The SRM reads the IPTS and passes the voltage reading over the CAN bus to the PCM. The PCM monitors the voltage as if the sensor were plugged into the vehicle. |
| **Possible Causes** | • CAN bus fault between the SRM and PCM<br>• Wiring fault between IPTS and SRM<br>• VREF open in harness<br>• VREF open in sensor<br>• Vacuum leaks<br>• IPTS failure<br>• SRM failure |
| **Symptom** | — |
| **Diagnostic Aid** | VREF should be between 4–6 volts. |
| **Action** | Refer to the *Integrated Pressure Temperature Sensor Electrical Check* procedure in *Diagnostic Tests and Procedures*. |

## P0192 — Fuel Pressure Sensor A Circuit Low

| | |
|---|---|
| **Description** | The SRM reads the IPTS and passes the voltage reading over the CAN bus to the PCM. The PCM monitors the voltage as if the sensor were plugged into the vehicle. |
| **Possible Causes** | • CAN bus fault between the SRM and PCM<br>• Wiring fault between IPTS and SRM<br>• IPTS FRP signal short to SIG RTN or PWR GND<br>• Damaged IPTS (or FRP)<br>• IPTS failure<br>• SRM failure |
| **Symptom** | — |
| **Diagnostic Aid** | A FRP PID value during ignition ON, engine OFF, or ignition ON, engine running is less than 0.3 volt. This indicates a concern is present. |
| **Action** | Refer to the *Integrated Pressure Temperature Sensor Electrical Check* procedure in *Diagnostic Tests and Procedures*. |

## P0193 — Fuel Pressure Sensor A Circuit High

| | |
|---|---|
| **Description** | The SRM reads the IPTS and passes the voltage reading over the CAN bus to the PCM. The PCM monitors the voltage as if the sensor were plugged into the vehicle. |
| **Possible Causes** | • CAN bus fault between the SRM and PCM<br>• Wiring fault between IPTS and SRM<br>• IPTS FRP signal short to VREF or VPWR<br>• IPTS (or FRP) open signal<br>• Damaged IPTS (or FRP)<br>• IPTS failure<br>• SRM failure |
| **Symptom** | — |
| **Diagnostic Aid** | Verify the FRP PID value to determine open or short. |
| **Action** | Refer to the *Integrated Pressure Temperature Sensor Electrical Check* procedure in *Diagnostic Tests and Procedures*. |

# Fuel Level Sender

## P0460 — Fuel Level Sender A Circuit

| | |
|---|---|
| **Description** | Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for more descriptive information. |
| **Possible Causes** | Refer to the Ford service manual. Causes are the same except that communication is between the FLS and the SRM and not the IC. |
| **Symptom** | — |
| **Diagnostic Aid** | The SRM reads fuel level sender input and broadcasts it to the IC and PCM. |
| **Action** | Refer to the *Fuel Level Indication System Check* procedure in *Diagnostic Tests and Procedures*. |

## P0461 — Fuel Level Sender A Circuit Range/Performance

| | |
|---|---|
| **Description** | Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for more descriptive information. |
| **Possible Causes** | Refer to the Ford service manual. Causes are the same except that communication is between the sender and the SRM and not the IC. |
| **Symptom** | — |
| **Diagnostic Aid** | The SRM reads fuel level sender input and broadcasts it to the IC and PCM. |
| **Action** | Refer to the *Fuel Level Indication System Check* procedure in *Diagnostic Tests and Procedures*. |

## P0462 (P2067) — Fuel Level Sender A (B) Circuit Low

| | |
|---|---|
| **Description** | This DTC sets when the Fuel Level Gauge signal is electrically less than the minimum allowable sender value. |
| **Possible Causes** | • Fuel level sender wiring shorted to ground<br>• Damaged Fuel Level Sender<br>• Smart Relay Module |
| **Symptom** | P0462 — Fuel gauge may read empty all the time<br>P2067 — Fuel gauge will only show primary tank |
| **Diagnostic Aid** | Smart Relay Module (SRM) reads fuel level sender and broadcasts to the PCM and Instrument Cluster. |
| **Action** | Refer to the following tests located later in this manual.<br>• *SRM Electrical Test*<br>• *Fuel Level Sender Test*<br>• *Fuel Level Interface Module* |

## P0463 (P2068) — Fuel Level Sender A (B) Circuit High

| | |
|---|---|
| **Description** | This DTC sets when the Fuel Level Gauge signal is electrically less than the minimum allowable sender value. |
| **Possible Causes** | • Fuel level sender wiring is disconnected or shorted to above 5 volts<br>• Damaged Fuel Level Sender<br>• Smart Relay Module |
| **Symptom** | P0463 — Fuel gauge may read full all the time<br>P2068 — Fuel gauge will only show primary tank |
| **Diagnostic Aid** | Smart Relay Module (SRM) reads fuel level sender and broadcasts to the PCM and Instrument Cluster. |
| **Action** | Refer to the following tests located later in this manual.<br>• *SRM Electrical Test*<br>• *Fuel Level Sender Test*<br>• *Fuel Level Interface Module* |

## P25B1 — Fuel Level Sensor B Stuck

| | |
|---|---|
| **Description** | Failed transfer of fuel from secondary tank B to primary tank A. Failure code sets if a transfer is not detected by sender movement in 3 transfer attempts. |
| **Possible Causes** | Secondary tank transfer failure causes:<br>• Tank supply solenoid did not open<br>• Manual valve closed<br>• Excess flow valve trips on transfer attempts<br>• Blown fuse<br>• Electrical fault or relay failure that supplies the tank solenoid or pumps<br>• SRM hardware failure<br>• Sender arm stuck<br>• Sender signal out of range<br>• Fuel transfer line between secondary and primary tank kinked or plugged<br>• High differential of pressure when the primary tank greater than ~60 psi over secondary tank (typically caused by higher temperatures in the primary tank)<br>Primary tank transfer failure causes:<br>• Faulty transfer OPD connected to transfer line |
| **Symptom** | • Fuel indication is only based on primary tank sender<br>• Customer does not achieve expected driving range<br>• Short fuel fills (only adds fuel to primary tank)<br>• Cluster fuel gauge may indicate inconsistent behavior |
| **Diagnostic Aid** | Check all electrical connectors and voltage supply to the secondary tank valve and fuel pumps. Verify that the secondary tank sender voltages (or resistances) are in the expected range. Verify that no other primary or secondary tank out-of-range codes are set (P0462, P0463, P2067, P2068). |
| **Action** | Refer to the *Secondary Tank – Fuel Will Not Transfer Troubleshooting*. |

### Secondary Tank – Fuel Will Not Transfer

F-650 vehicles can be equipped with a unique ROUSH CleanTech liquid propane autogas storage system which includes two fuel tanks. The system operates as if it were just one large tank. A few key points about the system:

- The engine is always running from the driver's side tank. All fuel to the engine, and the excess fuel returning to the tank, is only connected to this tank.
- The passenger's side tank is used to store extra fuel only. When the driver's side tank fuel level drops, the system will activate fuel pumps in passenger's side tank to transfer fuel automatically.
- Both tanks are filled at the same time from the single fuel filler located on the driver's side. There is a ball valve on the fill line for the right-hand tank, which is used for periodic inspections only. It should always be open during normal operation in order to use the full system capacity.

The ROUSH CleanTech control system reads the usable fuel level in each tank and adds them together to provide a single reading for the instrument cluster. However, if the system detects a failure in the fuel transfer system which may interfere with the ability to transfer fuel, it will provide a reading based on the driver's side tank only. This ensures that the driver is warned before the vehicle runs out of fuel. If this occurs, the vehicle is fully usable, but should be serviced in order to restore full function and use of the full system fuel capacity.

The fuel transfer line from the passenger's side tank is connected to a dedicated overfill prevention device (OPD) on the driver's side tank. This is a safety device which ensures that even if there is a fault in the control system, it is not possible for the driver's side tank to overfill during transfers.

# DIAGNOSTIC TESTS AND PROCEDURES

## General Information

### Measuring Fuel Rail and Fuel Tank Pressure

**Measuring Fuel Tank Pressure** — Fuel tank pressure can be measured two ways: Refer to *Tools and Equipment, Special Tools* in the *2012 Ford E-150/250/350/450 or 2013 F-250/350 Liquid Propane Autogas Fuel System Service Manual Supplement* for more information regarding the tools required.

**Method 1** — Install a 0–500 psi (0–3447 kPa) fuel pressure gauge on the bleeder valve at the tank, or to the remote bleeder valve location. Open the valve to monitor the fuel tank pressure. Record the value.

**Method 2** — If a 0–500 psi (0–3447 kPa) fuel pressure gauge is not available, fuel rail pressure can be used to infer fuel tank pressure. Refer to M*ethod 1* of *Measuring Fuel Rail Pressure*. Monitor fuel rail pressure with the engine running. Turn the engine off and continue to monitor fuel rail pressure. When the pressure has stabilized, record the value as fuel tank pressure.

**Measuring Fuel Rail Pressure** — Fuel rail pressure can be measured two ways: Refer to *Tools and Equipment, Special Tools* in the *2012 Ford E-150/250/350/450 or 2013 F-250/350 Liquid Propane Autogas Fuel System Service Manual* for more information regarding the tools required.

**Method 1** — Using the OBD-II scan tool, read the fuel rail pressure PID. If using the Ford IDS tool, it will be necessary to select the tool box tab, then select Powertrain near bottom of selection, OBD Test Modes, Mode 1 Powertrain Data. Then locate and select FRP (pressure) from PID selection table.

**Method 2** — Empty the fuel rails and fuel lines. Refer to the *Fuel Line Purging Procedure* in the *2012 Ford E-150/250/350/450 or 2013 F-250/350 Liquid Propane Autogas Fuel System Service Manual Supplement* for more information. Using the Jiffy-Tite disconnect tool, disconnect the fuel supply line at the rear of the RH fuel rail. Install the ROUSH service port adapter between the fuel line and the fuel rail. Attach 0–500 psi (0–3447 kPa) fuel pressure gauge to the service port on the adapter. Record the value.

**Expected Fuel Tank Pressure —** On a tank at ambient temperature conditions, the following pressures can be expected:

| Temperature (°F) | Pressure (psi) | | |
|---|---|---|---|
| | Min. | Nominal | Max. |
| 0 | 15 | 25 | 35 |
| 5 | 19 | 29 | 39 |
| 10 | 23 | 33 | 43 |
| 15 | 28 | 38 | 48 |
| 20 | 33 | 43 | 53 |
| 25 | 38 | 48 | 58 |
| 30 | 43 | 53 | 63 |
| 35 | 49 | 59 | 69 |
| 40 | 55 | 65 | 75 |
| 45 | 62 | 72 | 82 |
| 50 | 69 | 79 | 89 |
| 55 | 77 | 87 | 97 |
| 60 | 84 | 94 | 104 |
| 65 | 93 | 103 | 113 |
| 70 | 102 | 112 | 122 |
| 75 | 111 | 121 | 131 |
| 80 | 121 | 131 | 141 |
| 85 | 131 | 141 | 151 |
| 90 | 142 | 152 | 162 |
| 95 | 153 | 163 | 173 |
| 100 | 165 | 175 | 185 |
| 105 | 178 | 188 | 198 |
| 110 | 191 | 201 | 211 |
| 115 | 205 | 215 | 225 |
| 120 | 219 | 229 | 239 |

**NOTE**

On vehicles that have been operated for extended periods of time, the tank (fuel) can be much warmer and so higher pressures are to be expected.

**Expected Fuel Rail Pressure** — Under normal operating conditions, the fuel pump has two operating speeds. The pump operates in low speed mode at idle and during moderate fuel flow/part throttle driving. Once a fuel demand threshold is met, typically during wide open throttle (WOT) operation, the pump is switched to high speed. The pump is also operated at high speed during the pre-start flush sequence.

The fuel pressure controls are designed to keep the rails at a certain pressure over tank pressure, therefore, it is important to measure tank pressure prior to collecting fuel rail pressure data. For example, if the fuel tank is at 150 psi (1034 kPa) and pressure in the rail is measured at 200 psi (1379 kPa), the rail is running at 50 psi (345 kPa) over tank.

| Condition | Pump Speed | Pressure Over Tank |
|---|---|---|
| Engine Off | Off | <10 |
| Idle | Low | >30 |
| Part Throttle | Low | <25 |
| Part Throttle | High | >25 |
| WOT | High | >25 |

**NOTE**

Under extreme operating conditions, there is a third pump mode. In the event that the fuel system has degraded and the sensor detects vapor, or if the fuel rail pressure is approaching the limit of the fuel system, the pump runs in a variable speed mode, controlling to a target pressure. In this mode there is no predicted rise over tank pressure. The fuel pump will adjust the pressure to maintain a required operating pressure. This condition will likely result in a P116E or P0148 code.

## No Fill

| Step | Procedure | Action |
|---|---|---|
| 1 | **Inspect vehicle to check for kinked fill lines.**<br>Are fill lines kinked? | **Yes** — Replaced kinked fill lines.<br>**No** — Go to Step 2. |
| 2 | **Determine the location of the overflow protection device (OPD).**<br>Is the OPD located in the end cap of the fuel tank? | **Yes** — Go to Step 3.<br>**No** — Go to Step 6. |
| 3 | **Check the fuel gauge in the instrument cluster.**<br>Is the gauge indicating less than 1/4 full? | **Yes** — Go to Step 4.<br>**No** — Go to Step 6. |
| 4 | **Check to see if the OPD is being activated.**<br>**NOTE**<br>Fuel splashing off the sides of the empty tank could be activating the OPD float and shutting off the fuel fill line.<br>a. Loosen the fuel fill line at the fill valve or at the inlet to the fuel filter to relieve any pressure in the fill line and release the OPD valve. Retighten the fill line.<br>b. Install a fuel fill pressure tester on the fill valve and close the ball valve.<br>c. Connect the fuel dispensing nozzle to the pressure tester and turn on the pump. Slightly open the ball valve to slowly add approximately 10 gal (38 L) of fuel.<br>d. Did the tank fill? | **Yes** — Go to Step 5.<br>**No** — Go to Step 6. |
| 5 | **Remove the fuel fill pressure tester and attempt to fill the vehicle fuel tank to full 80% capacity.**<br>Does the vehicle fuel tank fill to capacity? | **Yes** — Diagnostic is complete.<br>**No** — Go to Step 6. |
| 6 | **Check the fuel gauge in the instrument cluster.**<br>Is the gauge indicating more than 1/2 full? | **Yes** — Go to Step 7.<br>**No** — Go to Step 11. |
| 7 | **Reverse direction of vehicle at the pump and try to fill the vehicle.**<br>Does the vehicle fuel tank fill? | **Yes** — Vehicle not on level ground. Diagnostic is complete.<br>**No** — Drive vehicle until fuel gauge indicates less than 1/2 full and go to Step 8. |

| Step | Procedure | Action |
|---|---|---|
| 8 | **Attempt to fill the vehicle fuel tank.**<br>Does the fuel tank fill? | **Yes** — Go to Step 9.<br>**No** — Go to Step 11. |
| 9 | **Open bleeder valve.**<br>Does liquid fuel vent? | **Yes** — Go to Step 10.<br>**No** — Go to Step 12. |
| 10 | **Check fuel gauge.**<br>Does fuel gauge read full? | **Yes** — Diagnostic complete.<br>**No** — Refer to *Fuel Level Indication Check*. |
| 11 | **Check for sufficient fill station pressure.**<br>a. Connect pressure gauge service tool to the fuel tank bleeder valve and record pressure.<br>b. Using a fuel fill pressure tester installed on the fill valve, attempt to fill the vehicle.<br>c. With the dispensing pump on and dispensing nozzle open, measure and record fill station pump pressure.<br>d. Is fill station pump pressure at least 20 psi (138 kPa) greater than tank pressure? | **Yes** — Go to Step 12.<br>**No** — Fill station may not be providing enough pressure to fill. Go to Step 19. |
| 12 | **Check body side fuel fill valve; it may be stuck closed.**<br>a. Loosen the fuel fill line connection at the fill valve or at the inlet to the fuel filter to relieve any pressure in the fill line.<br>b. Attempt to push open the piston in the fill valve to determine if it is stuck closed.<br>c. Is the fill valve piston stuck closed? | **Yes** — Replace body-side fill valve and go to Step 13.<br>**No** — Replace filter in the fuel fill line and go to Step 15. |
| 13 | **Attempt to fill the vehicle fuel tank.**<br>Does the fuel tank fill? | **Yes** — Diagnostic is complete.<br>**No** — Go to Step 14. |
| 14 | **Replace the filter in the fuel fill line and then attempt to fill the vehicle fuel tank.**<br>Does the vehicle fuel tank fill? | **Yes** — Diagnostic is complete.<br>**No** — Go to Step 16. |
| 15 | **Attempt to fill the vehicle fuel tank.**<br>Does the fuel tank fill? | **Yes** — Diagnostic is complete.<br>**No** — Go to Step 16. |
| 16 | **Replace the OPD valve in the vehicle fuel tank.**<br>Is the OPD valve located in the end cap of the fuel tank? | **Yes** — Go to Step 17.<br>**No** — Go to Step 18. |
| 17 | **Attempt to fill the vehicle fuel tank as follows:**<br>**NOTE**<br>When filling a new tank that has the OPD valve mounted in the end cap of the fuel tank, fuel splashing off the sides of the empty tank could be activating the OPD float and shutting off the fuel fill line.<br>a. Install a fuel fill pressure tester on the fill valve and close the ball valve.<br>b. Connect the fuel dispensing nozzle to the pressure tester and turn on the pump. Slightly open the ball valve to slowly add approximately 10 gal (38 L) of fuel.<br>c. Remove the fuel fill pressure tester.<br>d. Attempt to fill the remaining tank volume (to 80% full capacity) at full flow from the dispensing nozzle.<br>e. Did the tank fill? | **Yes** — Diagnostic is complete.<br>**No** — Call ROUSH CleanTech Customer Service at 800-597-6874. |
| 18 | **Attempt to fill the vehicle fuel tank.**<br>Does the fuel tank fill? | **Yes** — Diagnostic is complete.<br>**No** — Call ROUSH CleanTech Customer Service at 800-597-6874. |

| Step | Procedure | Action |
|---|---|---|
| 19 | **Fill station is not providing enough pressure to fill.**<br>a. Using the tables provided at the front of this section, determine expected propane tank pressure based on ambient temperature.<br>b. Is the vehicle fuel tank pressure greater than 20 psi (138 kPa) over the nominal expected pressure? | **Yes** — Go to Step 20.<br>**No** — Locate a dispensing facility with pump output capacity in excess of 100 psi (689 kPa) (preferably an Auto Gas-type facility). Then, go to Step 12. |
| 20 | **Vehicle fuel tank is at a higher pressure.**<br>a. Higher pressure is likely caused by heavy vehicle usage heating the fuel.<br>b. Allow the vehicle (fuel tank) to cool and then recheck pressure in the fuel tank. | When tank pressure is within 10 psi (69 kPa) of expected tank pressure, go to Step 21. |
| 21 | **Measure and compare vehicle fuel tank and fill station pressures.**<br>a. Connect a pressure gauge service tool to the fuel tank bleeder valve and record fuel tank pressure.<br>b. Using a fuel fill pressure tester installed on the fill valve, attempt to fill the vehicle.<br>c. With the dispensing pump on and dispensing nozzle open, measure and record fill station pump pressure.<br>d. Is fill station pump pressure at least 20 psi (138 kPa) greater than fuel tank pressure? | **Yes** — Go to Step 22.<br>**No** — Fill station is not providing enough pressure to fill vehicle tank. Go to Step 22.<br>Locate a dispensing facility with pump output capacity in excess of 100 psi (689 kPa) (preferably an Auto Gas-type facility). |
| 22 | **Attempt to fill the vehicle fuel tank.**<br>Does the fuel tank fill? | **Yes** — Diagnostic is complete.<br>**No** — Go to Step 12. |

## Slow Fill

| Step | Procedure | Action |
|---|---|---|
| 1 | **Inspect vehicle to check for kinked fill lines.**<br>Are fill lines kinked? | **Yes** — Replaced kinked fill lines.<br>**No** — Go to Step 2. |
| 2 | **Determine flow rate at which the vehicle fuel system fills.**<br>a. Time the fill station pump for 10 seconds and record the number of gallons dispensed.<br>b. Multiply the gallons dispensed by six to determine the flow rate in gallons per minute.<br>c. Is the fill station pump flow rate at least 6 gal (23 L) per minute? | **Yes** — System fill rate is OK; diagnostic is complete.<br>**No** — Fill station is not providing enough pressure to fill vehicle tank. Go to Step 3. |
| 3 | **Measure and compare vehicle fuel tank and fill station pressures.**<br>a. Connect a pressure gauge service tool to the fuel tank bleeder valve and record fuel tank pressure.<br>b. Using a fuel fill pressure tester installed on the fill valve, attempt to fill the vehicle.<br>c. With the dispensing pump on and dispensing nozzle open, measure and record fill station pump pressure.<br>d. Is fill station pump pressure at least 50 psi (345 kPa) greater than fuel tank pressure? | **Yes** — Go to Step 4.<br>**No** — Fill station is not providing enough pressure to fill vehicle tank. Go to Step 11. |
| 4 | **Check fuel fill valve; it may not be opening completely.**<br>a. Loosen the fuel fill line connection at the fill valve or at the inlet to the fuel filter to relieve any pressure in the fill line.<br>b. Attempt to push open the piston in the fill valve to determine if it is opening completely. Piston should travel 1/4 inch.<br>c. Is the fill valve piston opening completely? | **Yes** — Replace the filter in the fuel fill line and then go to Step 7.<br>**No** — Replace the fuel fill valve and then go to Step 5. |
| 5 | **Attempt to fill the vehicle fuel tank.**<br>Does the fuel tank fill at greater than six gal (23 L) per minute? | **Yes** — Diagnostic is complete.<br>**No** — Go to Step 6. |

| Step | Procedure | Action |
|---|---|---|
| 6 | **Replace the filter in the fuel fill line.**<br>Does the vehicle fuel tank fill at greater than six gal (23 L) per minute? | **Yes** — Diagnostic is complete.<br>**No** — Go to Step 7. |
| 7 | **Attempt to fill the vehicle fuel tank.**<br>Does the fuel tank fill at greater than six gal (23 L) per minute? | **Yes** — Diagnostic is complete.<br>**No** — Go to Step 8. |
| 8 | **Replace the overfill protection device (OPD) valve in the vehicle fuel tank.**<br>Is the OPD valve located in the end cap of the fuel tank? | **Yes** — Go to Step 9.<br>**No** — Go to Step 10. |
| 9 | **Attempt to fill the vehicle fuel tank as follows:**<br>**NOTE**<br>When filling a new tank that has the OPD valve mounted in the end cap, fuel splashing off the sides of the empty tank could be activating the OPD float and shutting off the fuel fill line.<br>a. Install a fuel fill pressure tester on the fill valve and close the ball valve.<br>b. Connect the fuel dispensing nozzle to the pressure tester and turn on the pump. Slightly open the ball valve to slowly add approximately 10 gal (38 L) of fuel.<br>c. Remove the fuel fill pressure tester.<br>d. Attempt to fill the remaining tank volume (to 80% full capacity) at full flow from the dispensing nozzle.<br>a. Did the tank fill? | **Yes** — Diagnostic is complete.<br>**No** — Call ROUSH CleanTech Customer Service at 800-597-6874. |
| 10 | **Attempt to fill the vehicle fuel tank.**<br>Does the fuel tank fill at greater than six gal (23 L) per minute? | **Yes** — Diagnostic is complete.<br>**No** — Call ROUSH CleanTech Customer Service at 800-597-6874. |
| 11 | **Fill station is not providing enough pressure to fill.**<br>a. Using the tables provided at the front of this section, determine expected propane tank pressure based on ambient temperature.<br>b. Is the vehicle fuel tank pressure greater than 20 psi (38 kPa) over the nominal expected pressure? | **Yes** — Go to Step 12.<br>**No** — Locate a dispensing facility with pump output capacity in excess of 100 psi (689 kPa) (preferably an Auto Gas-type facility). Then, go to Step 2. |
| 12 | **Vehicle fuel tank is at a higher pressure.**<br>a. Higher pressure is likely caused by heavy vehicle usage heating the fuel.<br>b. Allow the vehicle (fuel tank) to cool and then recheck pressure in the fuel tank. | When tank pressure is within 10 psi (69 kPa) of expected tank pressure, go to Step 13. |
| 13 | **Measure and compare vehicle fuel tank and fill station pressures.**<br>a. Connect a pressure gauge service tool to the fuel tank bleeder valve and record fuel tank pressure.<br>b. Using a fuel fill pressure tester installed on the fuel fill valve, attempt to fill the vehicle.<br>c. With the dispensing pump on and dispensing nozzle open, measure and record fill station pump pressure.<br>d. Is fill station pump pressure at least 50 psi (345 kPa) greater than fuel tank pressure? | **Yes** — Go to Step 14.<br>**No** — Fill station is not providing enough pressure to fill vehicle tank. Go to Step 14.<br>Locate a dispensing facility with pump output capacity in excess of 100 psi (689 kPa) (preferably an Auto Gas-type facility). |
| 14 | **Attempt to fill the vehicle fuel tank.**<br>Does the fuel tank fill at greater than six gal (23 L) per minute? | **Yes** — Diagnostic is complete.<br>**No** — Go to Step 4. |

## Over Fill

| Step | Procedure | Action |
|---|---|---|
| 1 | **Suspect overfill because fuel fill volumes achieved during refueling exceed the rated fuel capacity or excessive vehicle range between refueling.**<br>a. Check the fuel gauge.<br>b. Is the gauge reading below 1/2 tank? | **Yes** — Go to Step 2.<br>**No** — Drive vehicle until gauge reads below 1/4 tank. |
| 2 | **Open bleeder valve located on the tank or remotely mounted on the vehicle.**<br>a. Listen at valve to verify propane vapor is venting.<br>b. Is propane vapor venting? | **Yes** — Go to Step 3.<br>**No** — Bleeder valve is not functioning properly. Replace the valve. |
| 3 | **Park the vehicle at the refueling station.**<br>a. Check to determine if the vehicle is level using the vehicle frame as reference.<br>b. Does the vehicle sit level? | **Yes** — Go to Step 4.<br>**No** — Using a jack, raise the vehicle to obtain a level condition. Then, go to Step 4. |
| 4 | **Locate the American Society of Mechanical Engineers (ASME) inspection plate on the fuel tank.**<br>a. Note the tank water capacity listed on the plate.<br>b. Multiply the listed capacity by 0.05 (5%) and record the value. | With the value recorded, go to Step 5. |
| 5 | **Refuel the vehicle as follows:**<br>**NOTE**<br>If the key is on during refueling, it will take the fuel level gauge in the instrument cluster longer to register full.<br>a. Verify that the ignition is in the OFF position.<br>b. Install the fuel fill pressure tester on the fill valve and close the ball valve.<br>c. Connect the fuel dispensing nozzle to the pressure tester. Verify that the bleeder valve is open.<br>d. With the bleeder valve open, turn on the pump. Open the ball valve slightly to very slowly refuel the vehicle.<br>e. While refueling, observe the bleeder valve for fuel discharge.<br>f. Stop filling when a solid stream of liquid fuel flows from the bleeder valve or the dispensing pump stops automatically.<br>g. Did a solid stream of liquid flow from the bleeder valve? | **Yes** — Record the volume of fuel dispensed and then go to Step 6.<br>**No** — Go to Step 7. |
| 6 | **Resume filling until the dispensing pump stops automatically.**<br>a. Record the total volume of fuel dispensed and subtract the amount from the volume recorded in Step 5.<br>b. Is the additional amount of fuel dispensed less than 5% of the tank water capacity determined in Step 4? | **Yes** — Tank does not overfill. Diagnostic is complete.<br>**No** — Tank is overfilling. Replace the OPD fill valve in the fuel tank; then, go to Step 8. |
| 7 | **The dispensing pump stopped automatically and a liquid fuel stream was not observed flowing from bleeder valve.** | Tank does not overfill. Diagnostic is complete. |

| Step | Procedure | Action |
|---|---|---|
| 8 | **Refuel the vehicle as follows:**<br>**NOTE**<br>If the key is ON during refueling, it will take the fuel level gauge in the instrument cluster longer to register full.<br>a. Verify that the ignition is in the OFF position.<br>b. Install the fuel fill pressure tester on the fill valve and close the ball valve.<br>c. Connect the fuel dispensing nozzle to the pressure tester. Verify that the bleeder valve is OPEN.<br>d. With the bleeder valve open, turn ON the pump. Open the ball valve slightly to very slowly to refuel the vehicle.<br>e. While refueling, observe the bleeder valve for fuel discharge.<br>f. Stop filling when a solid stream of liquid fuel flows from the bleeder valve or the dispensing pump stops automatically.<br>g. Did a solid stream of liquid flow from the bleeder valve? | **Yes** — Record the volume of fuel dispensed and then go to Step 9.<br>**No** — Go to Step 7. |
| 9 | **Resume filling until the dispensing pump stops automatically.**<br>a. Record the volume of fuel dispensed and subtract the amount from the volume recorded in Step 8.<br>b. Is the additional amount of fuel dispensed less than 5% of the tank water capacity determined in Step 4? | **Yes** — Tank does not overfill. Diagnostic is complete.<br>**No** — Tank is overfilling. Replace the fuel tank assembly. |

## Engine Does Not Crank

| Step | Procedure | Action |
|---|---|---|
| 1 | **Is battery voltage above 10 volts?** | **Yes** — Go to Step 2.<br>**No** — Determine cause of low battery voltage. |
| 2 | **Verify that the smart relay module (SRM) has communication.**<br>Can fuel rail pressure and temperature be read with a scan tool? | **Yes** — Go to Step 3.<br>**No** — Go to the *Smart Relay Module Electrical Test* procedure. |
| 3 | **Refer to the *Ford Powertrain Control/Emission Diagnosis Service Manual*.**<br>Is the problem corrected? | **Yes** — Diagnostic is complete.<br>**No** — Call ROUSH CleanTech Customer Service at 800-597-6874. |

## Engine Cranks, No Start

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

| Step | Procedure | Action |
|---|---|---|
| 1 | **Verify the following:**<br>a. Is there fuel in the tank of at least 1/8 tank or more? (add fuel if necessary).<br>b. Is the tank supply manual shutoff valve fully open?<br>c. Is battery voltage above 10 volts? | **Yes** — Go to Step 2.<br>**No** — Correct fault and retry. |
| 2 | **Check for diagnostic trouble codes (DTC).**<br>Are any codes present? | **Yes** — Go to Step 3.<br>**No** — Go to Step 4. |
| 3 | **Is the DTC identified on the ROUSH LPA DTC list?** | **Yes**— Refer to *Diagnostic Trouble Code List*.<br>**No** — Refer to Ford service manual DTC chart. |
| 4 | **Check fuel pressure.**<br>a. Measure and record fuel rail and fuel tank pressure, Key ON Engine OFF (KOEO).<br>b. While monitoring fuel pressure, attempt to start engine.<br>c. Record the highest pressure observed.<br>d. Does fuel pressure rise 25 psi (172 kPa) before engine crank? | **Yes** — Go to Step 11.<br>**No** — Go to Step 5. |
| 5 | **Check fuel pump operation.**<br>a. Using a current clamp, check current draw on both fuel pump power wires at the fuel tank. Refer to *In-Tank Harness* for correct circuits.<br>b. Turn ignition switch to START position and release. Vehicle will start the flush cycle and pumps should be running. Check current draw. A minimum of 2 amps should be recorded on both fuel pump circuits.<br>c. Do fuel pumps draw current? | **Yes** — Go to Step 6.<br>**No** — If both circuits are showing no current, check the OEM fuel pump (FP) fuse. If only one fuel pump circuit shows current, check the ROUSH CleanTech fuel pump fuse. (See ROUSH CleanTech fuse box for location.)<br>If both fuel pump fuses (OEM and ROUSH CleanTech) are good, go to Step 10. |
| 6 | **Check excess flow valve (XFV).**<br>a. Turn ignition key to the OFF position.<br>b. Close the manual shutoff valve on tank.<br>c. Wait 1 minute and then slowly open manual shutoff valve.<br>d. Measure and record fuel pressure, using a scan tool, at integrated pressure temperature sensor (IPTS).<br>e. Is problem resolved? | **Yes** — Go to Step 11.<br>**No** — Go to Step 7. |
| 7 | **Check ROUSH fuel pump (FP) fuse.**<br>Is fuse intact and OK? | **Yes** — Go to Step 8.<br>**No** — Determine the cause of the short and repair; replace the fuse. Diagnostic is complete. |
| 8 | **Check the tank solenoid (TS) and supply solenoid (SS) fuses.**<br>a. Locate the TS fuse (E3-E4) and check its condition.<br>b. Locate the SS fuse (F1-F2) and check its condition.<br>c. Are the fuses blown? | **Yes** — Determine the cause of the short and repair; replace the fuse.<br>**No** — Go to Step 9. |

| Step | Procedure | Action |
|---|---|---|
| 9 | **Verify that there is power and proper grounding at the tank solenoid (TS) and supply solenoid (SS) wiring circuits.**<br>a. Check for +12 volts at the TS and SS connectors. Refer to the *Tank Solenoid Electrical Check* procedure.<br>b. Is +12 volts present at the TS connector?<br>c. Is +12 volts present at the SS connector? | **Yes** — Voltage present at SS, replace FRPCM. Voltage present at TS, replace fuel supply valve assembly.<br>**No** — Check for an open(s) in the wiring circuits and repair. Diagnostic is complete. |
| 10 | **Verify that there is power and proper grounding in the wiring circuit to the tank.**<br>a. Check for +12 volts at the fuel pump 1 (FP1) and fuel pump 2 (FP2) connectors. Refer to the *Fuel Pump Electrical Check* procedure.<br>b. Is +12 volts present at the FP1 connector?<br>c. Is +12 volts present at the FP2 connector? | **Yes** — Go to Step 12.<br>**No** — Check for an open(s) in the wiring circuits and repair. |
| 11 | **Integrated Pressure Temperature Sensor Rationality**<br>Does temperature and pressure make sense to verification procedure? | **Yes** — Refer to the *Integrated Pressure Temperature Sensor Electrical Check.*<br>**No** — Verify that wiring in circuit is OK. Refer to the *Integrated Pressure Temperature Sensor Electrical Check* procedure. If not, repair wiring. If OK, replace sensor. |
| 12 | **Check wiring.**<br>a. Drain the propane from the fuel tank. Refer to the *Fuel Tank Draining Procedure* in the appropriate *ROUSH CleanTech Service Manual* for more information.<br>b. Remove tank service cover.<br>c. Check for open or short circuits on tank pass-through harness.<br>d. Is a wiring problem present? | **Yes** — Replace harness.<br>**No** — Go to Step 13. |
| 13 | **Check fuel hoses and quick-connect fittings.**<br>• Are in-tank fuel hoses and quick-connect fittings connected and in good condition? | **Yes** — Replace fuel pump assembly.<br>**No** — Replace hose assemblies as needed. |

## Engine Stumble, Stall, Rough Idle

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

| Step | Procedure | Action |
|---|---|---|
| 1 | **Verify the following:**<br>a. Is there fuel in the tank of at least 1/8 tank or more? (Add fuel if necessary.)<br>b. Is the tank supply manual shutoff valve fully open?<br>c. Is battery voltage above 11 volts with engine running? | **Yes** — Go to Step 2.<br>**No** — Correct the fault and retry. |
| 2 | **Check for diagnostic trouble codes (DTCs).**<br>Are any codes present? | **Yes** — Go to Step 3.<br>**No** — Go to Step 4. |
| 3 | **Identify the DTC.**<br>a. Is the DTC covered in the ROUSH CleanTech DTC listing for LPA-fueled vehicles?<br>b. Correct all DTCs before continuing. | **Yes** — Refer to ROUSH CleanTech *Diagnostic Trouble Code List*.<br>**No** — Refer to the appropriate *Ford Powertrain Control/Emissions Diagnosis Service Manual* at www.motorcraft.com. |
| 4 | **Does the problem occur only after cold start?** | **Yes** — Go to Step 6.<br>**No** — Go to Step 5. |
| 5 | **Determine fuel pressure.**<br>a. Measure tank pressure with Key ON Engine OFF (KOEO).<br>b. Measure fuel rail pressure with Key ON Engine Running (KOER).<br>c. Subtract the KOEO pressure from the KOER pressure to obtain the difference. Compare to the chart in *Expected Fuel Rail Pressure*.<br>d. Is the resulting fuel pressure reading within the expected range? | **Yes** — Go to Step 7.<br>**No** — Go to Step 6. |
| 6 | **Determine if the excess flow valve (XFV) is tripped.**<br>a. Turn OFF the engine.<br>b. Wait one minute and then restart the engine.<br>c. Is the fault condition resolved? | **Yes** — Refer to the *Excess Flow Valve Check* procedure.<br>**No** — Go to Step 7. |
| 7 | **Check fuel pump operation.**<br>a. Using a current clamp, check current draw on both fuel pump power wires at the fuel tank. Refer to *In-Tank Harness* for correct circuits.<br>b. Turn ignition switch to START position and release. Vehicle will start the flush cycle and pumps should be running. Check current draw. A minimum of 2 amps should be recorded on both fuel pump circuits.<br>c. Do fuel pumps draw current? | **Yes** — Go to Step 11.<br>**No** — If both circuits are showing no current, check the OEM fuel pump (FP) fuse. If only one fuel pump circuit shows current, check the ROUSH CleanTech fuel pump fuse. (See ROUSH CleanTech fuse box for location.)<br>If both fuel pump fuses (OEM and ROUSH CleanTech) are good, go to Step 8. |
| 8 | **Verify that there is power and proper grounding in the wiring circuit to the tank.**<br>a. Check for +12 volts at the fuel pump 1 (FP1) and fuel pump 2 (FP2) connectors. Refer to the *Fuel Rail Pressure Control Module Electrical Check* procedure.<br>b. Is +12 volts present at the FP1 connector?<br>c. Is +12 volts present at the FP2 connector? | **Yes** — Go to Step 9.<br>**No** — Check for an open/short in the wiring circuit and repair. |

| Step | Procedure | Action |
|---|---|---|
| 9 | **Check wiring.**<br>a. Drain the propane from the fuel tank. Refer to the *Fuel Tank Draining Procedure* in the appropriate *ROUSH CleanTech Service Manual* for more information.<br>b. Remove tank service cover.<br>c. Check for open or short circuits on tank pass-through harness.<br>d. Is a wiring problem present? | **Yes** — Replace harness.<br>**No** — Go to Step 10. |
| 10 | **Check fuel hoses and quick-connect fittings.**<br>• Are in-tank fuel hoses and quick-connect fittings connected and in good condition? | **Yes** — Replace fuel pump assembly.<br>**No** — Replace hose assemblies as needed. |
| 11 | **Integrated Pressure Temperature Sensor Rationality**<br>Does temperature and pressure make sense to verification? Refer to the *Integrated Pressure Temperature Sensor Electrical Check* procedure. | **Yes** — Go to Step 12.<br>**No** — Verify that wiring in circuit is OK. If not, repair wiring. If OK, replace sensor. |
| 12 | Refer to the appropriate *Ford Powertrain Control/Emissions Diagnosis Service Manual* at www.motorcraft.com. | — |

## Excess Flow Valve Check

The excess flow valve (XFV) is designed to restrict fuel exiting the tank if the pump is energized while the fuel lines are not connected to the fuel tank. Under normal circumstances, the XFV should not trip. The XFV will reset itself after the fuel pumps have been off for about one minute.

It is common to trip the XFV after the fuel lines have been serviced and contain no pressure. If the XFV trips, turn the vehicle off, wait one minute, and restart. This may take more than one attempt.

If the fuel lines have not been serviced recently and the problem persists, there may be a leak in the supply side fuel line. If the problem is only present after the vehicle has been sitting for a length of time, but not present during a short soak, or there is a propane odor when the vehicle is running, refer to the *Fuel Line Leak Detection* procedure.

| Step | Procedure | Action |
|---|---|---|
| 1 | **Verify fuel supply line pressure prior to cranking engine.**<br>a. Read fuel rail pressure and tank pressure.<br>b. Energize bleed solenoid until rail pressure is at least 50 psi (345 kPa) below tank pressure. If rail is bled, skip to Step D.<br>c. Let pressure stabilize for 1 minute.<br>d. Open the supply solenoid.<br>e. Read fuel rail pressure and tank pressure.<br>f. Does fuel rail pressure jump to tank pressure? | **Yes** — Check is OK.<br>**No** — Repair the leak in the fuel supply line. |

## Maximum Pressure Check

The LPA system operates over a wide range of pressures depending on ambient temperature, driving mode, etc. When the vehicle is subjected to a severe drive cycle in high ambient temperatures, the fuel rail pressure can rise to the limit of the injectors capabilities. This limit is a function of injector voltage and fuel rail pressure. The PCM protects for this condition by reducing the fuel pump speed when the condition is sensed, however, there still may be drive concerns. When the PCM starts controlling the fuel pump a P116E code is set. While this condition can occur in a normally functioning vehicle, it can also be exacerbated by several factors. If the fuel tank was not properly bled during the first fill, trapped air in the vapor space can increase tank pressure. In this condition there is often only a faint smell of propane when the bleeder valve is opened. The tank should be vented until there is a strong propane odor coming from the bleeder valve. The tank pressure should be confirmed against the expected pressure.

Allow the fuel tank to cool to ambient temperature before performing the following procedure.

| Step | Procedure | Action |
|---|---|---|
| 1 | **Measure tank pressure and tank surface temperature.**<br>Is tank pressure more than 15 psi (103 kPa) over expected tank pressure? | **Yes** — Vent the tank until pressure is within the expected range.<br>**No** — Vehicle is working properly; inform and explain operating characteristics to customer. |

## Supply Solenoid Check

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

| Step | Procedure | Action |
|---|---|---|
| 1 | **Verify the following:**<br>a. Is there fuel in the tank of at least 1/8 tank or more? (Add fuel if necessary.)<br>b. Is the tank supply manual shutoff valve fully OPEN?<br>c. Is battery voltage above 10 volts? | **Yes** — Go to Step 2.<br>**No** — Correct fault and retry. |
| 2 | **Check for diagnostic trouble codes (DTC).**<br>Are any codes present? | **Yes** — Go to Step 3.<br>**No** — Go to Step 4. |
| 3 | **Is the DTC identified on the ROUSH liquid propane autogas DTC list?** | **Yes** — Refer to *Diagnostic Trouble Code List*.<br>**No** — Refer to the Ford service manual DTC chart. |
| 4 | **Check fuel pressure.**<br>a. Measure and record fuel rail pressure and fuel tank pressure at Key ON Engine OFF (KOEO).<br>b. While monitoring fuel pressure, attempt to start engine.<br>c. Record the highest pressure observed.<br>d. Does fuel pressure rise 20 psi (138 kPa) before engine crank? | **Yes** — Go to Step 11.<br>**No** — Go to Step 5. |

| Step | Procedure | Action |
|---|---|---|
| 5 | **Check fuel pump operation.**<br>a. Using a current clamp, check current draw on both fuel pump power wires at the fuel tank. Refer to *In-Tank Harness* for correct circuits.<br>b. Turn ignition switch to START position and release. Vehicle will start the flush cycle and pumps should be running. Check current draw. A minimum of 2 amps should be recorded on both fuel pump circuits.<br>a. Do fuel pumps draw current? | **Yes** — Go to Step 6.<br>**No** — If both circuits are showing no current, check the OEM fuel pump (FP) fuse. If only one fuel pump circuit shows current, check the ROUSH CleanTech fuel pump fuse. (See ROUSH CleanTech fuse box for location.)<br>If both fuel pump fuses (OEM and ROUSH CleanTech) are good, go to Step 10. |
| 6 | **Check XFV.**<br>a. Turn OFF engine.<br>b. Wait 1 minute and then restart engine.<br>c. Measure and record fuel rail pressure and fuel tank pressure.<br>d. Is problem resolved? | **Yes** — Go to Step 11.<br>**No** — Go to Step 7. |
| 7 | **Check ROUSH FP fuse.**<br>Is fuse intact and OK? | **Yes** — Go to Step 8.<br>**No** — Determine the cause of the short and repair; replace the fuse. |
| 8 | **Check the TS and SS fuses.**<br>a. Locate the TS fuse (E3-E4) and check its condition.<br>b. Locate the SS fuse (F1-F2) and check its condition.<br>c. Are the fuses blown? | **Yes** — Determine the cause of the short and repair; replace the fuse.<br>**No** — Go to Step 9. |
| 9 | **Verify that there is power and grounding in the TS and SS wiring circuits.**<br>a. Check for +12 volts at the TS and SS connectors. Refer to the *Tank Solenoid Electrical Check* procedure.<br>b. Is +12 volts present at the TS connector?<br>c. Is +12 volts present at the SS connector? | **Yes** — Voltage present at SS, replace FRPCM. Voltage present at TS, replace fuel supply valve assembly.<br>**No** — Check for an open/short in the wiring circuit and repair. |
| 10 | **Verify that there is power and grounding in the wiring circuit to the tank.**<br>a. Check for +12 volts at the fuel pump 1 (FP1) and fuel pump 2 (FP2) connectors. Refer to the *Fuel Rail Pressure Control Module Electrical Check* procedure.<br>b. Is +12 volts present at the FP1 connector?<br>c. Is +12 volts present at the FP2 connector? | **Yes** — Refer to *Engine Stumble, Stall, Rough Idle* Step 12.<br>**No** — Check for an open/short in the wiring circuit and repair. |
| 11 | **Integrated Pressure Temperature Sensor Rationality**<br>Does temperature and pressure make sense to verification? | **Yes** — Go to Step 12.<br>**No** — Verify that wiring in circuit is OK. Refer to the *Integrated Pressure Temperature Sensor Electrical Check* procedure. If not, repair wiring. If OK, replace sensor. |
| 12 | Refer to the appropriate *Ford Powertrain Control/Emissions Diagnosis Service Manual* at www.motorcraft.com. | — |

## Fuel System Fails to Bleed

| Step | Procedure | Action |
|---|---|---|
| 1 | **Determine if fault condition repeats.**<br>a. START the engine and allow it to run for a few minutes.<br>b. Turn OFF the engine and wait one minute.<br>c. Measure and record the fuel rail pressure, fuel rail temperature and fuel tank pressure with the Key ON Engine OFF (KOEO).<br>d. Energize the bleed solenoid. Refer to the *Manual Solenoid Activation Procedure*.<br>e. With the engine OFF, monitor fuel rail pressure for 15 minutes.<br>f. Does fuel rail pressure drop more than 20 psi (138 kPa)? | **Yes** — Go to Step 5.<br>**No** — Go to Step 2. |
| 2 | **Verify solenoid/restrictor function.**<br>a. START the engine and allow it to run for a few minutes.<br>b. Turn OFF the engine.<br>c. Disconnect the EVAP line from the FRPCM port.<br>d. Energize the bleed solenoid. Refer to the *Manual Solenoid Activation Procedure*.<br>e. Is there propane flowing from the port? | **Yes** — Go to Step 4.<br>**No** — Go to Step 3. |
| 3 | **Verify that wiring is in good condition and functioning.**<br>a. Perform wiring checks of the FRPCM harness.<br>b. Is the wiring OK? | **Yes** — Bleed solenoid stuck closed or port restrictor is plugged. Replace the FRPCM.<br>**No** — Repair wiring and repeat Step 1. |
| 4 | **Check for a kinked EVAP line.**<br>a. Inspect the EVAP line between the FRPCM and EVAP canister.<br>b. Are there kinks in the line? | **Yes** — Replace the kinked EVAP line and then repeat Step 1.<br>**No** — Go to Step 5. |
| 5 | **Check for leaks to the FRPCM.**<br>a. START the engine and allow it to run for a few minutes.<br>b. Turn OFF the engine and unplug the FRPCM.<br>c. Measure and record fuel rail pressure.<br>d. Bleed pressure from fuel rail until fuel pressure drops more than 50 psi (345 kPa).<br>e. De-energize bleed solenoid.<br>f. Let vehicle sit for 30 minutes.<br>g. Measure fuel rail pressure and fuel tank pressure.<br>h. Does fuel rail pressure rise more than 10 psi (69 kPa)? | **Yes** — FRPCM leaks at either supply solenoid or return check valve. Replace FRPCM.<br>**No** — Potential intermittent fault. Return vehicle to customer and see if problem persists. |

## Fuel Pressure Drop

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

| Step | Procedure | Action |
|---|---|---|
| 1 | **Verify the following:**<br>a. Is there fuel in the tank of at least 1/8 tank?<br>b. Is the tank supply manual shutoff valve fully open?<br>c. Is battery voltage above 10 volts? | **Yes** — Go to Step 2.<br>**No** — Correct the fault condition and retry. |
| 2 | **Determine fuel pressure.**<br>a. Measure and record fuel tank pressure.<br>b. Measure and record fuel rail pressure with Key ON Engine Running (KOER).<br>c. Subtract the tank measurement from the KOER measurement.<br>d. Is the resulting fuel pressure in the expected range? | **Yes** — Go to Step 4.<br>**No** — Go to Step 3. |
| 3 | **Determine if the excess flow valve is tripped.**<br>a. Turn OFF the engine.<br>b. Wait one minute and then restart the engine.<br>c. Is the problem resolved? | **Yes** — Refer to the *Excess Flow Valve Check* procedure.<br>**No** — Go to Step 4. |
| 4 | **Check fuel pump operation.**<br>a. Using a current clamp, check current draw on both fuel pump power wires at the fuel tank. Refer to *In-Tank Harness* for correct circuits.<br>b. Turn ignition switch to START position and release. Vehicle will start the flush cycle and pumps should be running. Check current draw. A minimum of 2 amps should be recorded on both fuel pump circuits.<br>c. Do fuel pumps draw current? | **Yes** — Go to Step 5.<br>**No** — If both circuits are showing no current, check the OEM fuel pump (FP) fuse. If only one fuel pump circuit shows current, check the ROUSH CleanTech fuel pump fuse. (See ROUSH CleanTech fuse box for location.)<br>If both fuel pump fuses (OEM and ROUSH CleanTech) are good, go to Step 6. |
| 5 | **Check tank solenoid (TS) and supply solenoid (SS) fuses.**<br>a. Locate the TS (E3-E4) and SS (F1-F2) fuses.<br>b. Are the fuses blown? | **Yes** — Find and repair the short; replace the fuse.<br>**No** — Go to Step 8. |
| 6 | **Verify that there is power and ground in the wiring circuit to the tank.**<br>a. Check for +12 volts at the fuel pump 1 (FP1) and fuel pump 2 (FP2) connectors. Refer to the *Fuel Rail Pressure Control Module Electrical Check* procedure.<br>b. Is +12 volts present at the FP1 connector?<br>c. Is +12 volts present at the FP2 connector? | **Yes** — Refer to *Engine Stumble, Stall, Rough Idle* Step 9.<br>**No** — Check for an open/short in the wiring circuit and repair. |
| 7 | **Integrated Pressure Temperature Sensor Rationality**<br>Does temperature and pressure make sense to verification? See the *Integrated Pressure Temperature Sensor Electrical Check* procedure. | **Yes** — Go to Step 8.<br>**No** — Verify that wiring in circuit is OK. If not, repair wiring. If OK, replace sensor. |
| 8 | Refer to the appropriate *Ford Powertrain Control/Emissions Diagnosis Service Manual* at www.motorcraft.com. | — |

## Fuel Level Indication Check

The ROUSH CleanTech fuel level indication system differs from the gasoline system as the fuel level sender is not wired directly to the instrument cluster. Instead, the fuel level sender is wired to the SRM, which reads the fuel level and transmits the signal to the PCM via the CAN bus, and to the FLIM, which in turn simulates the resistance the instrument cluster expects to see for a given fuel level.

**NOTE**

The gauge on the sending unit must not be used for any diagnostics. The gauge is not accurate. Only resistance or voltage outputs should be used for diagnostic purposes.

| Symptom | Cause/Action to be taken |
|---|---|
| Fuel gauge does not move on a partial fill | This behavior is not uncommon. The fuel level sender may not move far enough to trigger movement on the gauge if only a small amount of fuel is added to the tank. Once driven, the gauge may move to reflect the fill. |
| Malfunction Indicator Lamp (MIL) | There is a circuit fault that has been identified by the PCM. Initially follow the *Ford Powertrain Control/Emissions Diagnosis Service Manual,* whenever a circuit check is called for, refer to the *Fuel Level Interface Module Electrical Test* procedure. |
| Gauge points below E | This is an indication of an error state. Initially follow the *Ford Powertrain Control/Emissions Diagnosis Service Manual*, whenever a circuit check is called for, refer to the *Fuel Level Interface Module Electrical Test* procedure. |
| Doesn't read full after a fill | This could be the result of either a fuel level sender fault or an OPD valve triggering prematurely. Refer to fill issues and the *Fuel Level Sender Electrical Check* procedure for more information. |

## Tank Solenoid Electrical Check

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

### CONNECTORS

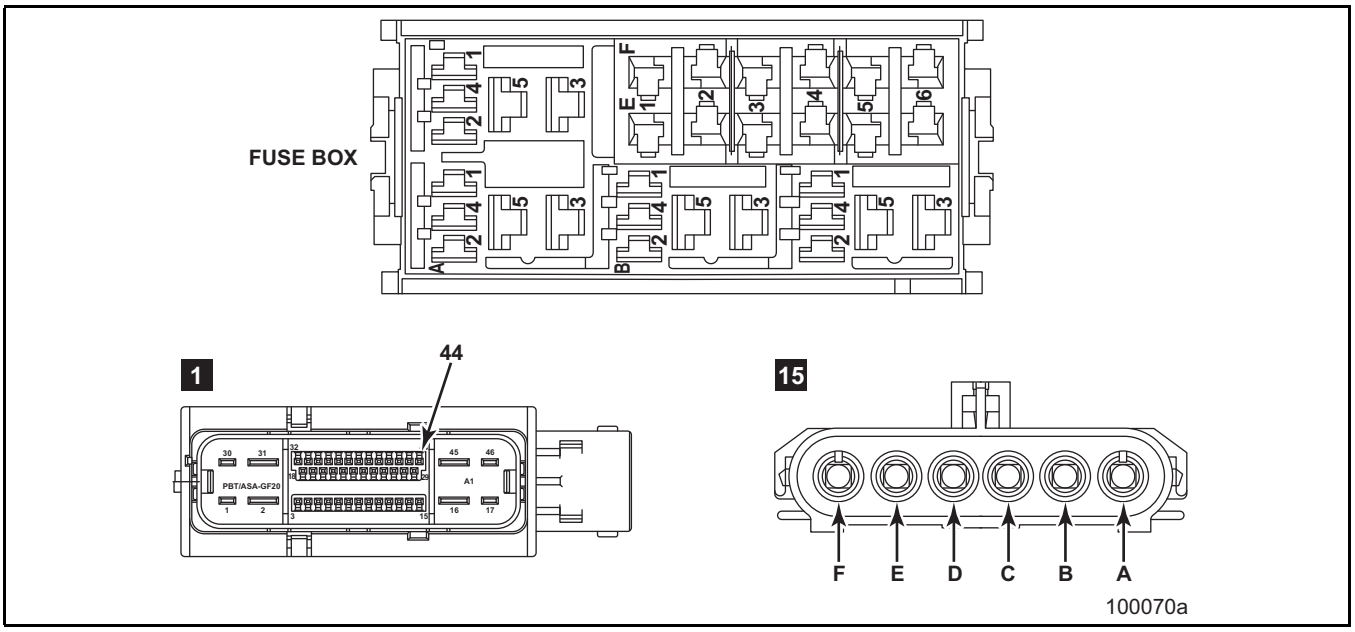


**Figure 1 — Underhood Harness Connectors**

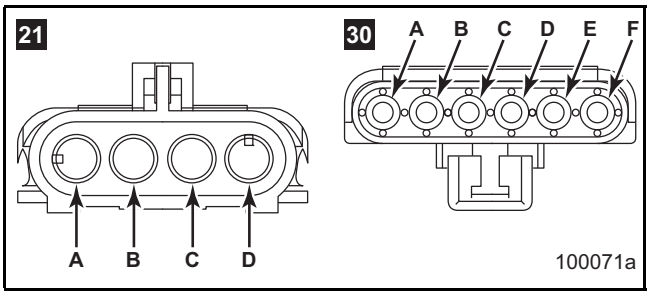


**Figure 2 — Rear Frame Harness Connectors**

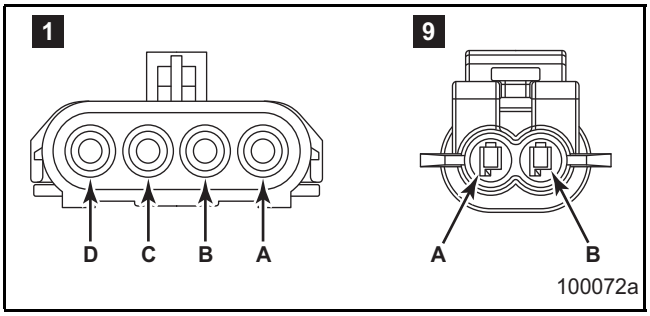


**Figure 3 — Solenoid Harness Connectors**

## PROCEDURE

| Step | Procedure | Action |
|---|---|---|
| 1 | **Unplug the solenoid harness connector 9 from the tank solenoid.** | Go to Step 2. |
| 2 | **Using a multimeter, measure resistance of the solenoid.**<br>Is the measured resistance within 6–35 ohms? | **Yes** — Go to Step 3.<br>**No** — Replace the tank solenoid. |
| 3 | **Using a multimeter, measure voltage at the tank solenoid as follows:**<br>a. With the ignition key ON, check for voltage present at pin-A, connector 9 (solenoid harness). Use the body as the reference ground.<br>b. Is battery (B+) voltage present? | **Yes** — Supply circuit OK.<br>**No** — Go to Step 4. |
| 4 | **Check fuse (E3-E4, 20A) in auxiliary fuse box.**<br>Is fuse blown? | **Yes** — Replace fuse.<br>**No** — Fuse OK; go to Step 5. |
| 5 | **Check relay.**<br>Is relay functioning properly? | **Yes** — Go to Step 6.<br>**No** — Replace relay. |
| 6 | **Check supply circuit continuity from solenoid harness to fuse box.**<br>a. Check continuity between:<br>• Pin-A, connector 9 and pin-A, connector 1 (solenoid harness)<br>• Pin-A, connector 21 and pin-A, connector 30 (rear wiring harness)<br>• Pin-A, connector 15 and cavity A5, fuse box (underhood harness)<br>b. Is there good continuity in the circuit? | **Yes** — Go to Step 7.<br>**No** — Repair supply circuit wiring. |
| 7 | **Check ground circuit continuity from solenoid harness to smart relay module (SRM) connector.**<br>a. Check continuity between:<br>• Pin-B, connector 9 and pin-B, connector 1 (solenoid harness)<br>• Pin-B, connector 21 and pin-E, connector 30 (rear wiring harness)<br>• Pin-E, connector 15 and pin-44, connector 1 (underhood harness)<br>b. Is there good continuity in the circuit? | **Yes** — Refer to the *Smart Relay Module Electrical Test* procedure.<br>**No** — Repair ground circuit wiring. |

## Fuel Rail Pressure Control Module Electrical Check

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

### CONNECTORS

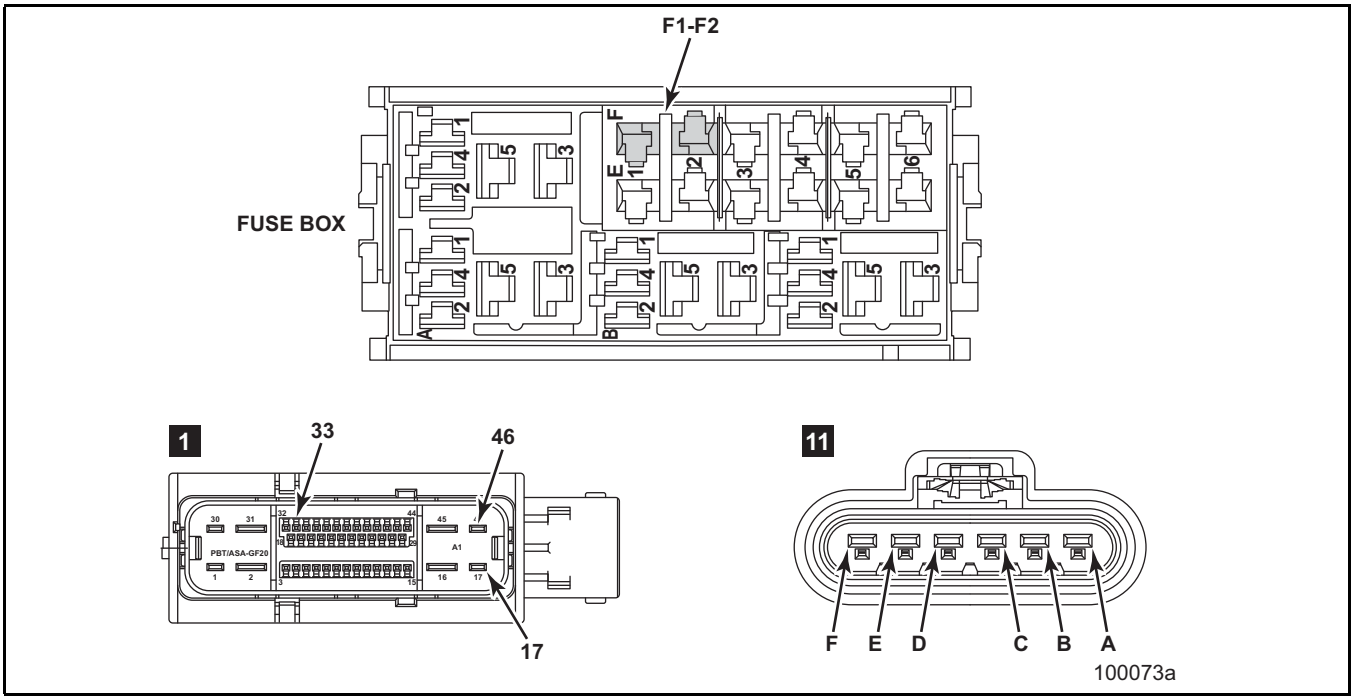


**Figure 4 — Underhood Harness Connectors**

### PROCEDURE

| Step | Procedure | Action |
|---|---|---|
| 1 | **Unplug the fuel rail pressure control module (FRPCM) connector from connector 11 of underhood harness.** | Go to Step 2. |
| 2 | **Using a multimeter, check the resistance of each solenoid.**<br>a. Check resistance across the terminals of the FRPCM connector in sequence as follows:<br>• Supply Solenoid — Pin-A and pin-F<br>• Flow Control Solenoid — Pin-B and pin-E<br>• Bleed Solenoid — Pin-C and pin-D<br>b. Is the measured resistance for each solenoid within 6–35 ohms? | **Yes** — Go to Step 3.<br>**No** — Replace the FRPCM if resistance for any one of the solenoids is not within the specified range. |
| 3 | **Check supply voltage to FRPCM solenoids.**<br>Using a multimeter, measure voltage between the terminal for each solenoid at the harness side connector 11 and ground as follows: | Go to Steps 4–6. |

| | | |
|---|---|---|
| 4 | **Supply Solenoid** — Pin-A and body ground | **B+ Voltage** — Go to Step 5.<br>**No Voltage** — Go to Step 5. |
| 5 | **Flow Control Solenoid** — Pin-B and body ground | **B+ Voltage** — Go to Step 6.<br>**No Voltage** — Go to Step 6 if Step 4 has voltage; if Step 4 has no voltage, go to Step 7. |
| 6 | **Bleed Solenoid** — Pin-C and body ground | **B+ Voltage** — Continue with Step 9.<br>**No Voltage** — Go to Step 8 if Step 4 has voltage; if Step 4 has no voltage, go to Step 7. |
| 7 | **Check fuses (F1-F2, 10A) in auxiliary fuse box.**<br>Is a fuse blown? | **Yes** — Replace fuse.<br>**No** — Go to Step 8. |
| 8 | **Check solenoid supply circuit continuity.**<br>a. Check continuity between:<br>• Supply Solenoid — Pin-A, connector 11 (underhood harness) and cavity F2 (auxiliary fuse box)<br>• Flow Control Solenoid — Pin-B, connector 11 (underhood harness) and cavity F2 (auxiliary fuse box)<br>• Bleed Solenoid — Pin-C, connector 11 (underhood harness) and cavity F2 (auxiliary fuse box)<br>b. Is there good continuity in all three circuits? | **Yes** — Go to Step 9.<br>**No** — Repair wiring circuit. |
| 9 | **Check solenoid ground circuit continuity.**<br>a. Check continuity in the underhood harness between:<br>• Supply Solenoid — Pin-F, connector 11 and pin-46, connector 1 at SRM<br>• Flow Control Solenoid — Pin-E, connector 11 and pin-33, connector 1 at SRM<br>• Bleed Solenoid — Pin-D, connector 11 and pin-17, connector 1 at SRM<br>b. Is there good continuity in all three circuits? | **Yes** — Refer to the *Smart Relay Module Electrical Test* procedure.<br>**No** — Repair wiring circuit. |

## Integrated Pressure Temperature Sensor Electrical Check

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

### CONNECTORS

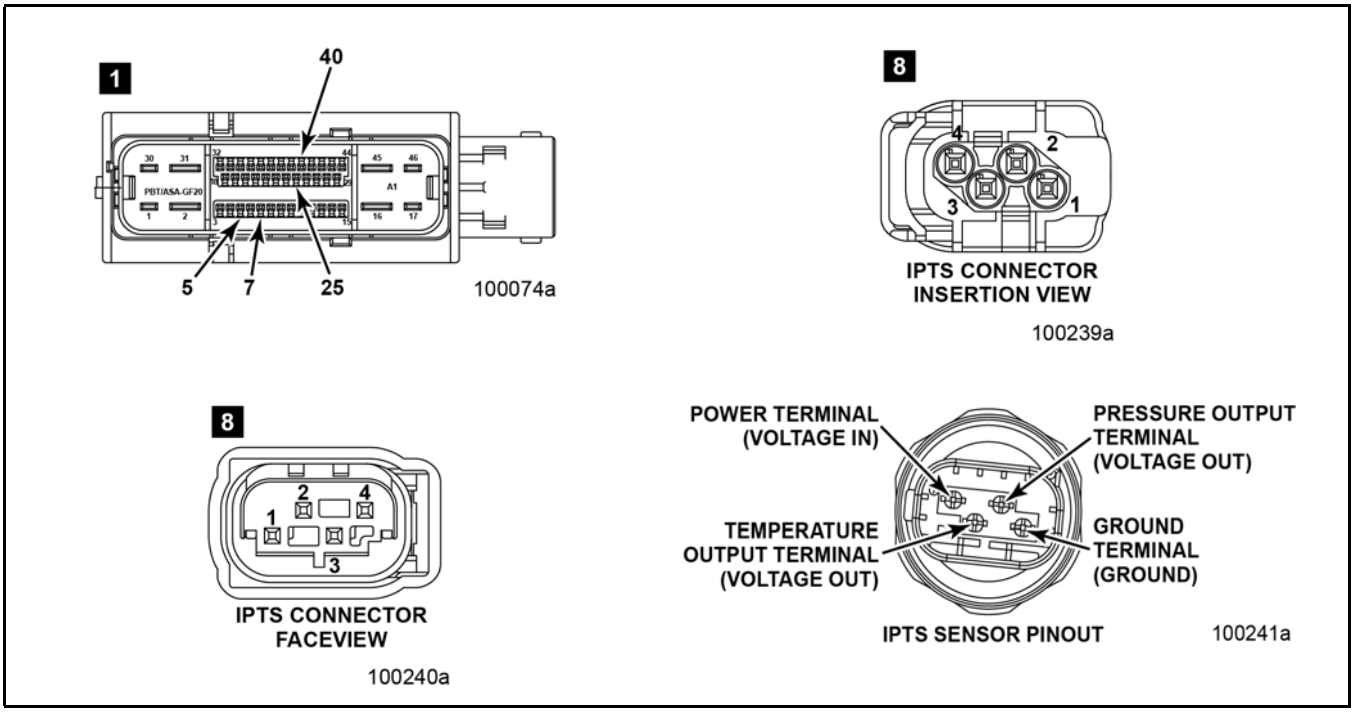


**Figure 5 — Underhood Harness Connectors**

### PROCEDURE

| Step | Procedure | Action |
|---|---|---|
| 1 | **Unplug the connector 8 (underhood harness) to the IPTS.** | Go to Step 2. |
| 2 | **Check resistance of the integrated pressure temperature sensor (IPTS).**<br>a. With vehicle at ambient room temperature (20–30°C, 68–86°F) and using a multimeter, measure resistance across the IPTS terminals (between pin-1 and pin-3).<br>b. Is the resistance value between 8K–12K ohms? | **Yes** — Go to Step 3.<br>**No** — Replace the IPTS. |
| 3 | **Check circuit continuity between the IPTS and the smart relay module (SRM).**<br>a. Using a multimeter, check continuity in the underhood harness between:<br>• Pin-1, connector 8 and pin-40, connector 1<br>• Pin-2, connector 8 and pin-7, connector 1<br>• Pin-3, connector 8 and pin-5, connector 1<br>• Pin-4, connector 8 and pin-25, connector 1<br>b. Is there good continuity in the circuits? | **Yes** — Refer to the *Smart Relay Module Electrical Test* procedure.<br>**No** — Repair circuit wiring. |

## Fuel Pump Electrical Test

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

### CONNECTORS

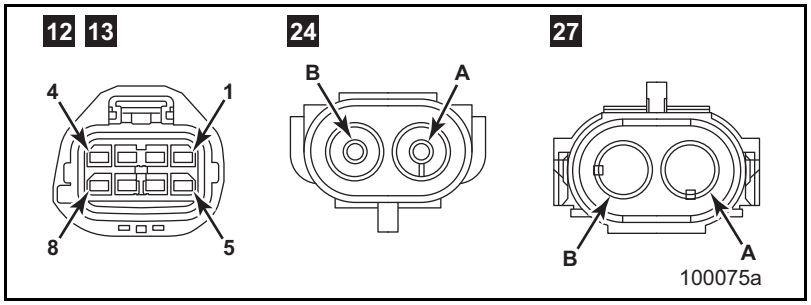


**Figure 6 — Rear Frame Harness Connectors**

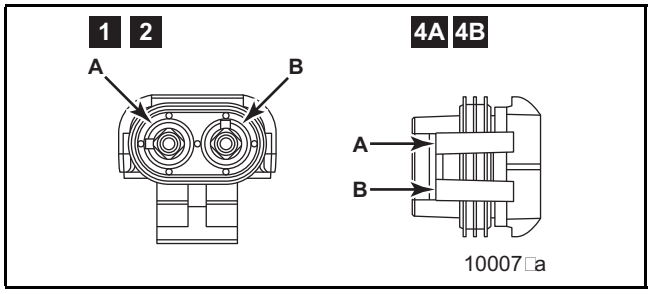


**Figure 7 — In-Tank Harness Connectors**

### PROCEDURE

| Step | Procedure | Action |
|---|---|---|
| 1 | **Check fuel pump circuit continuity.**<br>a. Unplug the FPCM connector 12 for fuel pump 1. Check fuel pump circuit continuity.<br>b. Using a multimeter, measure resistance between pin-5 and pin-8.<br>c. Is resistance between 0.4–1.0 ohm? | **Yes** — Go to Step 2.<br>**No** — Go to Step 3. |
| 2 | **Check fuel pump circuit continuity.**<br>a. Unplug the FPCM connector 13 for fuel pump 2.<br>b. Using a multimeter, measure resistance between pin-5 and pin-8.<br>c. Is resistance between 0.4–1.0 ohm? | **Yes** — Refer to the *Fuel Pump Control Module Electrical Continuity Test* procedure.<br>**No** — Go to Step 3. |
| 3 | **Check resistance of each fuel pump.**<br>a. Unplug the fuel pump connectors (in-tank harness) at the fuel pump assembly.<br>b. Using a multimeter, measure resistance for fuel pump 1 across the terminals of the fuel pump.<br>c. Is resistance between 0.4–1.0 ohm? | **Yes** — Go to Step 4.<br>**No** — Replace fuel pump assembly. |

| Step | Procedure | Action |
|---|---|---|
| 4 | **Check resistance continued.**<br>a. Using a multimeter, measure resistance for fuel pump 2 across the terminals of the fuel pump.<br>b. Is resistance between 0.4–1.0 ohm? | **Yes** — Go to Step 5.<br>**No** — Replace fuel pump assembly. |
| 5 | **Check harness circuit continuity from fuel pumps to FPCM.**<br>a. Check continuity for pump 1, wire FPPWR, V+ across:<br>• Pin-A, connector 4A (in-tank harness) to pin-A, connector 1 (in-tank harness)<br>• Pin-A, connector 24 (rear frame harness) and pin-5, connector 12 (rear frame harness)<br>b. Check continuity for pump 1, wire FPRTN, V– across:<br>• Pin-B, connector 4A (in-tank harness) to pin-B, connector 1 (in-tank harness)<br>• Pin-B, connector 24 (rear frame harness) and pin-8, connector 12 (rear frame harness)<br>c. Check continuity for pump 2, wire FPPWR, V+ across:<br>• Pin-A, connector 4B (in-tank harness) to pin-A, connector 2 (in-tank harness)<br>• Pin-A, connector 27 (rear harness) and pin-5, connector 13 (rear harness)<br>d. Check continuity for pump 2, wire FPRTN, V– across:<br>• Pin-B, connector 4B (in-tank harness) to pin-B, connector 2 (in-tank harness)<br>• Pin-B, connector 27 (rear frame harness) and pin-8, connector 13 (rear frame harness)<br>e. Is there good continuity in all circuits? | **Yes** — Refer to the *Fuel Pump Control Module Electrical Continuity Test* procedure.<br>**No** — Repair circuit wiring. |

## Fuel Pump Control Module Electrical Continuity Test

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

### CONNECTORS

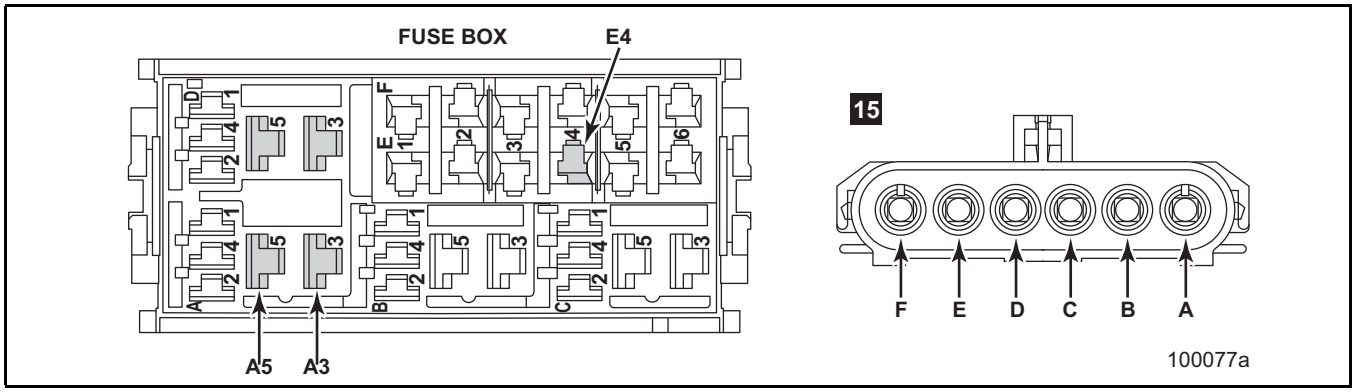


**Figure 8 — Underhood Harness Connectors**

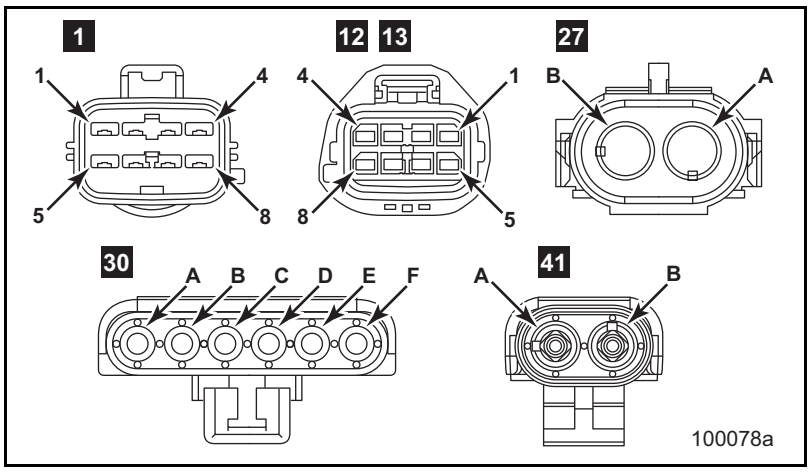


**Figure 9 — Rear Frame Harness Connectors**

## PROCEDURE

| Step | Procedure | Action |
|---|---|---|
| | For fuel pump control module (FPCM) functional testing and diagnostic trouble codes, refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* at www.motorcraft.com. | |
| 1 | **Check Ford FPCM circuit continuity to Ford harness.**<br>a. Disconnect rear frame harness connectors 1 and 12.<br>b. Check for continuity in the rear frame harness across:<br>• Pin-1, connector 1 and pin-1, connector 12<br>• Pin-3, connector 1 and pin-3, connector 12<br>• Pin-4, connector 1 and pin-4, connector 12<br>• Pin-5, connector 1 and pin-5, connector 12<br>• Pin-6, connector 1 and pin-6, connector 12<br>• Pin-7, connector 1 and pin-7, connector 12<br>c. Is there good continuity in each circuit? | **Yes** — Go to Step 2.<br>**No** — Repair circuit wiring. |
| 2 | **Check FPCM circuit continuity to Ford harness.**<br>a. Disconnect rear frame harness connector 13.<br>b. Check wire VPWR (V+) for continuity across:<br>• Pin-1, connector 13 (rear frame harness) and pin-A, connector 30 (rear frame harness)<br>• Pin-A, connector 15 (underhood harness) and cavity-A5, fuse box (underhood harness)<br>• Cavity-A3, fuse box (underhood harness) and cavity-E4, fuse box (underhood harness)<br>c. Is there good continuity in each circuit? | **Yes** — Go to Step 3.<br>**No** — Repair circuit wiring. |
| 3 | **Check fuse condition (E3-E4).**<br>Is the fuse blown? | **Yes** — Replace the fuse.<br>**No** — Go to Step 4. |
| 4 | **Check Roush CleanTech FPCM circuit continuity to Ford harness.**<br>a. Check for continuity in the rear frame harness across:<br>• Pin-A, connector 30 and pin-1, connector 13<br>• Pin-4, connector 1 and pin-4, connector 13<br>• Pin-A, connector 27 and pin-5, connector 13<br>• Pin-6, connector 1 and pin-6, connector 13<br>• Pin-B, connector 27 and pin-8, connector 13<br>• Pin-A, connector 41 and pin-7, connector 13<br>b. Is there good continuity in each circuit? | **Yes** — Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for functional testing of the FPCM.<br>**No** — Repair circuit wiring. |

## Smart Relay Module Electrical Test

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

### CONNECTORS

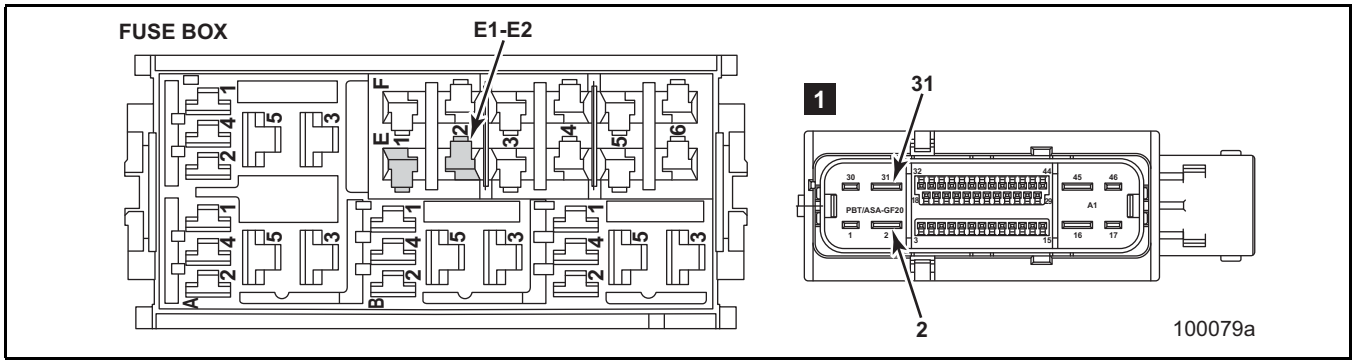


**Figure 10 — Underhood Harness Connectors**

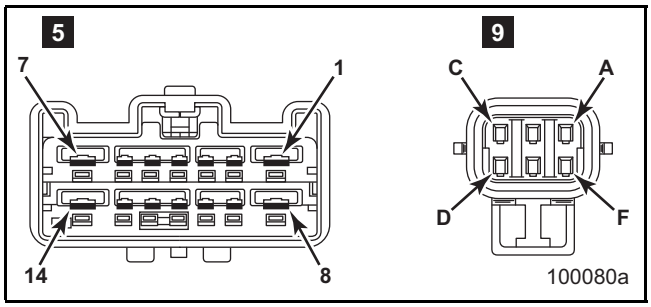


**Figure 11 — CAN Harness Connectors**

### PROCEDURE

| Step | Procedure | Action |
|---|---|---|
| 1 | **Disconnect the smart relay module (SRM) connector 1 (underhood harness).** | Go to Step 2. |
| 2 | **Check for battery voltage (B+) to the SRM.**<br>a. Using a multimeter, check for B+ voltage at cavity 2, connector 1. Use a body ground for reference.<br>b. Is there voltage (B+)? | **Yes** — Go to Step 5.<br>**No** — Go to Step 3. |
| 3 | **Check for battery voltage (B+) to the SRM.**<br>a. Check circuit continuity between cavity 2, connector 1 and cavity E2, auxiliary fuse box.<br>b. Is there good continuity in the circuit? | **Yes** — Go to Step 4.<br>**No** — Repair circuit wiring. |

| Step | Procedure | Action |
|---|---|---|
| 4 | **Check for battery voltage (B+) to the SRM.**<br>a. Check condition of SRM power fuse (E1-E2, 25A) in the auxiliary fuse box.<br>b. Is fuse blown? | **Yes** — Replace fuse.<br>**No** — Go to Step 5. |
| 5 | **Check the SRM ground circuit for continuity.**<br>a. Using a multimeter, check ground at cavity 31, connector 1 (underhood harness). Use a body ground for reference.<br>b. Is there good continuity? | **Yes** — Go to Step 6.<br>**No** — Repair circuit wiring. |
| 6 | **Check for active signal to SRM.**<br>a. Using a multimeter, check the underhood harness for continuity in the E-Series system between pin-26, connector 1 and pin-A, connector 23 and in F-Series system between pin-26, connector 1 and pin-1, connector 51/55.<br>b. Is there good continuity in the circuit? | **Yes** — E-Series: Go to Step 8, F-Series: Go to Step 9.<br>**No** — Go to Step 7. |
| 7 | **Check fuse.**<br>a. Check condition of fuse (F5-F6, 5A) in auxiliary fuse box.<br>b. Is fuse blown? | **Yes** — Replace fuse.<br>**No** — Repair circuit wiring |
| 8 | **E-Series Only: Check CAN harness for SRM circuit continuity.**<br>a. Check continuity between pin-A, connector 9 and pin-12, connector 5.<br>b. Is there good continuity in the circuit? | **Yes** — Go to Step 9.<br>**No** — Repair circuit wiring. |
| 9 | **Check CAN and underhood harness continuity.**<br>a. Check CAN-H(+) continuity across:<br>• Pin-28, SRM connector 1 (underhood harness) and pin-C, connector 23 (underhood harness)<br>• Pin-C, connector 9 (CAN harness) and pin-2, connector 5 (CAN harness)<br>b. Is there good continuity in the circuits? | **Yes** — Go to Step 10.<br>**No** — Repair circuit wiring. |
| 10 | **Check CAN and underhood harness continuity.**<br>a. Check CAN-H(–) continuity across:<br>• Pin-43, SRM connector 1 (underhood harness) and pin-B, connector 23 (underhood harness)<br>• Pin-B, connector 9 (CAN harness) and pin-3, connector 5 (CAN harness)<br>b. Is there good continuity in the circuits? | **Yes** — Refer to the *Ford Powertrain Control/Emissions Diagnosis Service Manual* for functional testing of the CAN bus.<br>**No** — Repair circuit wiring. |

## Fuel Level Sender Electrical Check

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

### CONNECTORS

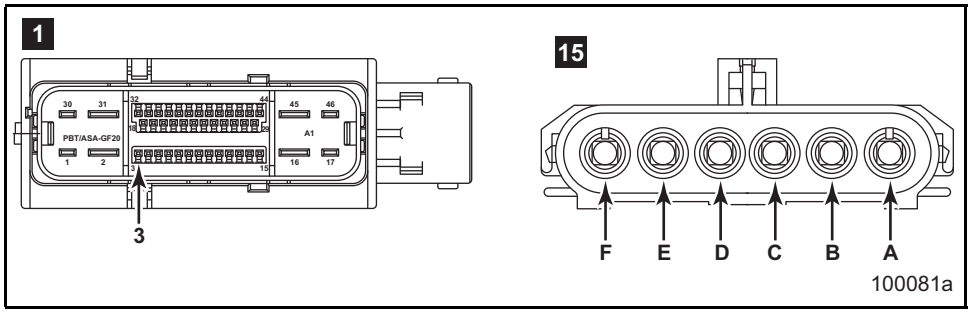


**Figure 12 — Underhood Harness Connectors**

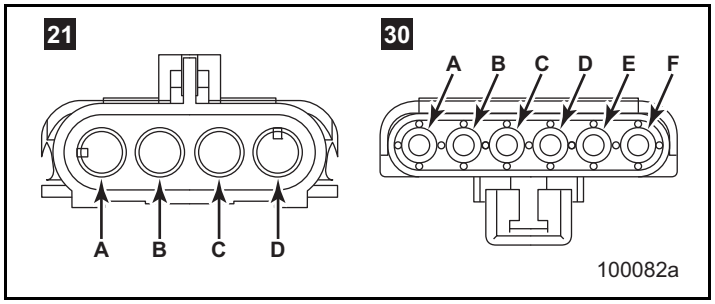


**Figure 13 — Rear Frame Harness Connectors**

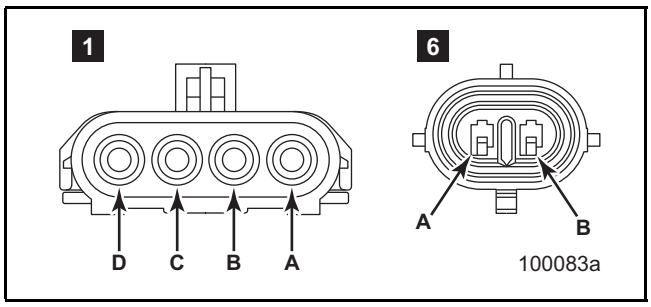


**Figure 14 — Solenoid Harness Connectors**

## PROCEDURE

| Step | Procedure | Action |
|---|---|---|
| | For fuel level sender (FLS) functional testing and diagnostic trouble codes, use *Diagnostic Tests and Procedures* and *Diagnostic Trouble Codes*. | |
| 1 | **Check resistance in FLS circuit wiring.**<br>a. Disconnect the SRM connector 1 (underhood harness).<br>b. Using a multimeter, measure the resistance between pin-3 and pin-40 of the harness connector.<br>c. Is resistance between 24–260 ohms? | **Yes** — Refer to the *Smart Relay Module Electrical Test* procedure or the *Fuel Level Interface Module Electrical Test* procedure.<br>**No** — Go to Step 2. |
| 2 | **Check resistance of the FLS.**<br>a. Disconnect the FLS connector 6 (solenoid harness).<br>b. Using a multimeter, measure the resistance across the FLS connector pins.<br>c. Is resistance between 24–260 ohms? | **Yes** — Go to Step 3.<br>**No** — Replace the FLS. |
| 3 | **Check circuit wiring continuity between FLS connector and SRM connector.**<br>a. Disconnect connector 1 of the solenoid harness.<br>b. Check continuity between pin-B, connector 6 (solenoid harness) and pin-C, connector 1 (solenoid harness).<br>c. Is there good continuity in the circuit? | **Yes** — Go to Step 4.<br>**No** — Repair circuit wiring. |
| 4 | **Check circuit wiring continuity between FLS connector and SRM connector.**<br>a. Disconnect connector 30 of the rear frame harness.<br>b. Check continuity between pin-C, connector 21 (rear frame harness) and pin-D, connector 30 (rear frame harness).<br>c. Is there good continuity in the circuit? | **Yes** — Go to Step 5.<br>**No** — Repair circuit wiring. |
| 5 | **Check circuit wiring continuity between FLS connector and SRM connector.**<br>a. With SRM connector 1 and connector 15 of the underhood harness disconnected, check continuity between pin-C, connector 15 and pin-3, SRM connector 1.<br>b. Is there good continuity in the circuit? | **Yes** — Go to Step 6.<br>**No** — Repair circuit wiring. |
| 6 | **Check circuit wiring continuity between FLS connector and SRM connector.**<br>a. Check continuity between pin-A, connector 6 (solenoid harness) and pin-D, connector 1 (solenoid harness).<br>b. Is there good continuity in the circuit? | **Yes** — Go to 7.<br>**No** — Repair circuit wiring. |
| 7 | **Check circuit wiring continuity between FLS connector and SRM connector.**<br>a. Check continuity between pin-D, connector 21 (rear frame harness) and pin-C, connector 30 (rear frame harness).<br>b. Is there good continuity in the circuit? | **Yes** — Go to Step 8.<br>**No** — Repair circuit wiring. |
| 8 | **Check circuit wiring continuity between FLS connector and SRM connector.**<br>a. Check continuity between pin-D, connector 15 (rear frame harness) and pin-40, SRM connector (underhood harness).<br>b. Is there good continuity in the circuit? | **Yes** — Refer to the *Smart Relay Module Electrical Test* procedure or the *Fuel Level Interface Module Electrical Test* procedure.<br>**No** — Repair circuit wiring. |

# Fuel Level Interface Module Electrical Test

**NOTE**

For harness and connector layout diagrams and system electrical schematics, refer to *Wiring Diagrams and Electrical Schematics*.

## CONNECTORS

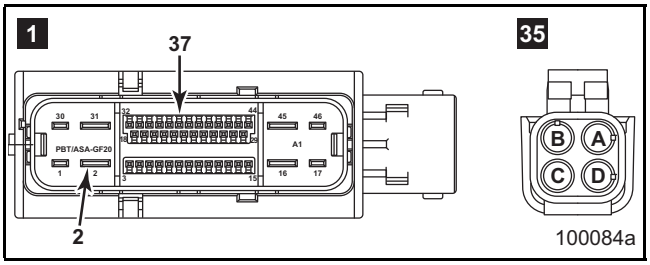


**Figure 15 — Underhood Harness Connectors**

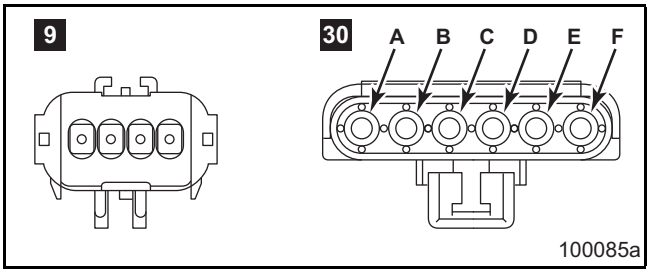


**Figure 16 — Rear Frame Harness Connectors**

## PROCEDURE

| Step | Procedure | Action |
|---|---|---|
| | For FLIM functional testing and diagnostic trouble codes, use *Diagnostic Tests and Procedures* and *Diagnostic Trouble Codes*. | |
| 1 | **Check FLIM circuit wiring for continuity to SRM.**<br>a. Disconnect underhood harness connector 1 to SRM.<br>b. Check underhood harness continuity between pin-A, connector 35 and pin-26, connector 1.<br>c. Is there good continuity in the circuit? | **Yes** — Go to Step 2.<br>**No** — Repair circuit wiring. |
| 2 | **Check FLIM circuit wiring for continuity to SRM.**<br>a. Check underhood harness continuity between pin-B, connector 35 and pin-37, connector 1.<br>b. Is there good continuity in the circuit? | **Yes** — Go to Step 3.<br>**No** — Repair circuit wiring. |
| 3 | **Check FLIM circuit wiring for continuity to SRM.**<br>a. Check underhood harness continuity between pin-C, connector 35 and body ground.<br>b. Is there good continuity in the circuit? | **Yes** — Go to Step 4.<br>**No** — Repair circuit wiring. |
| 4 | **Check FLIM circuit wiring for continuity to SRM.**<br>a. Disconnect underhood harness connector 15 to rear frame harness.<br>b. Check underhood harness continuity between pin-D, connector 35 and pin-F, connector 15.<br>c. Is there good continuity in the circuit? | **Yes** — Go to Step 5.<br>**No** — Repair circuit wiring. |
| 5 | **Check FLIM circuit wiring for continuity to SRM.**<br>a. Disconnect rear frame harness connector 9 to Ford harness.<br>b. Check rear frame harness continuity between pin-F, connector 30 and pin-2, connector 9.<br>c. Is there good continuity in the circuit? | **Yes** — Refer to the *Smart Relay Module Electrical Test* procedure.<br>**No** — Repair circuit wiring. |

# WIRING DIAGRAMS AND ELECTRICAL SCHEMATICS

## E-150/250/350 Wiring Harnesses and Connector Layout

APPROXIMATE LOCATION OF LPA SYSTEM HARNESSES AND CONNECTORS

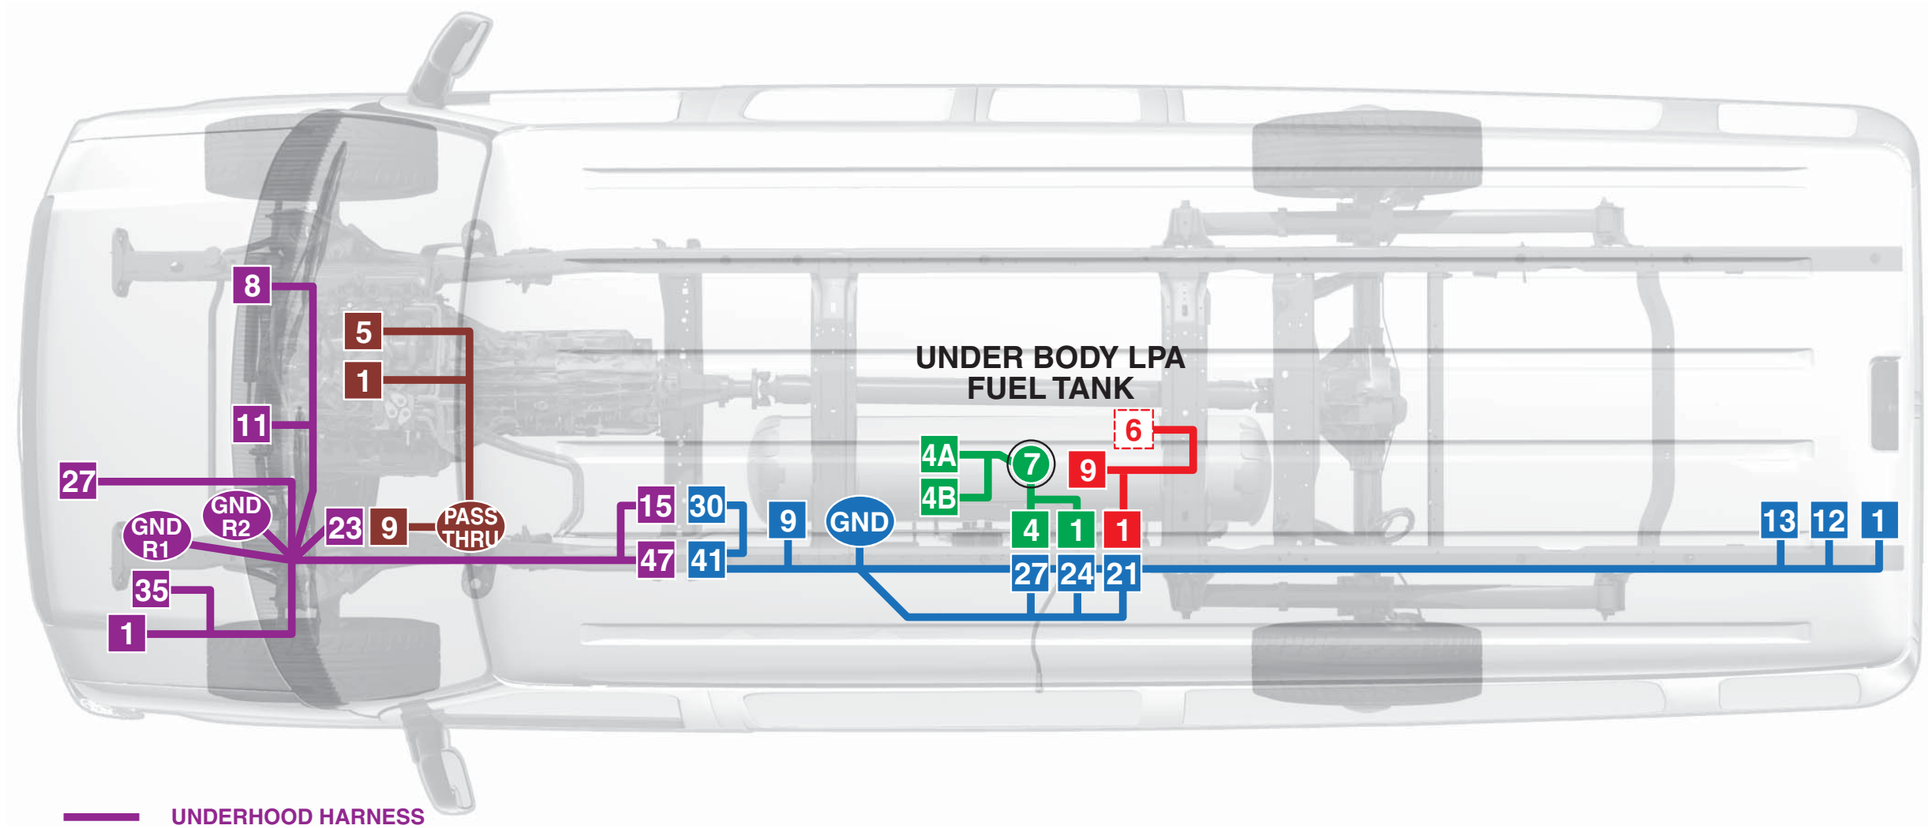


100129a

## E-150/250/350 Extended Range Wiring Harnesses and Connector Layout

APPROXIMATE LOCATION OF LPA SYSTEM HARNESSES AND CONNECTORS

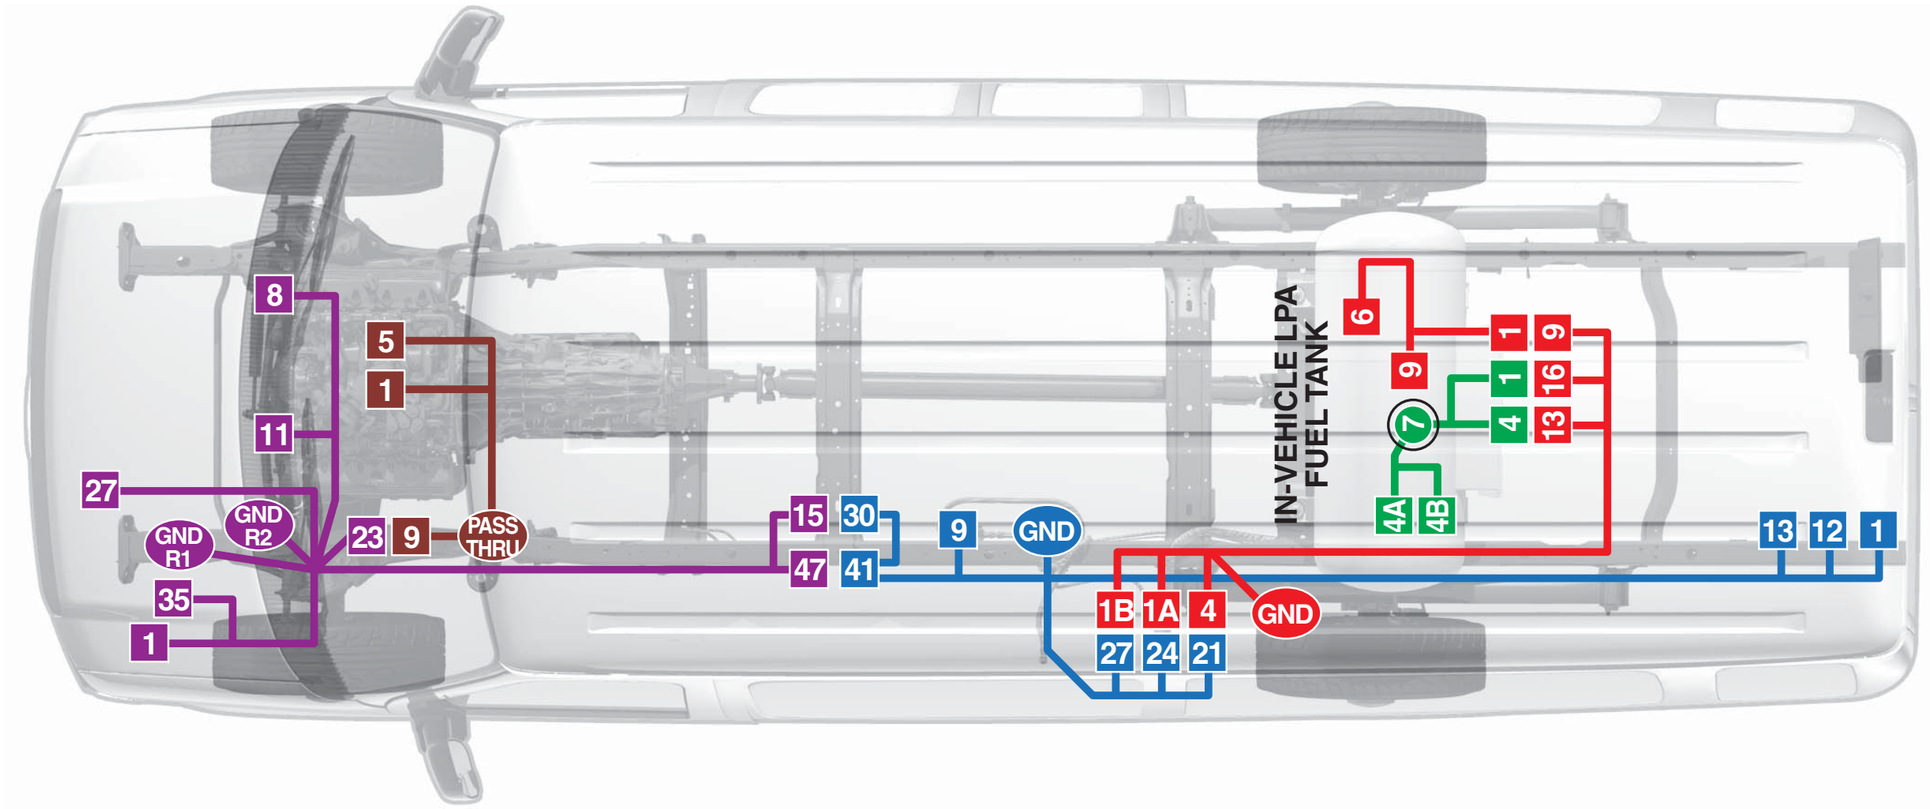


100152a

## E-450 Custom Body Wiring Harnesses and Connector Layout

APPROXIMATE LOCATION OF LPA SYSTEM HARNESSES AND CONNECTORS

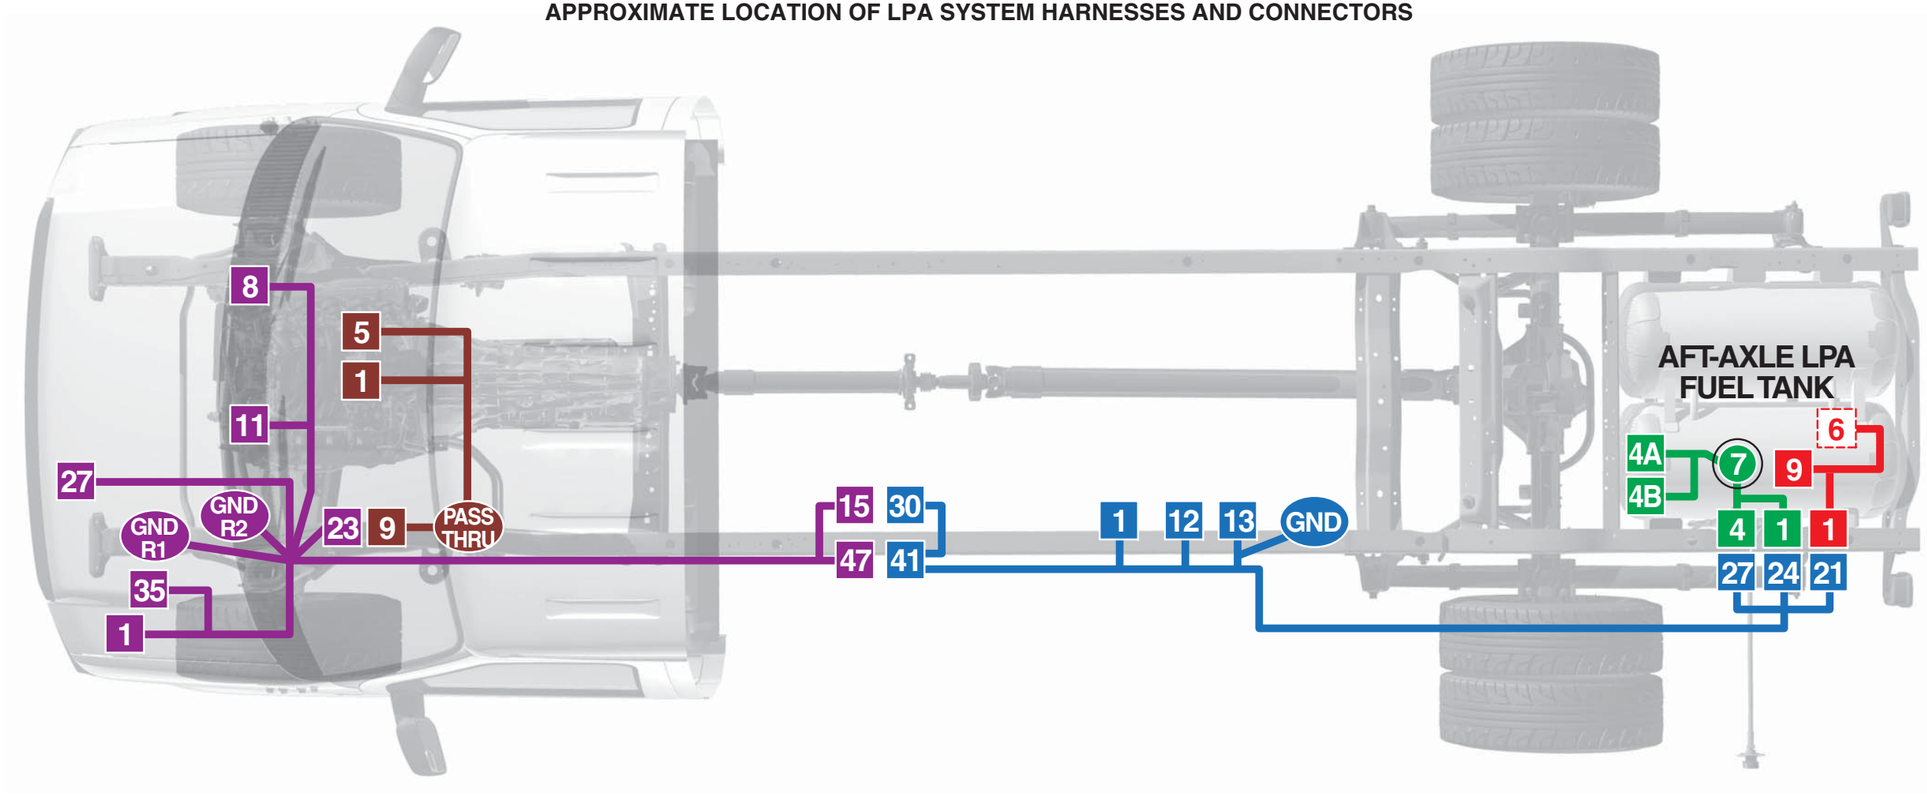


UNDERHOOD HARNESS
CAN HARNESS
REAR FRAME HARNESS
IN-TANK HARNESS
SOLENOID HARNESS
IN-BED FUEL TANK JUMPER

100153a

## F-250/350 Pickup, In-Bed Tank Wiring Harnesses and Connector Layout

APPROXIMATE LOCATION OF LPA SYSTEM HARNESSES AND CONNECTORS

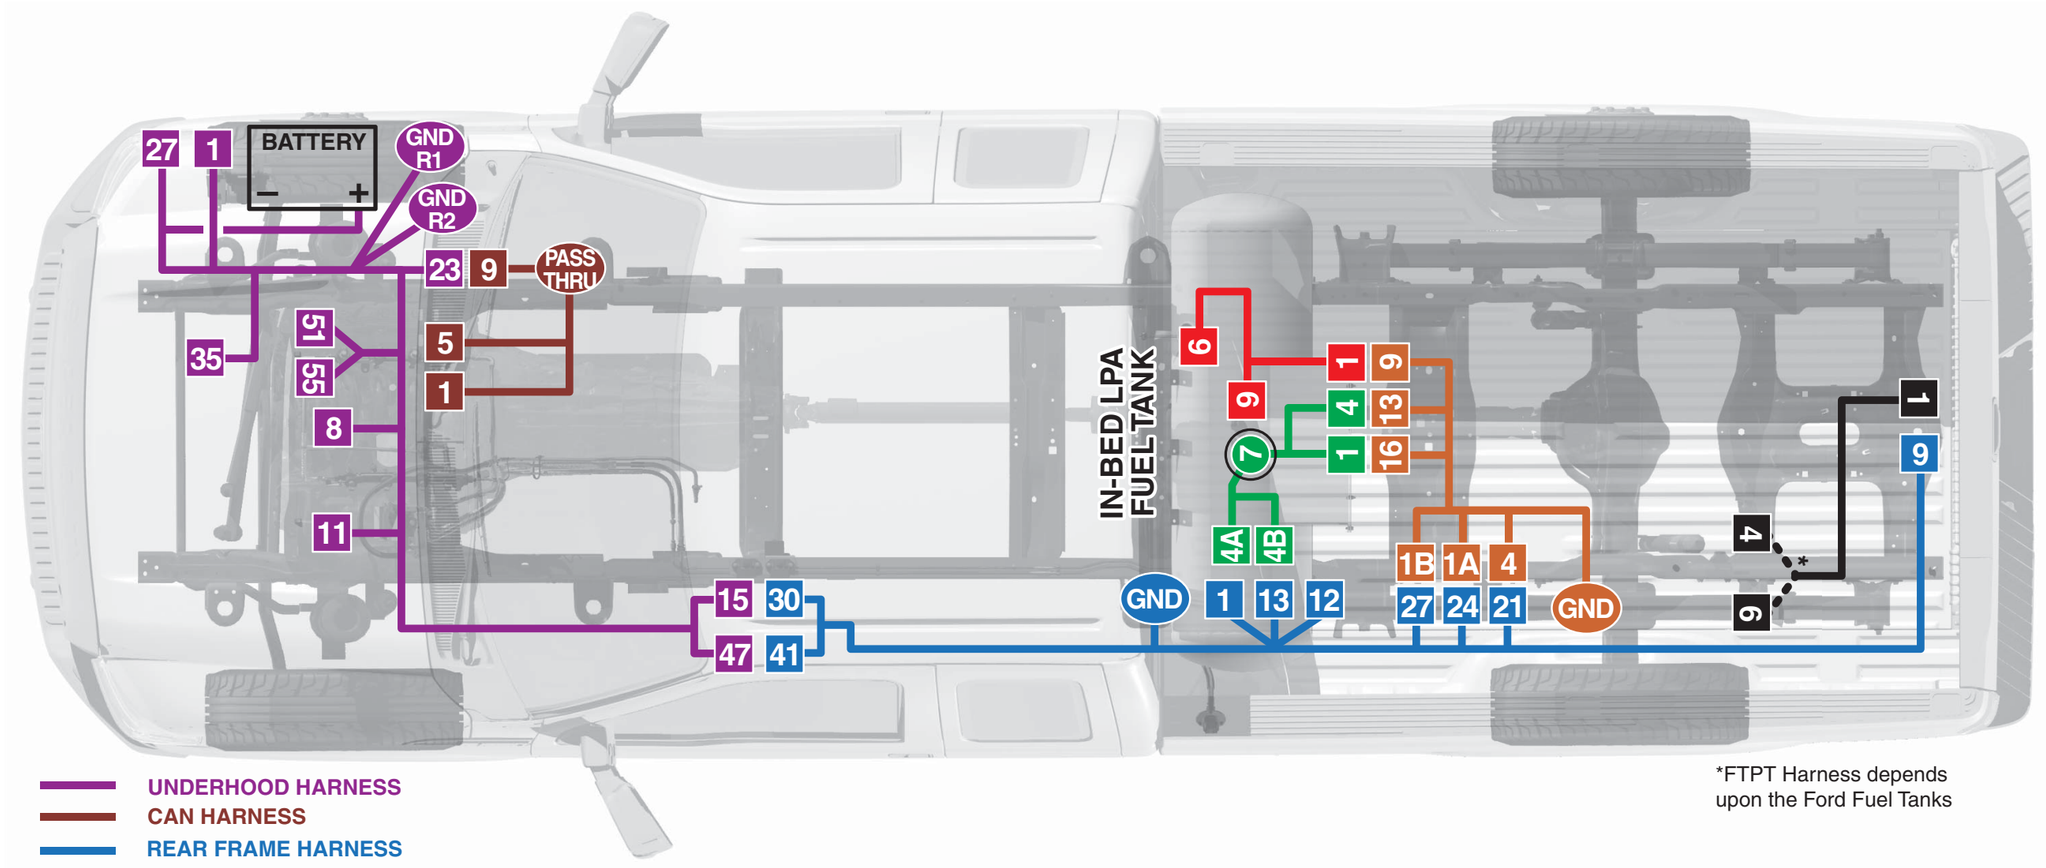


UNDERHOOD HARNESS
CAN HARNESS
REAR FRAME HARNESS
IN-TANK HARNESS
SOLENOID HARNESS
IN-BED FUEL TANK JUMPER
FTPT JUMPER HARNESS

*FTPT Harness depends upon the Ford Fuel Tanks

100187a

## F-650 Chassis Cab Wiring Harness and Connector Layout

APPROXIMATE LOCATION OF LPA SYSTEM HARNESSES AND CONNECTORS

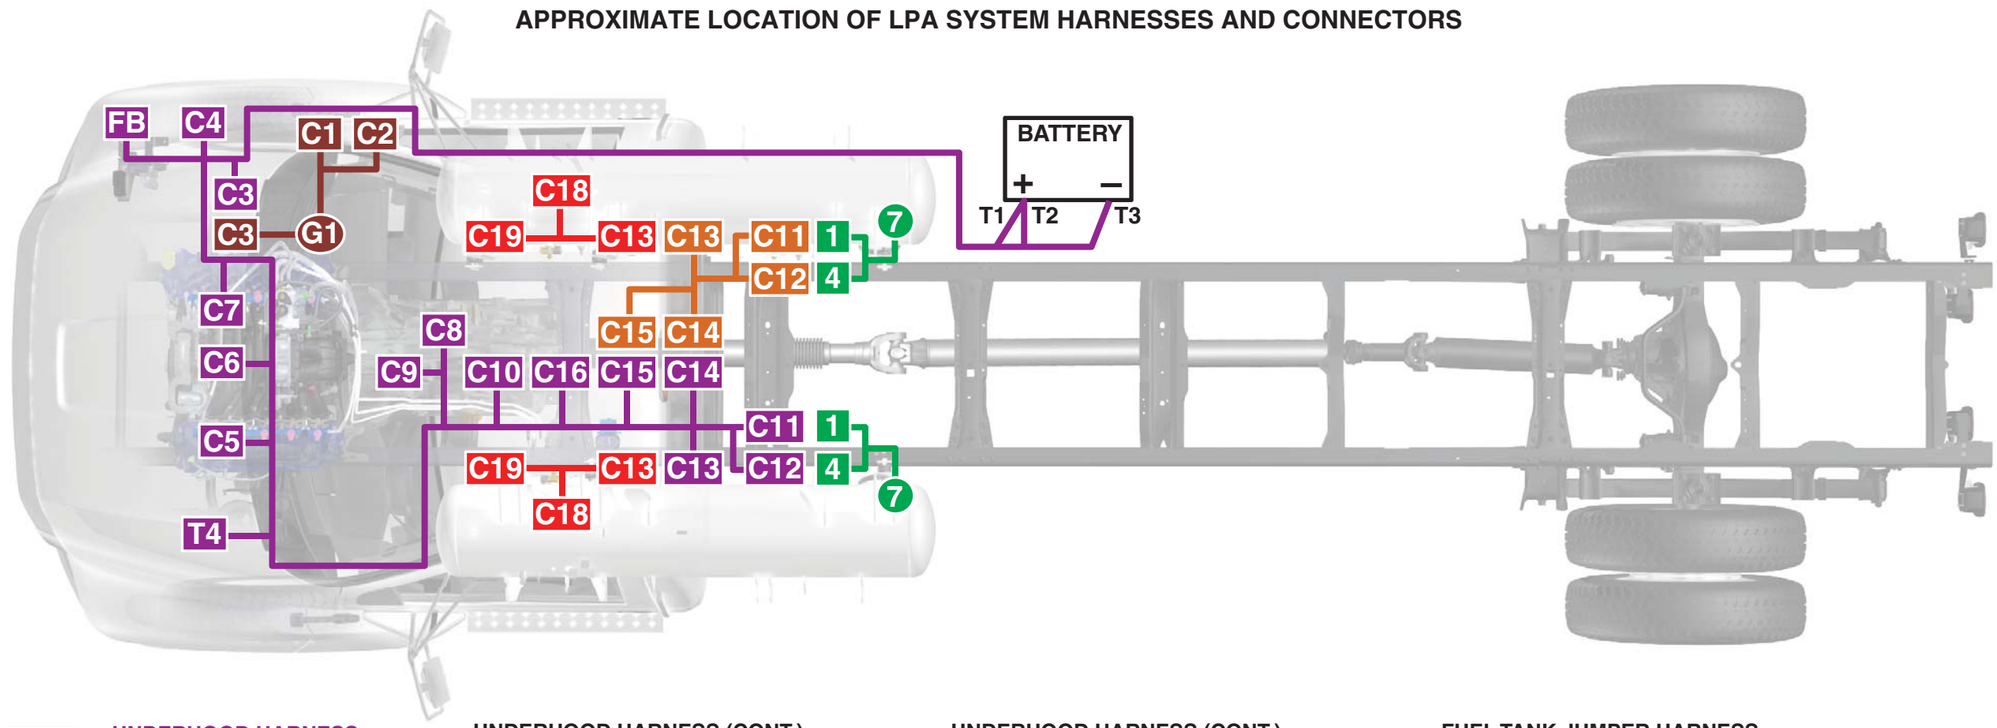


- UNDERHOOD HARNESS
- IN-TANK HARNESS
- TANK SOLENOID HARNESS
- FUEL TANK JUMPER HARNESS
- CAN HARNESS

**IN-TANK HARNESS (LH AND RH)**

1 FUEL PUMP #1 INLINE 2-PIN
4 FUEL PUMP #2 INLINE 2-PIN
7 GROMMET

**UNDERHOOD HARNESS**

C3 UNDERHOOD/CAN INLINE CONNECTOR 2-PIN
C4 SRM 46-PIN

**UNDERHOOD HARNESS (CONT.)**

C5 IPTS 4-PIN
C6 FRPCM 6-PIN
C7 FLIM 4-PIN
C8 FORD EFPR 8-PIN
C9 RCT EFPR 8-PIN
C10 TO FORD INLINE CONNECTOR 8-PIN
C11 UNDERHOOD/IN-TANK FP#1 INLINE (LEFT TANK) 2-PIN
C12 UNDERHOOD/IN-TANK FP#2 INLINE (LEFT TANK) 2-PIN
C13 TANK SOLENOID INLINE CONNECTOR (LEFT TANK) 4-PIN
C14 UNDERHOOD/FUEL TANK JUMPER INLINE CONNECTOR 2, 4-PIN

**UNDERHOOD HARNESS (CONT.)**

C15 UNDERHOOD/FUEL TANK JUMPER INLINE CONNECTOR 1, 4-PIN
C16 UNDERHOOD/FUEL PUMP AND SENDER INLINE CONNECTOR 4-PIN
FB AUX FUSE BOX
T1 PWR #1 RING TERMINAL
T2 PWR #2 RING TERMINAL
T3 GROUND RING TERMINAL
T4 TERMINAL INSERTED IN SPLICE PACK

**TANK SOLENOID HARNESS (LH AND RH)**

C13 UNDERHOOD/TANK SOLENOID INLINE CONNECTOR 4-PIN
C18 SUPPLY VALVE SOLENOID 2-PIN
C19 FUEL SENDER 2-PIN

**FUEL TANK JUMPER HARNESS**

C11 FUEL TANK JUMPER/IN-TANK INLINE 1 (RIGHT TANK) 2-PIN
C12 FUEL TANK JUMPER/IN-TANK INLINE 2 (RIGHT TANK) 2-PIN
C13 FUEL TANK JUMPER/TANK SOLENOID INLINE (RIGHT TANK) 4-PIN
C14 FUEL TANK JUMPER/UNDERHOOD INLINE 2, 4-PIN
C15 FUEL TANK JUMPER/UNDERHOOD INLINE 1, 4-PIN

**CAN HARNESS**

C1 BODY MODULE 12-PIN
C2 TO FORD HARNESS CONNECTOR 12-PIN
C3 CAN/UNDERHOOD IN-LINE CONNECTOR 2-PIN
G1 GROMMET

100254a

## F-450/550 Roush Wiring Harnesses (Note: This wiring harness print does not include the attachment locations for the ROUSH CleanTech tank jumper harness to the rear chassis harness.)

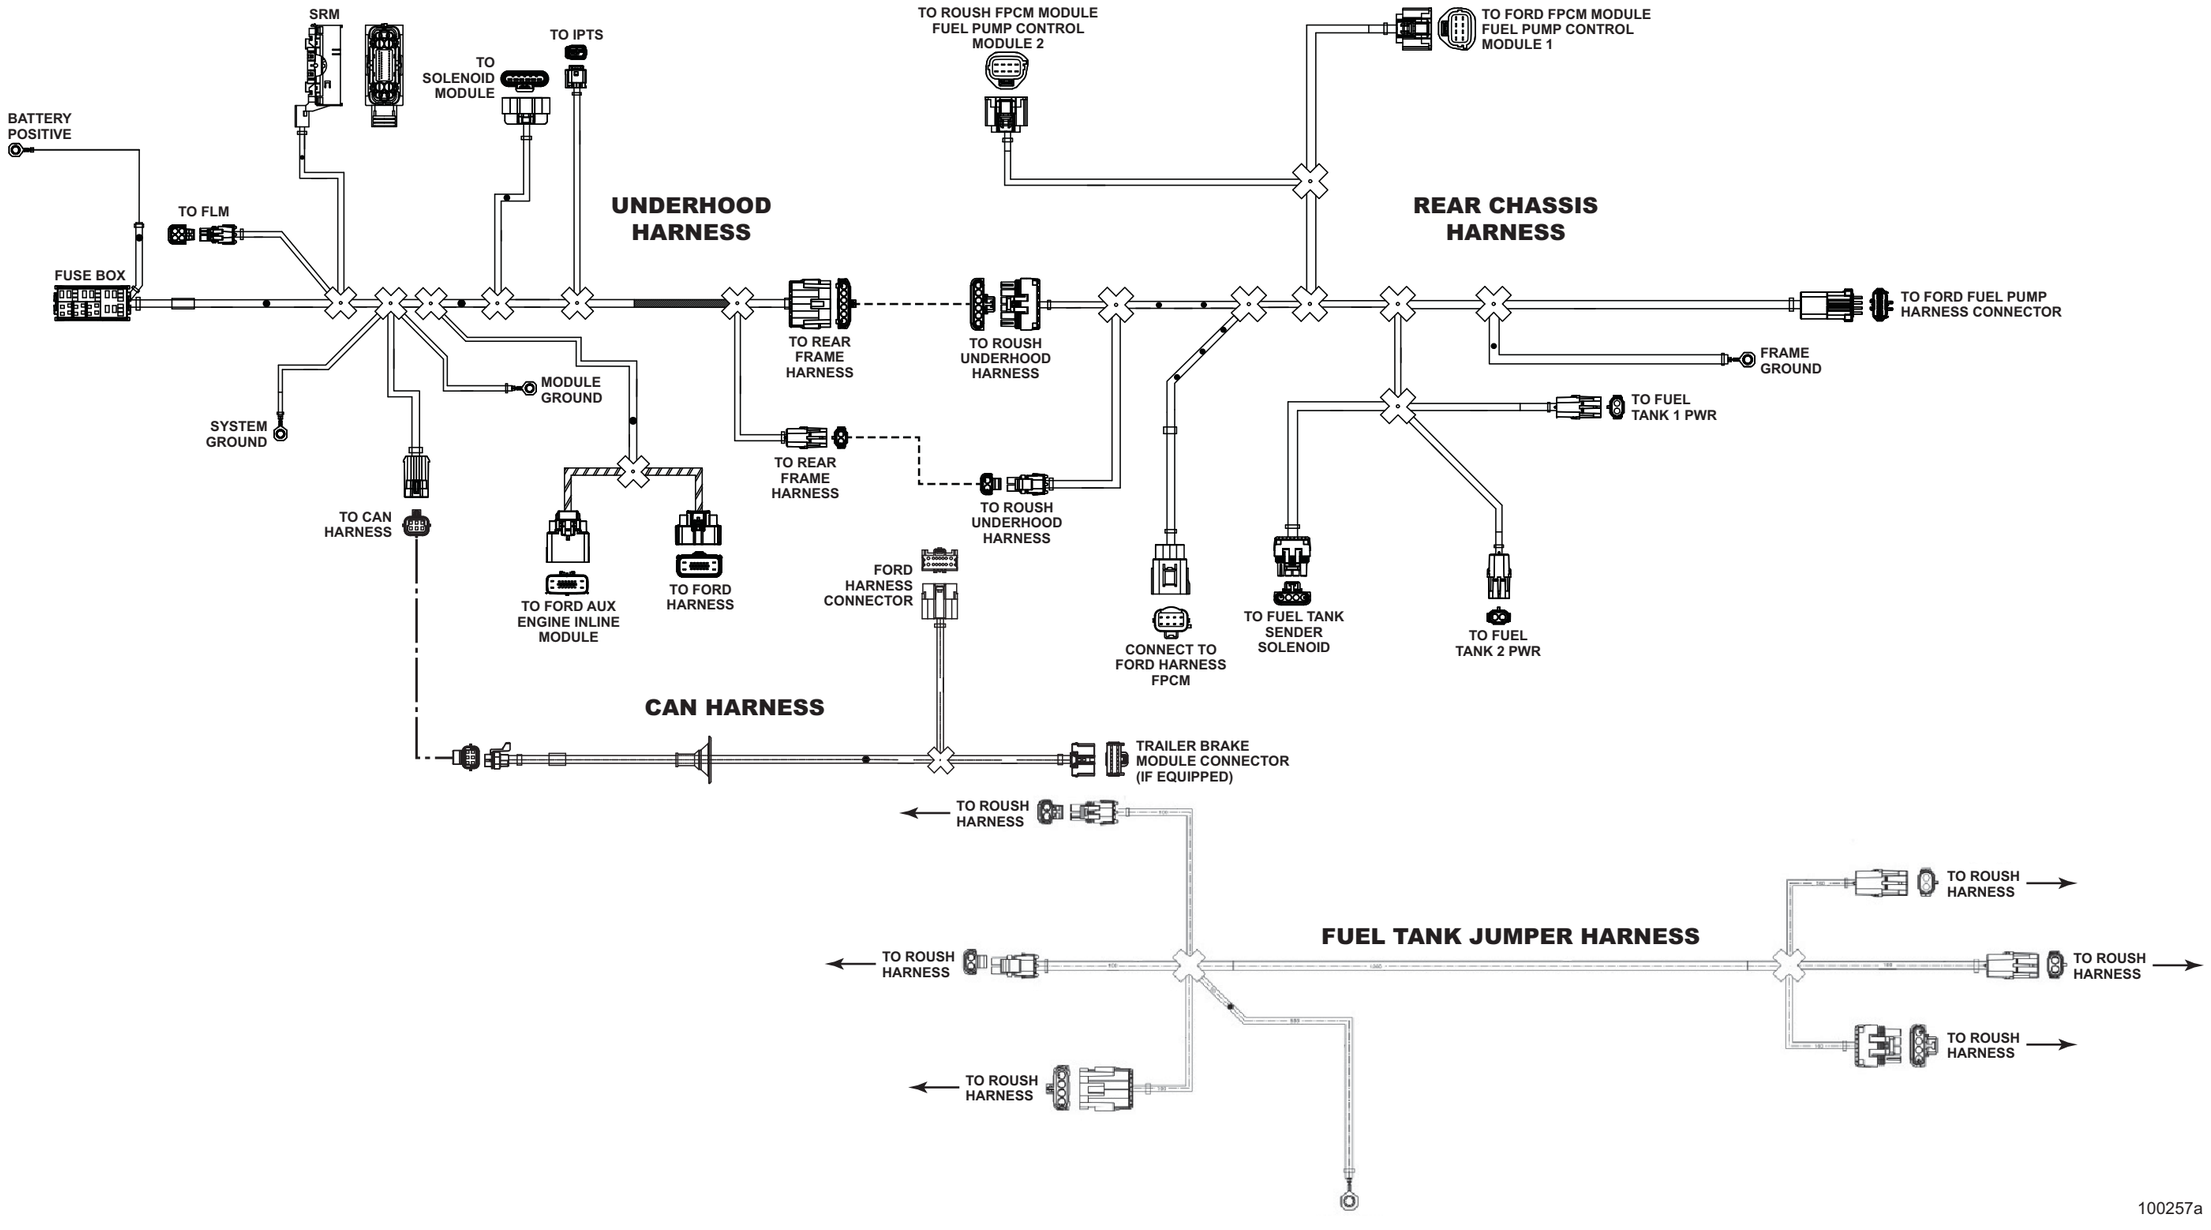

## F-650 Chassis Cab, Roush Wiring Harnesses

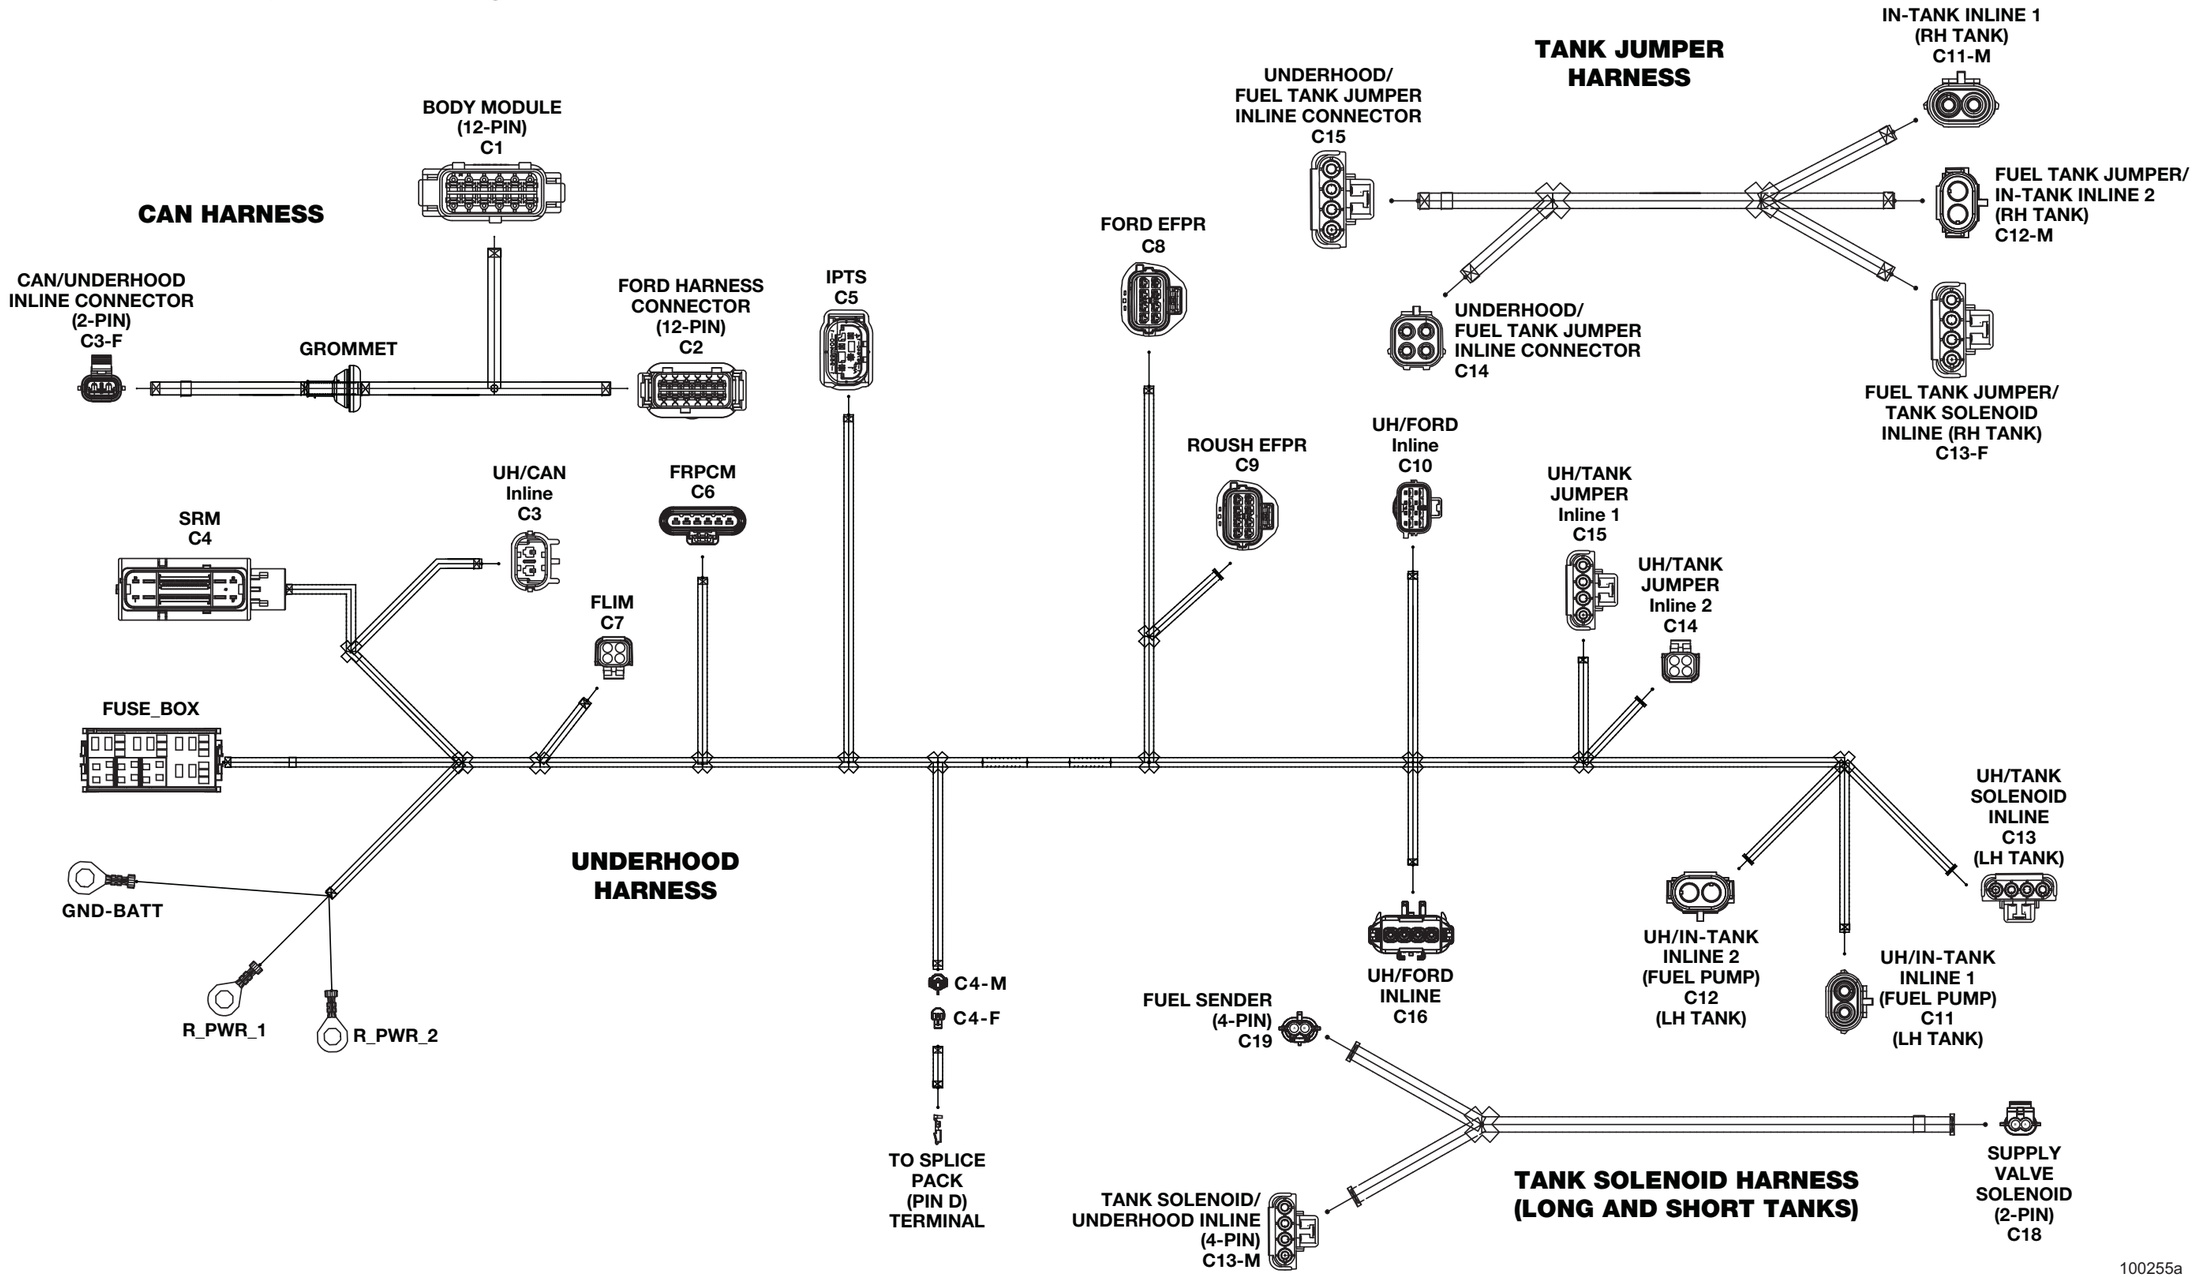
CAN HARNESS
BODY MODULE (12-PIN) C1
CAN/UNDERHOOD INLINE CONNECTOR (2-PIN) C3-F
GROMMET
FORD HARNESS CONNECTOR (12-PIN) C2
IPTS C5
SRM C4
UH/CAN Inline C3
FRPCM C6
FLIM C7
FUSE_BOX
GND-BATT
R_PWR_1
R_PWR_2
UNDERHOOD HARNESS
C4-M
C4-F
TO SPLICE PACK (PIN D) TERMINAL
TANK JUMPER HARNESS
UNDERHOOD/ FUEL TANK JUMPER INLINE CONNECTOR C15
IN-TANK INLINE 1 (RH TANK) C11-M
FUEL TANK JUMPER/ IN-TANK INLINE 2 (RH TANK) C12-M
UNDERHOOD/ FUEL TANK JUMPER INLINE CONNECTOR C14
FUEL TANK JUMPER/ TANK SOLENOID INLINE (RH TANK) C13-F
FORD EFPR C8
ROUSH EFPR C9
UH/FORD Inline C10
UH/TANK JUMPER Inline 1 C15
UH/TANK JUMPER Inline 2 C14
UH/TANK SOLENOID INLINE C13 (LH TANK)
UH/IN-TANK INLINE 2 (FUEL PUMP) C12 (LH TANK)
UH/IN-TANK INLINE 1 (FUEL PUMP) C11 (LH TANK)
UH/FORD INLINE C16
FUEL SENDER (4-PIN) C19
TANK SOLENOID/ UNDERHOOD INLINE (4-PIN) C13-M
TANK SOLENOID HARNESS (LONG AND SHORT TANKS)
SUPPLY VALVE SOLENOID (2-PIN) C18

100255a

## F-53/59 Roush Wiring Harnesses

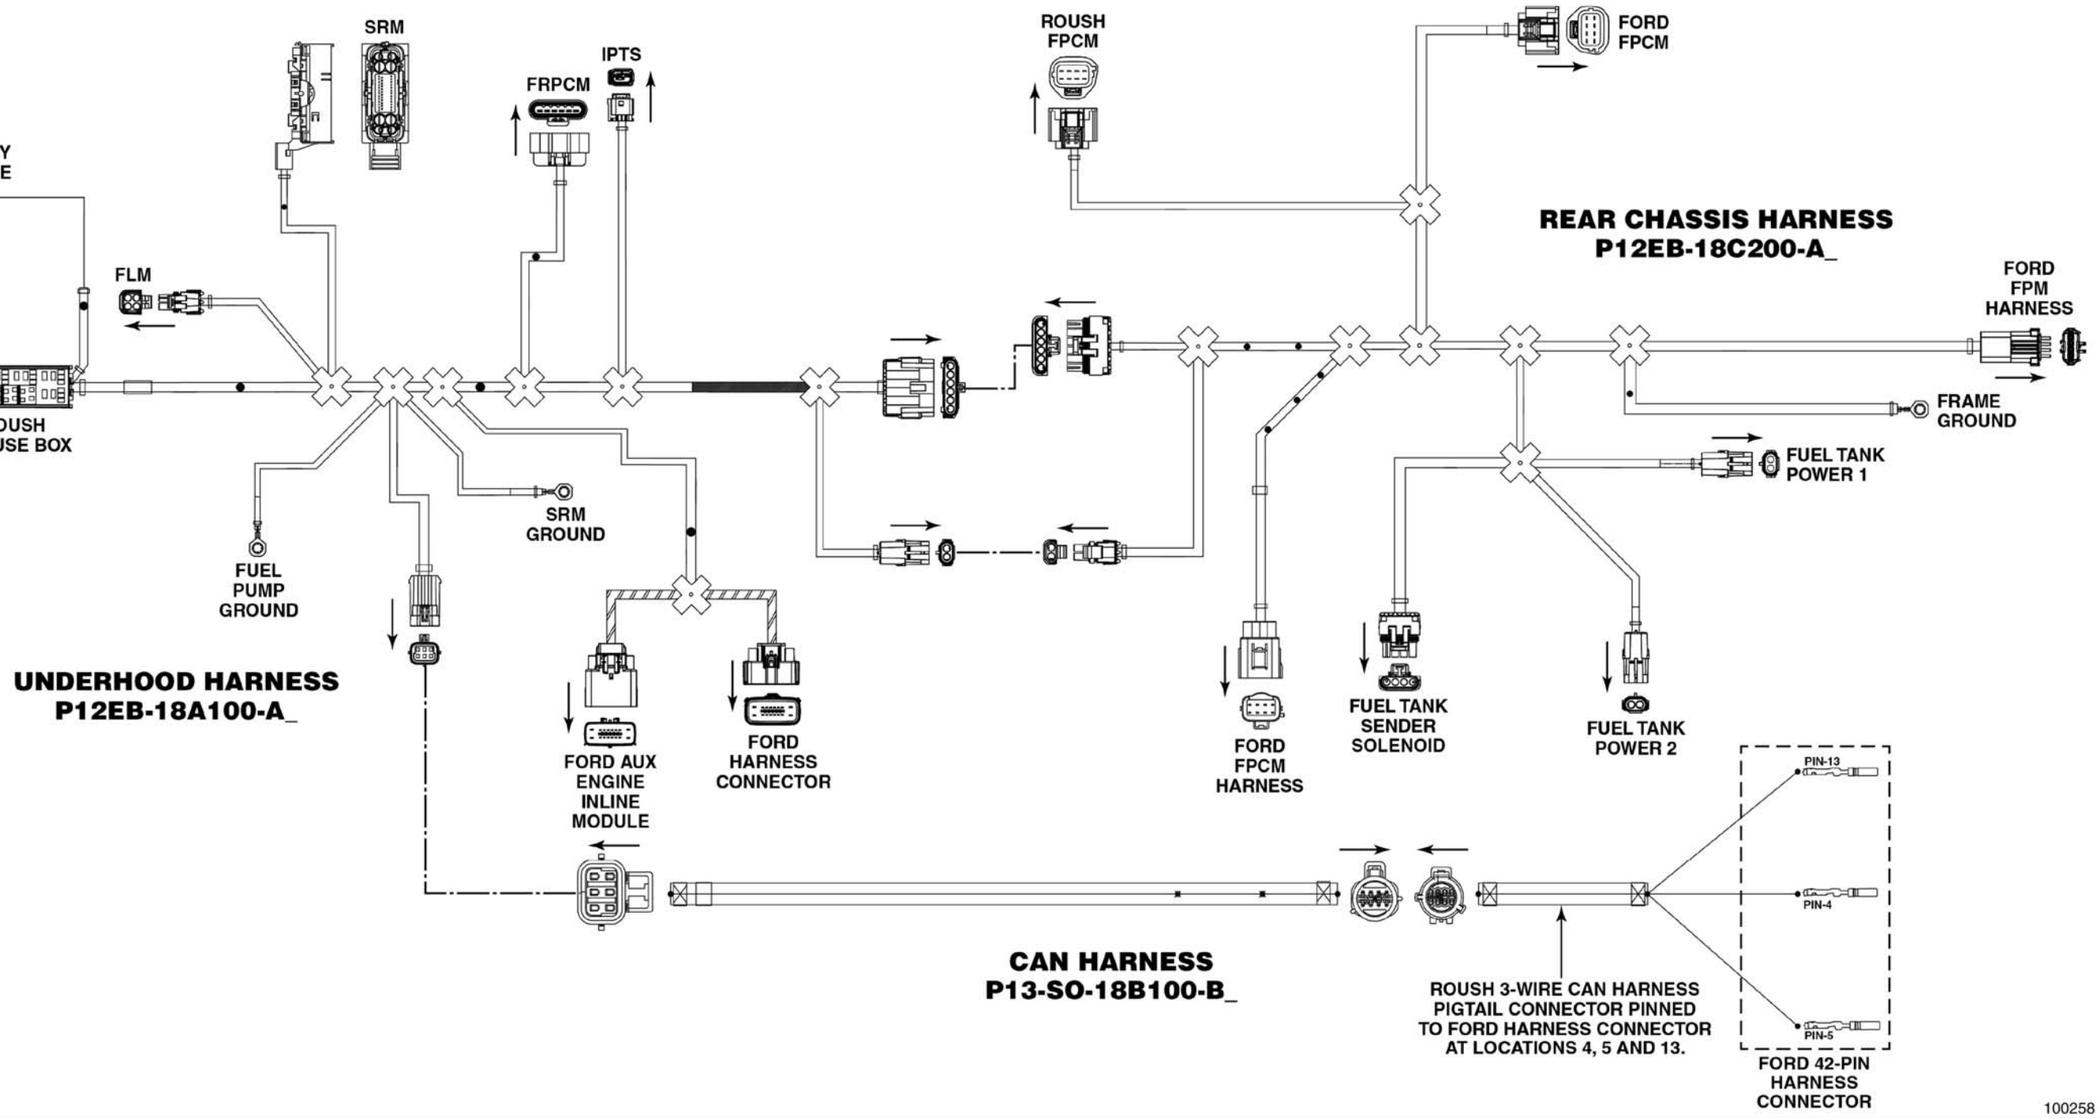

## E-Series, Extended Range and E-450 Electrical Schematic — Underhood Harness

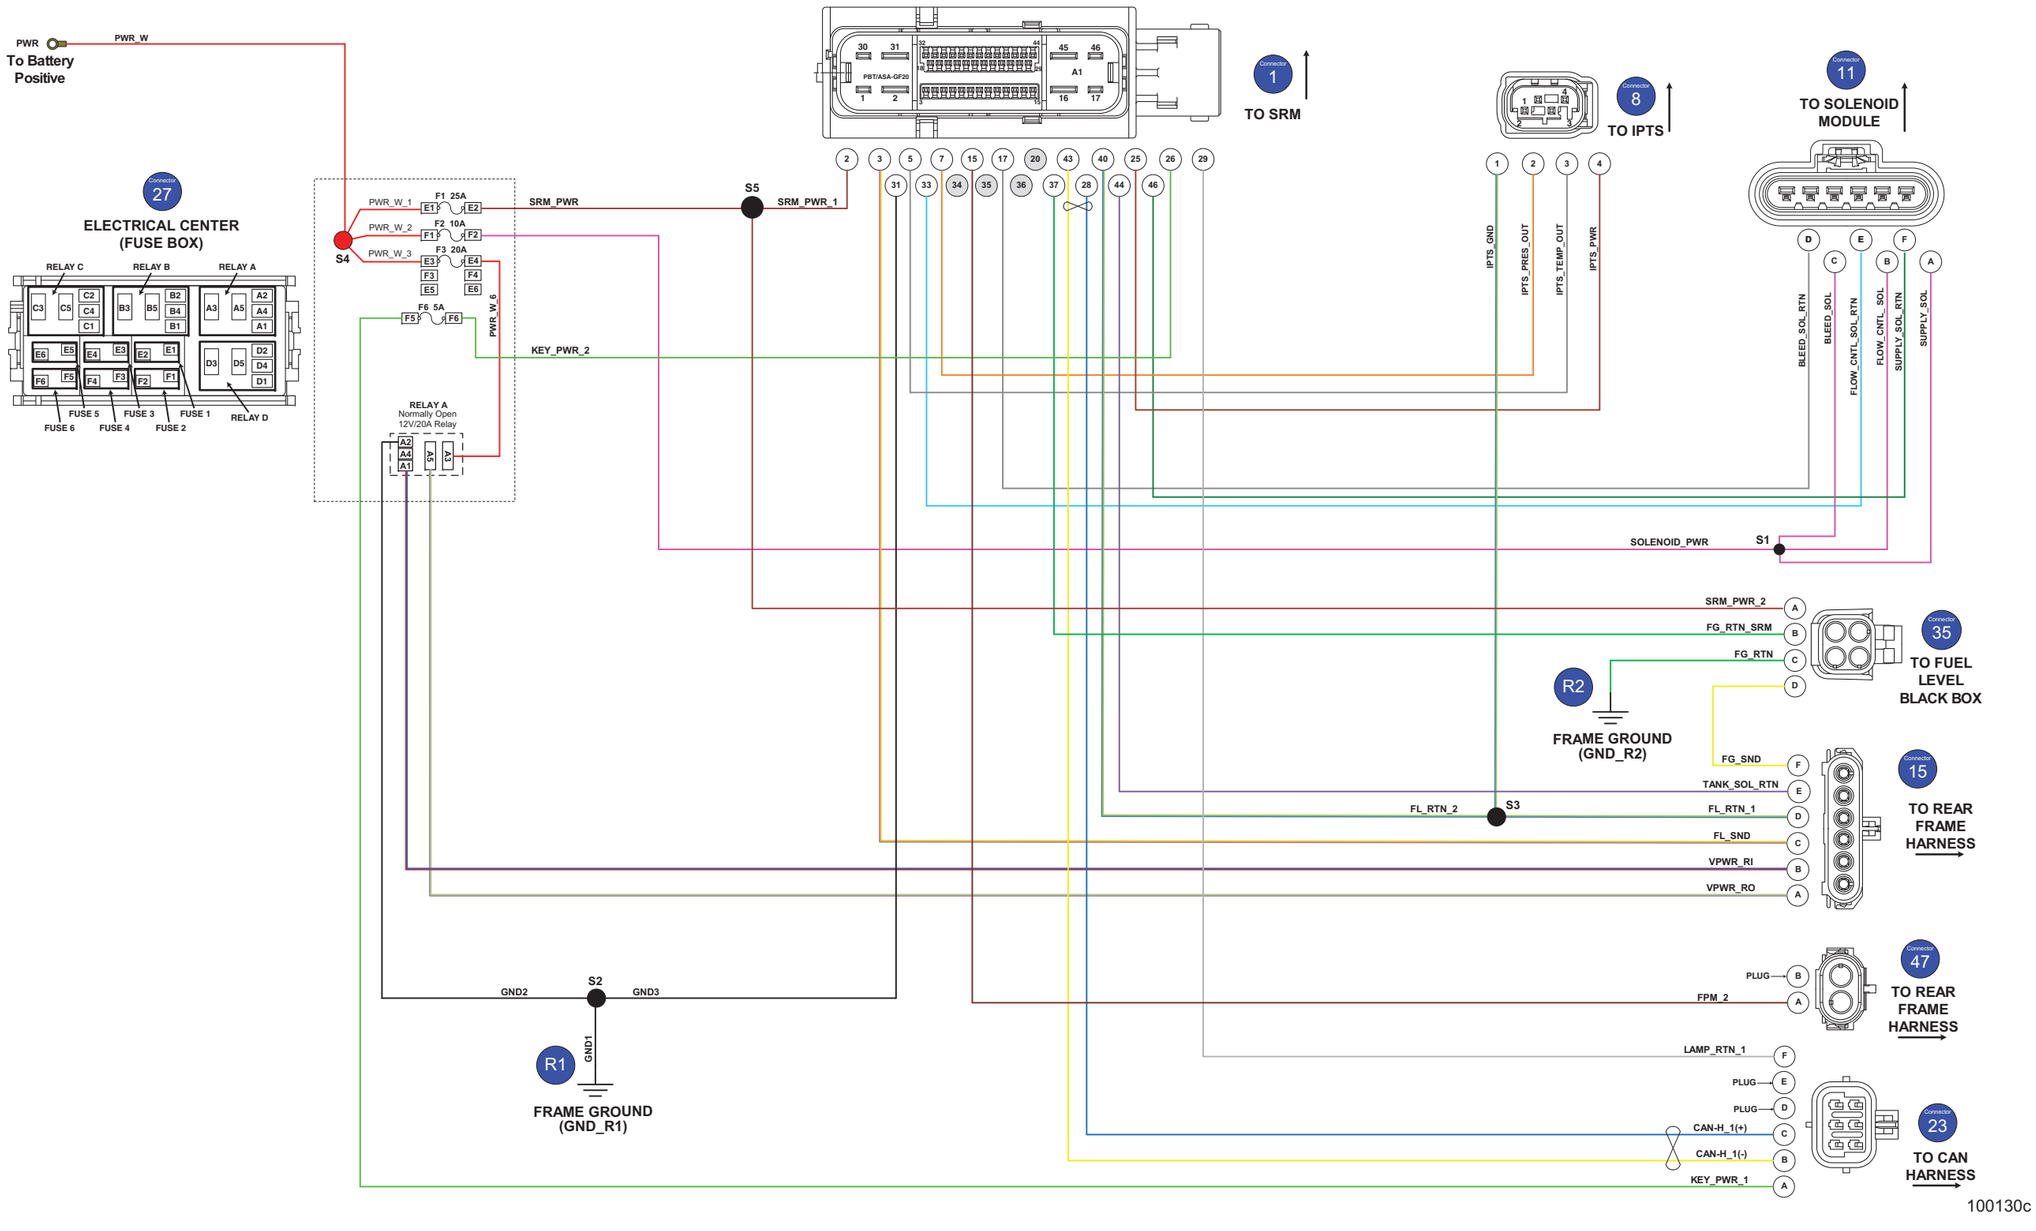

## E-Series, Extended Range and E-450 Electrical Schematic — CAN Bus Harness

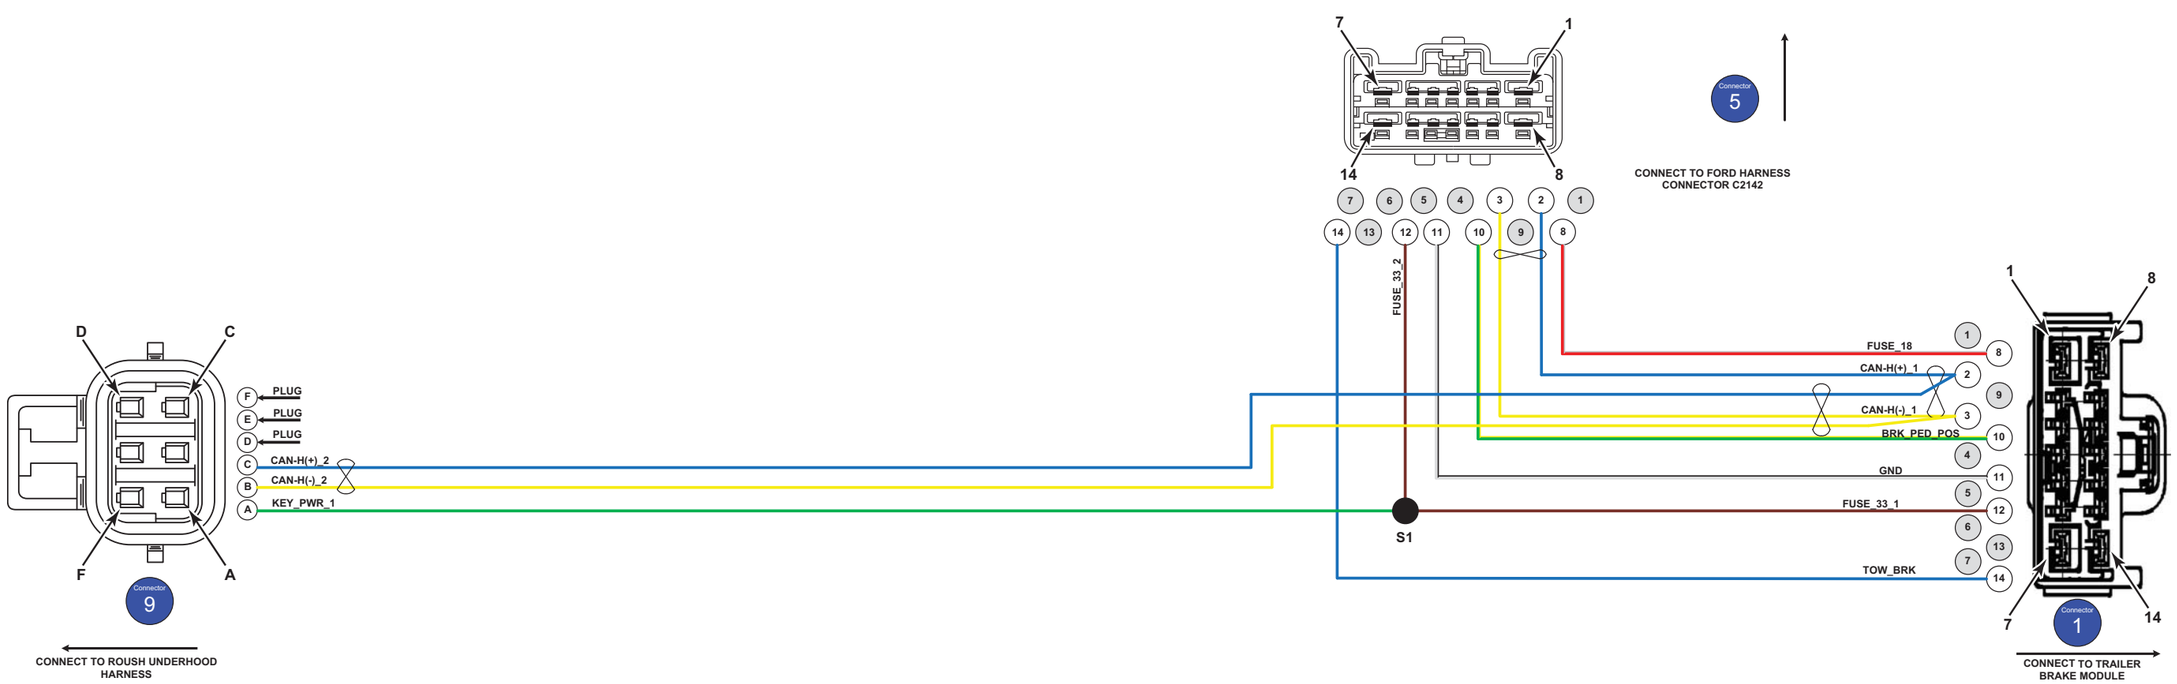


100131b

## E-Series, Extended Range and E-450 Electrical Schematic — Rear Frame Harness

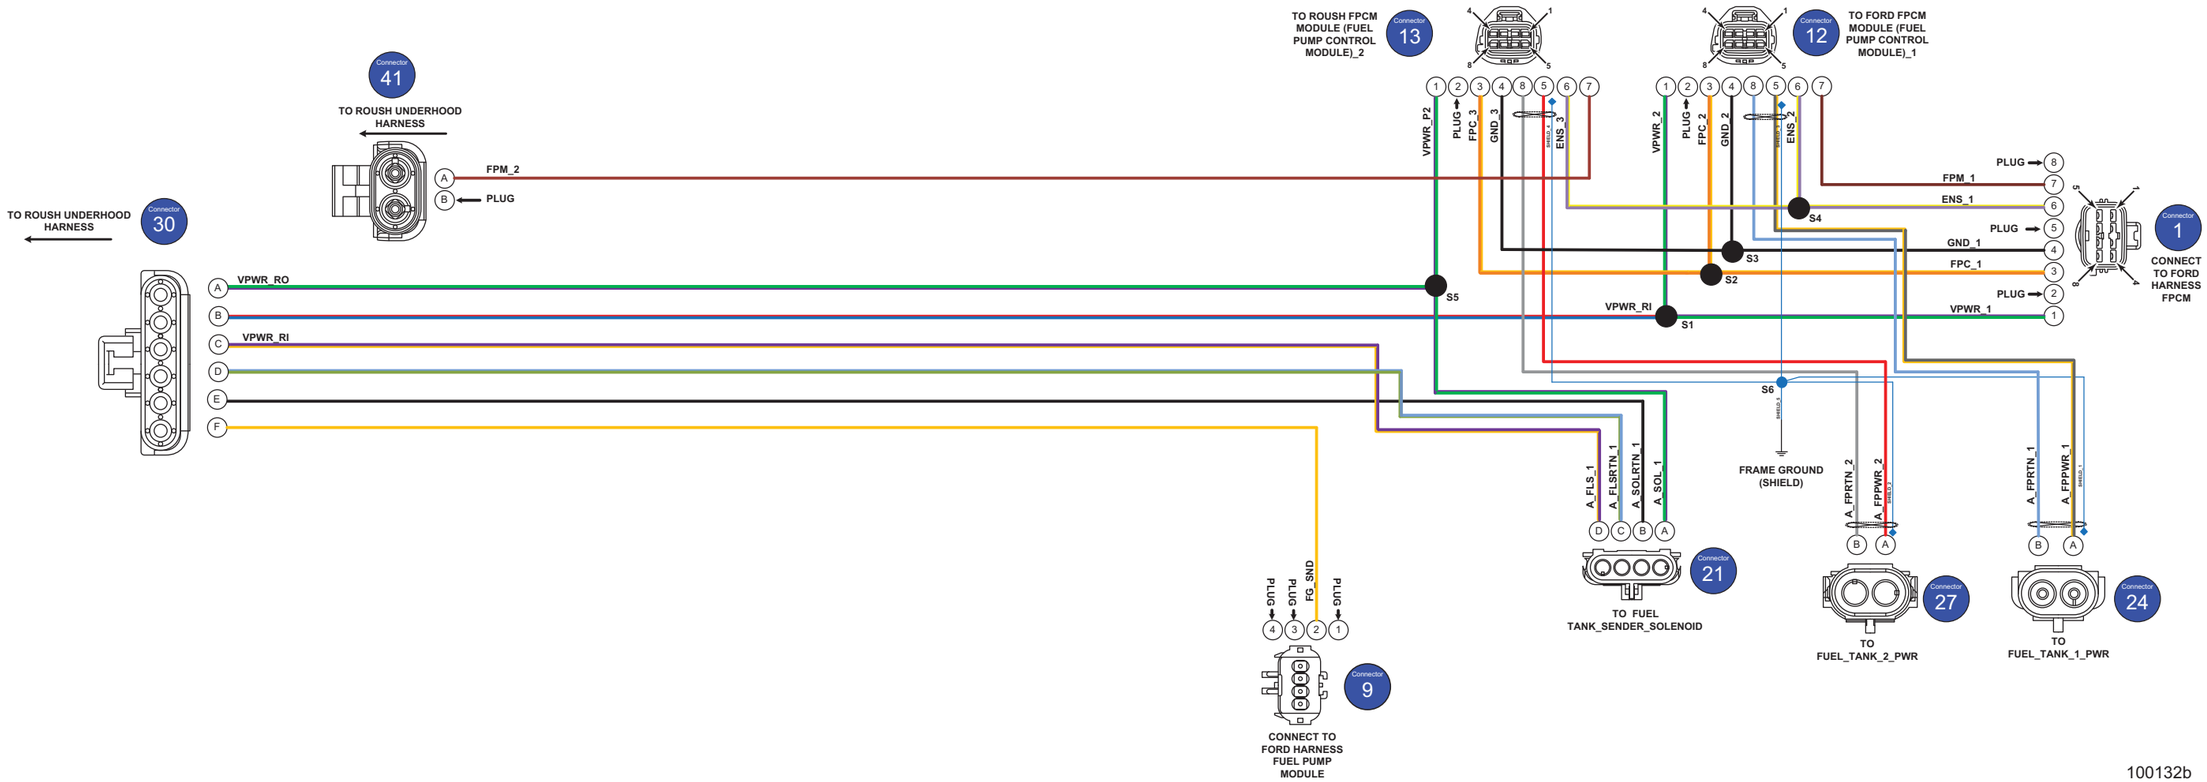


100132b

## E-Series, Extended Range and E-450 Electrical Schematic — In-Tank Harness

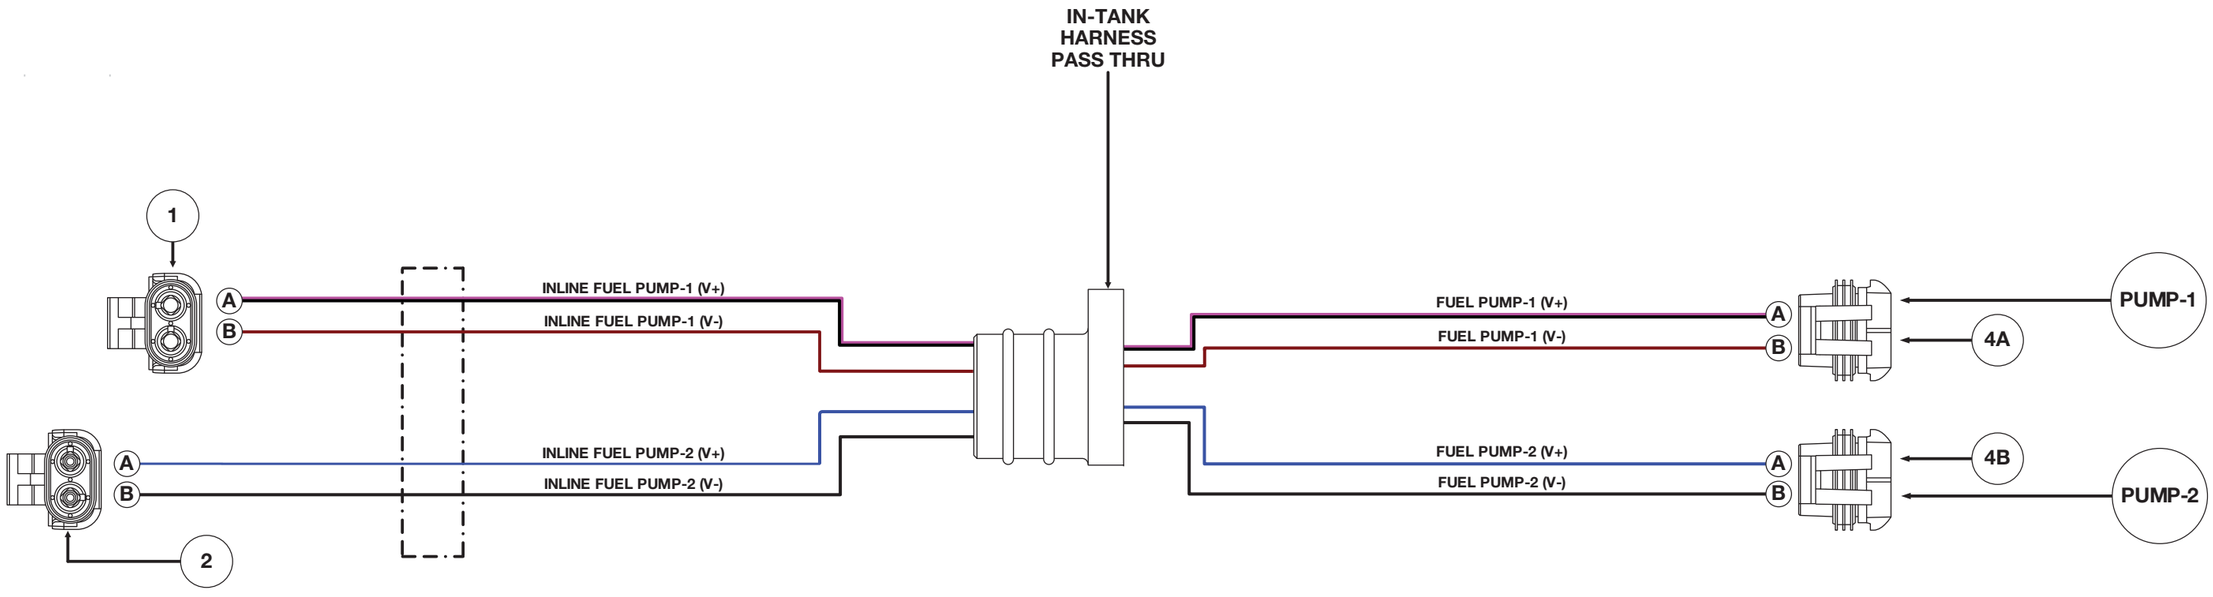


100133b

## E-Series, Extended Range and E-450 Electrical Schematic — Solenoid Harness

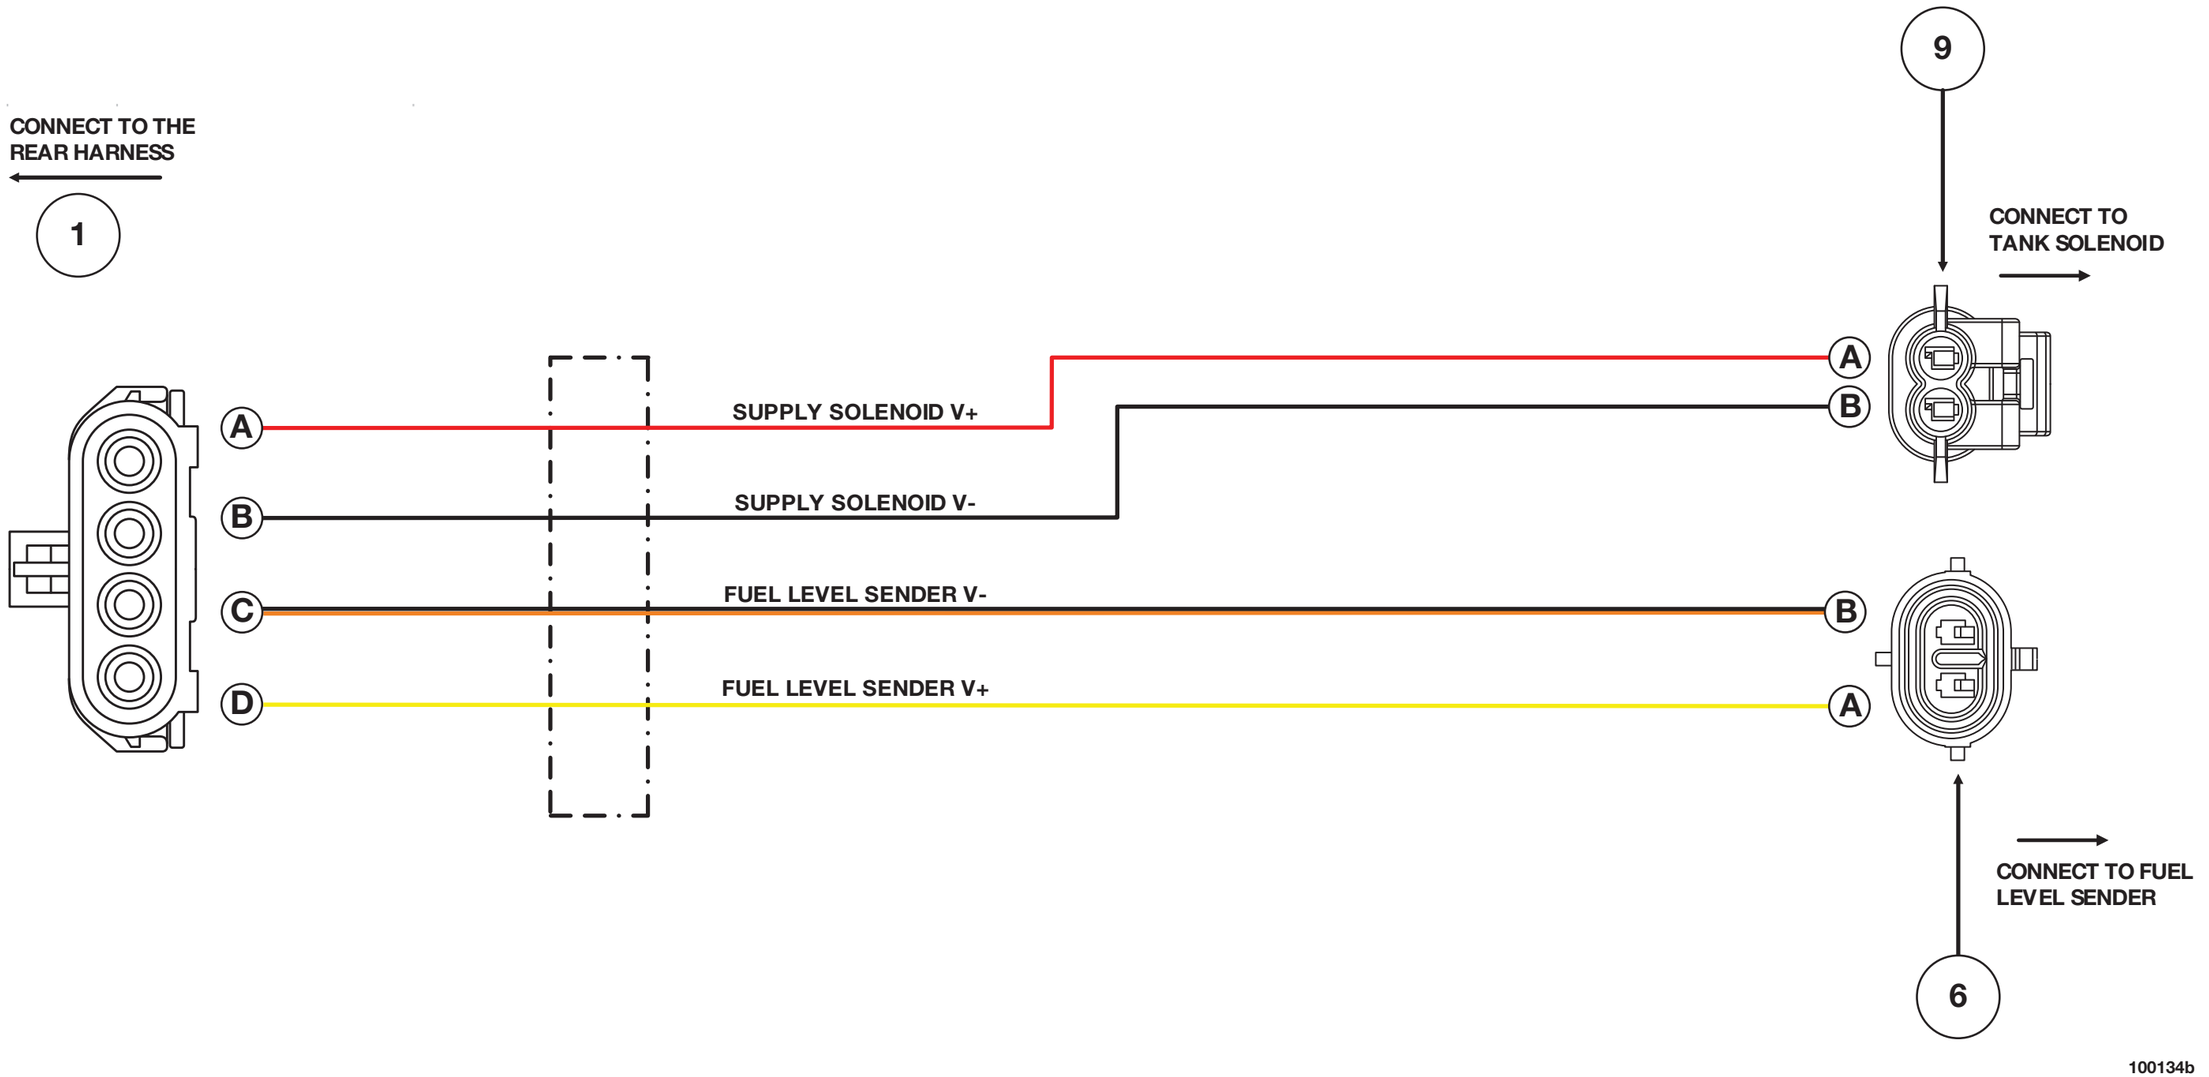

## E-450 Stripped Chassis CAN Harness

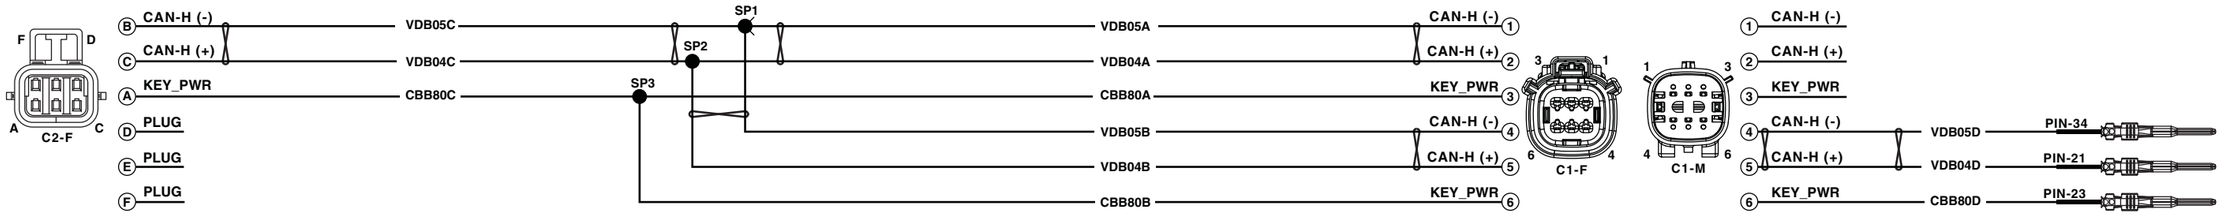


100262a

## F-250/350 Pickup, CAN Bus Jumper Harness Electrical Schematic

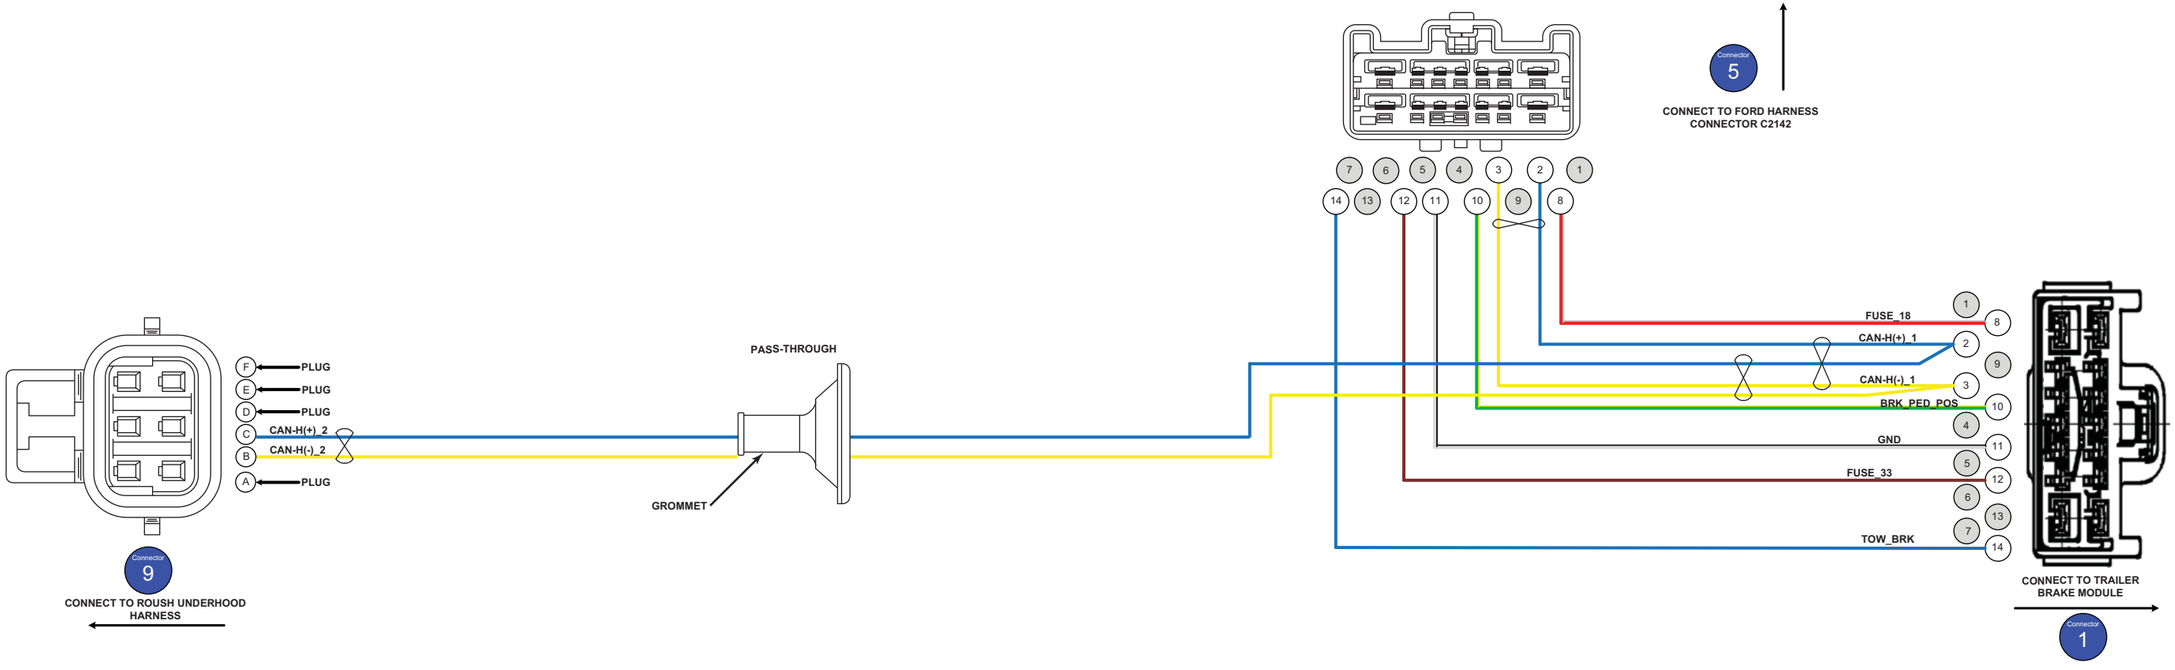


100189a

## F-250/350 Pickup, F-450/550 and F-650, Tank Solenoid Harness Electrical Schematic

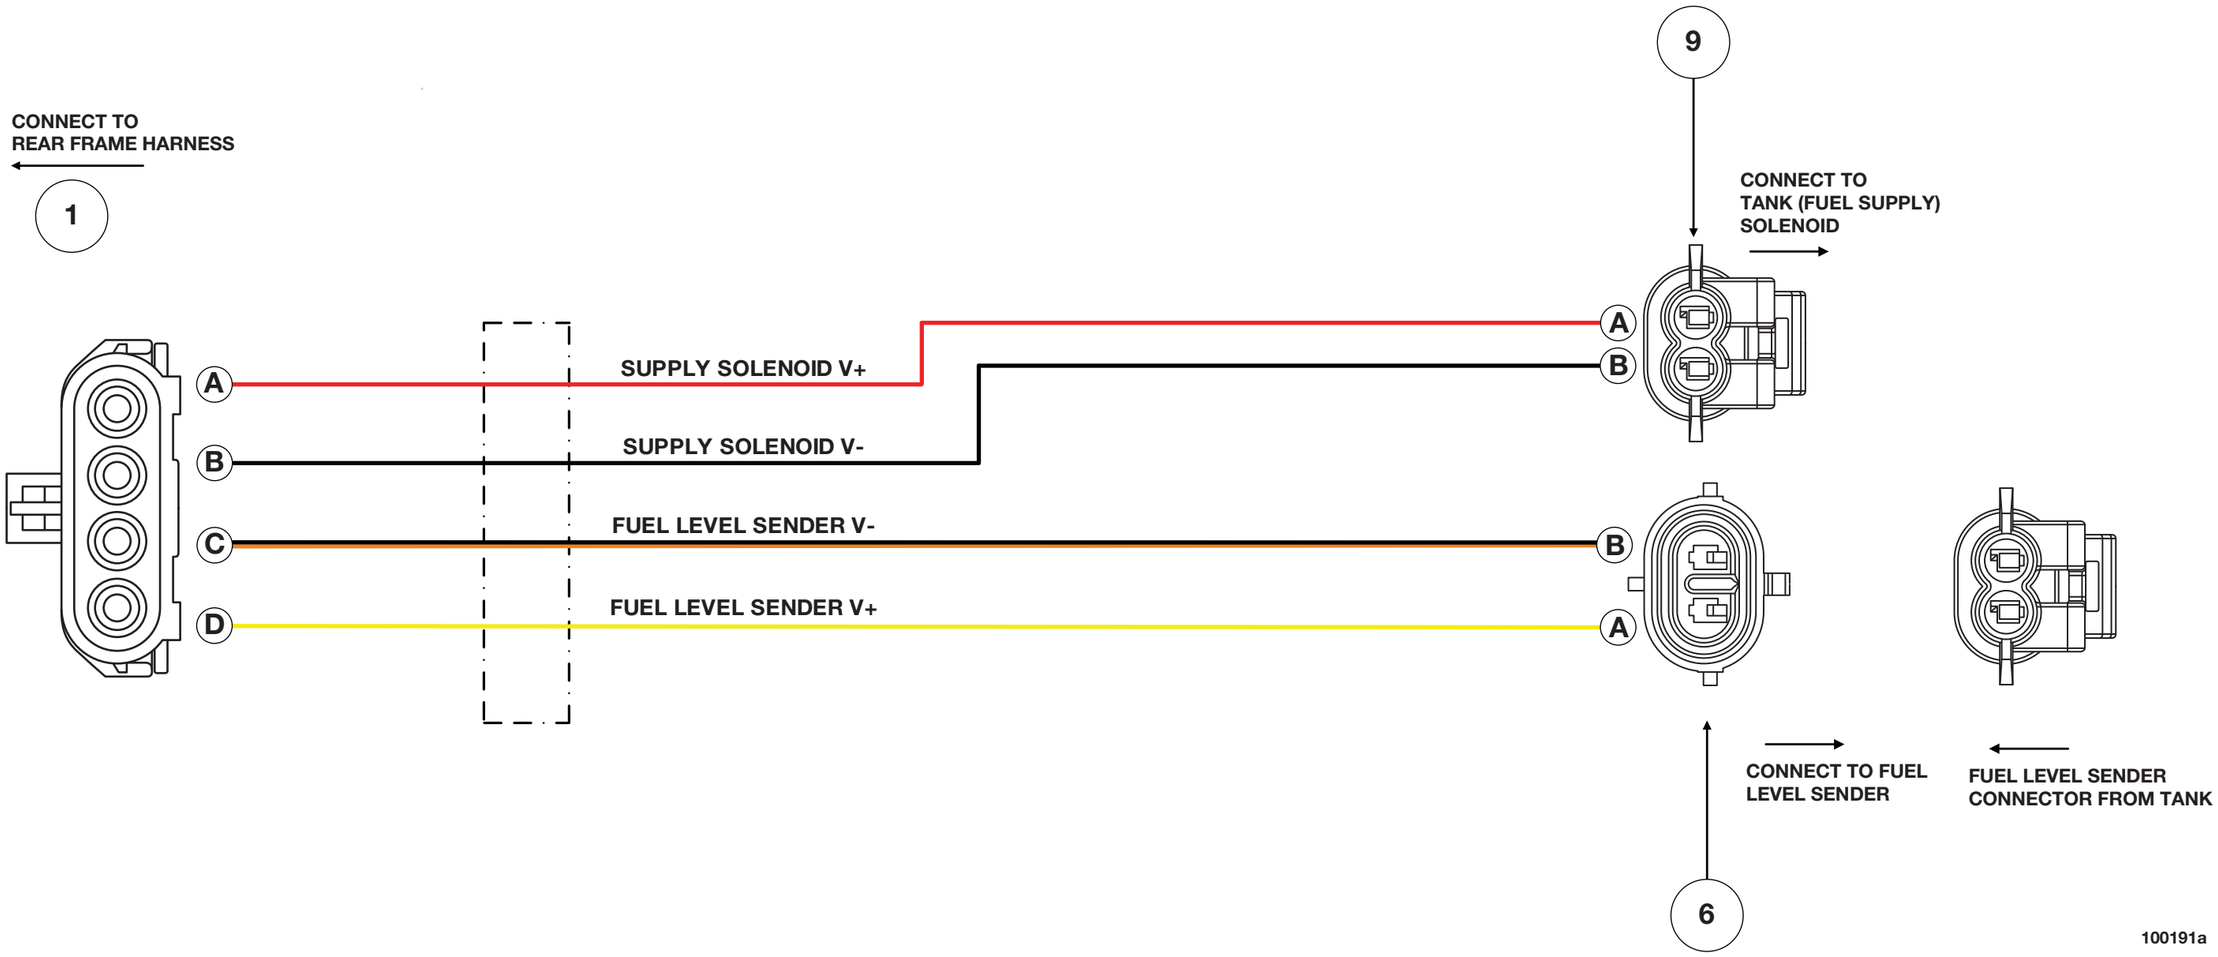

## F-250/350 Pickup, In-Bed Fuel Tank Jumper Harness Electrical Schematic

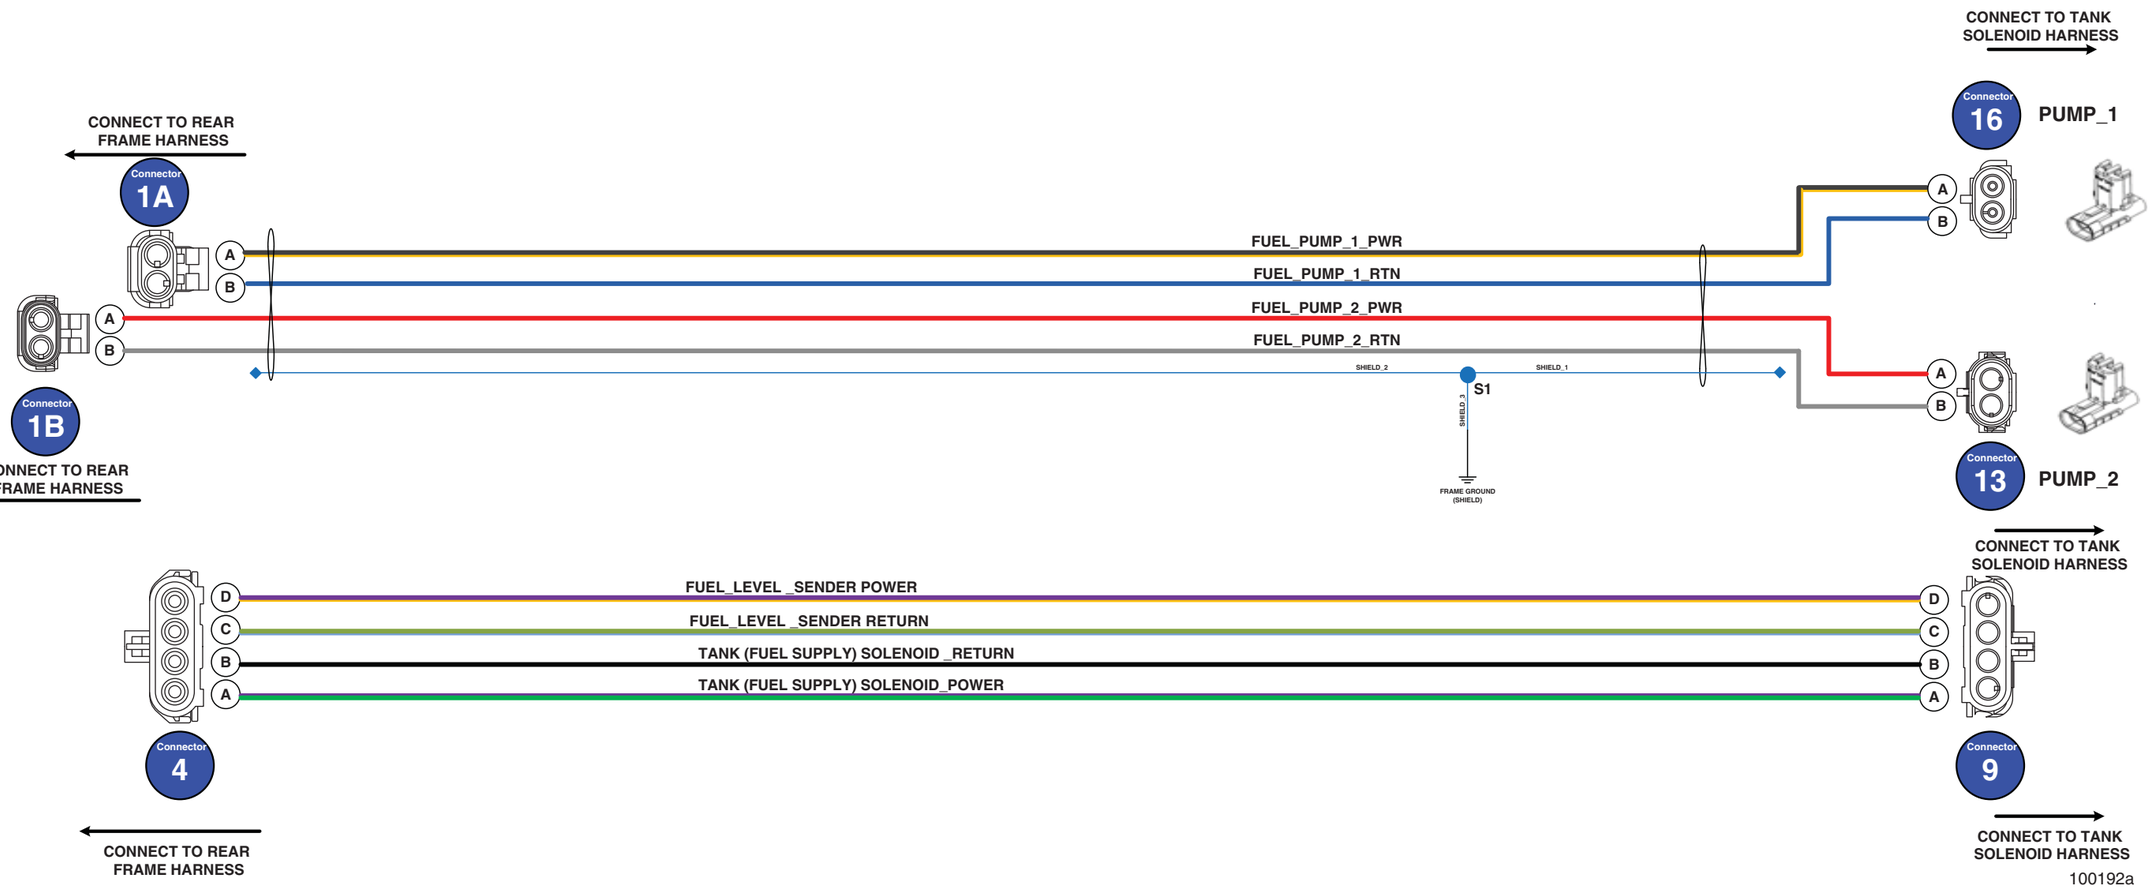

## F-250/350 Pickup, FTPT Jumper Harness Electrical Harness

100193a

## F-650 CAN Harness

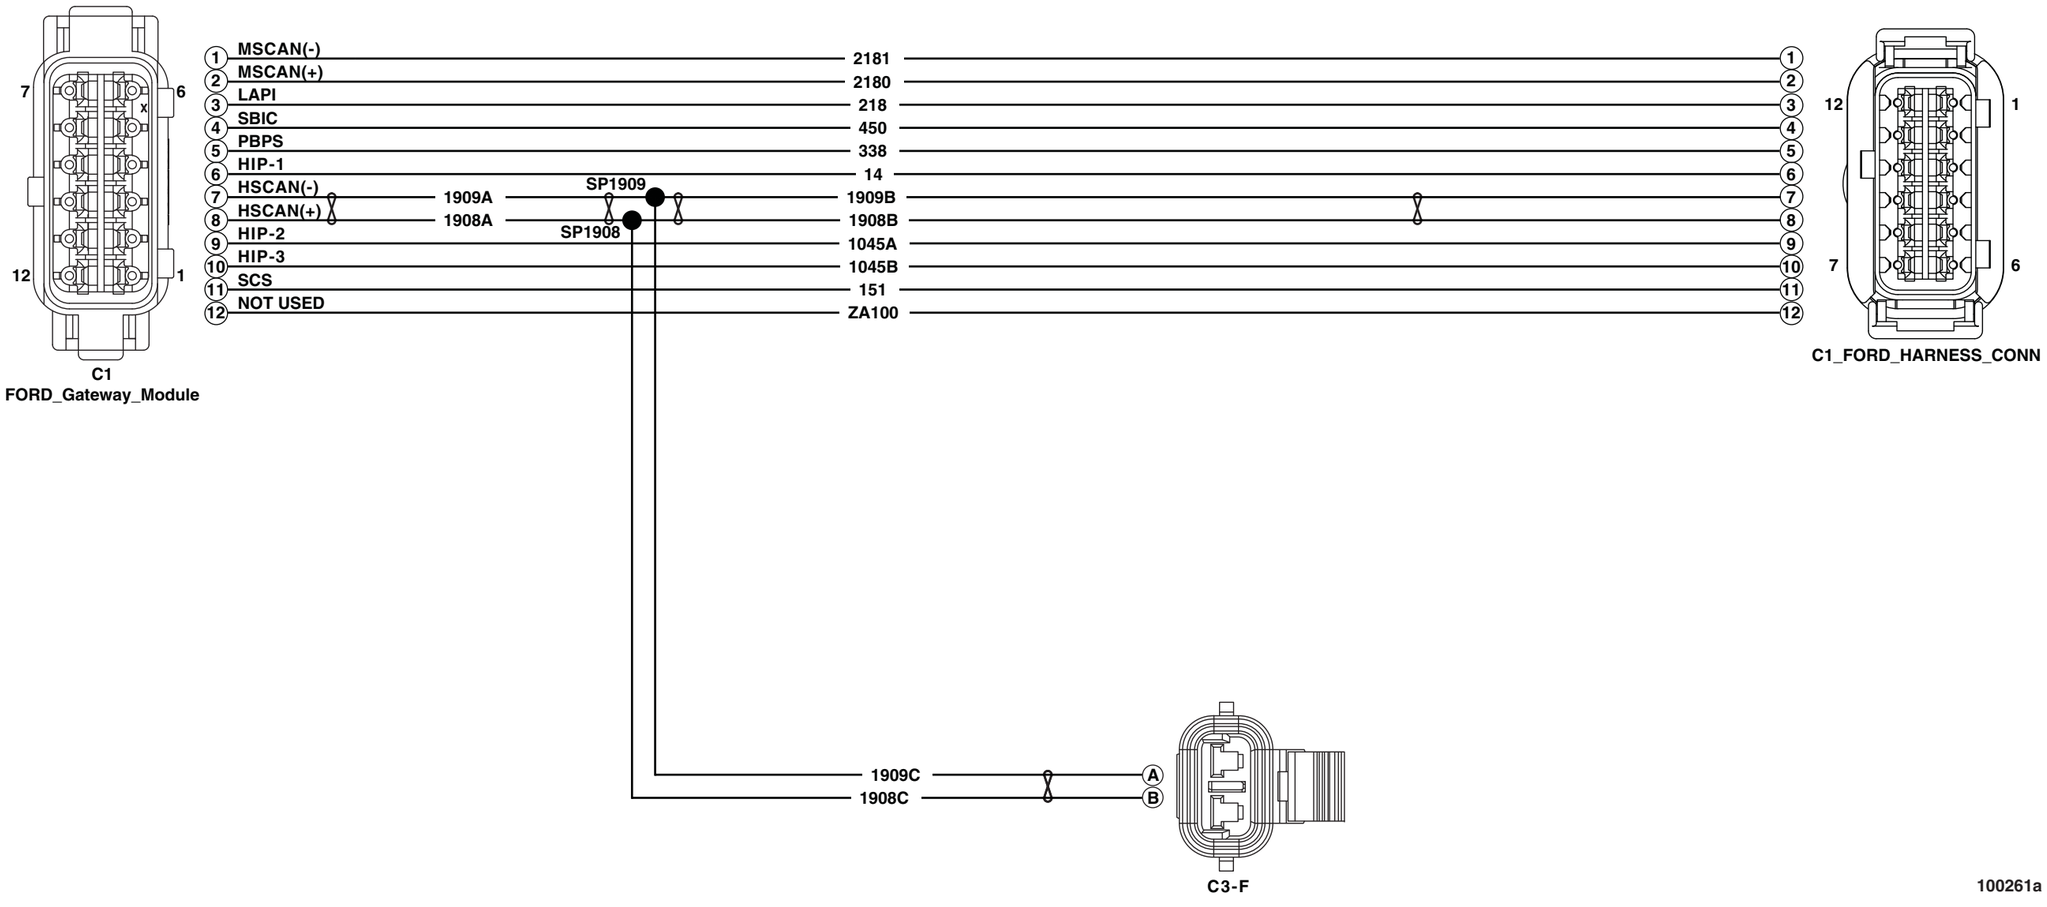

## F-650 Fuel Tank Jumper Harness

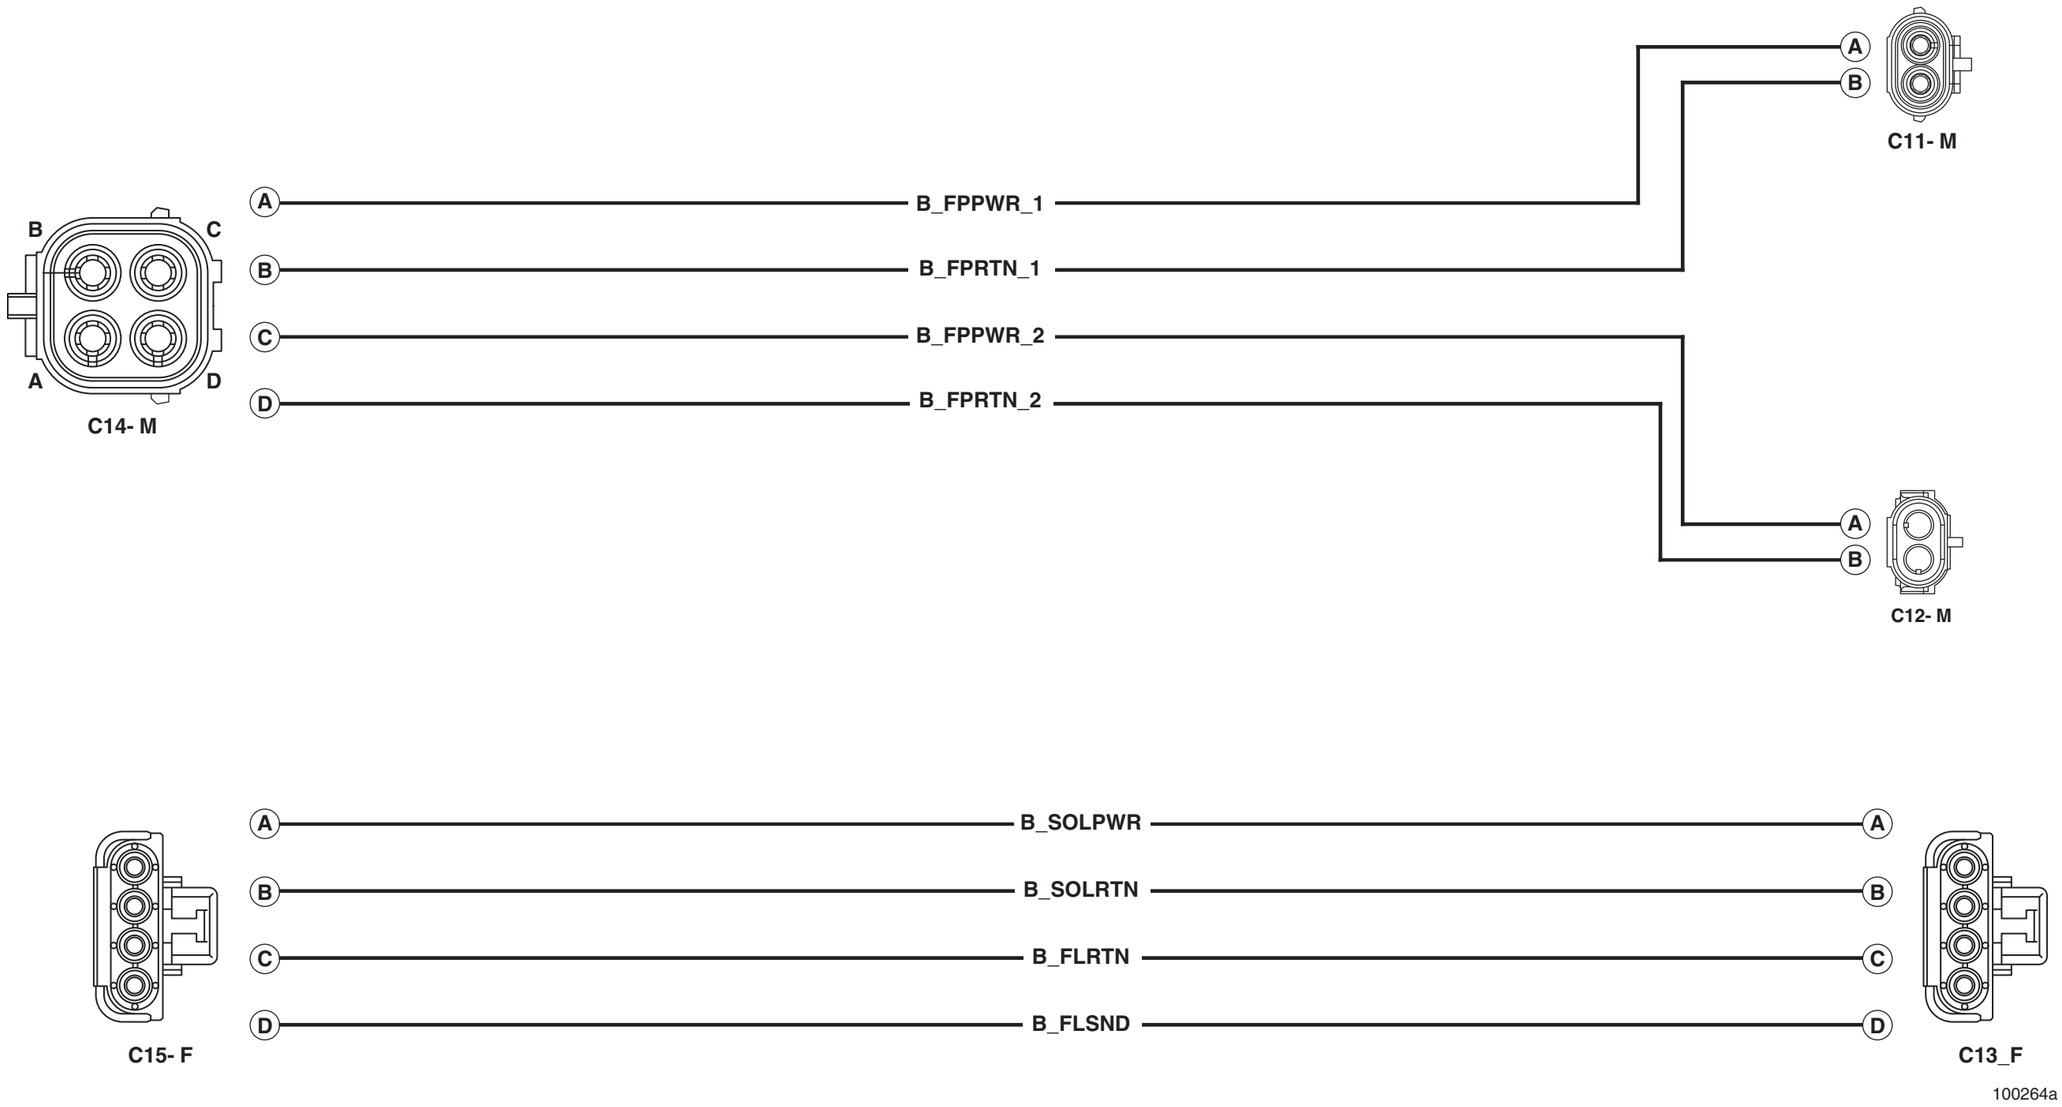

## F-650 Underhood Harness Electrical Schematic

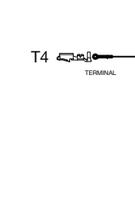

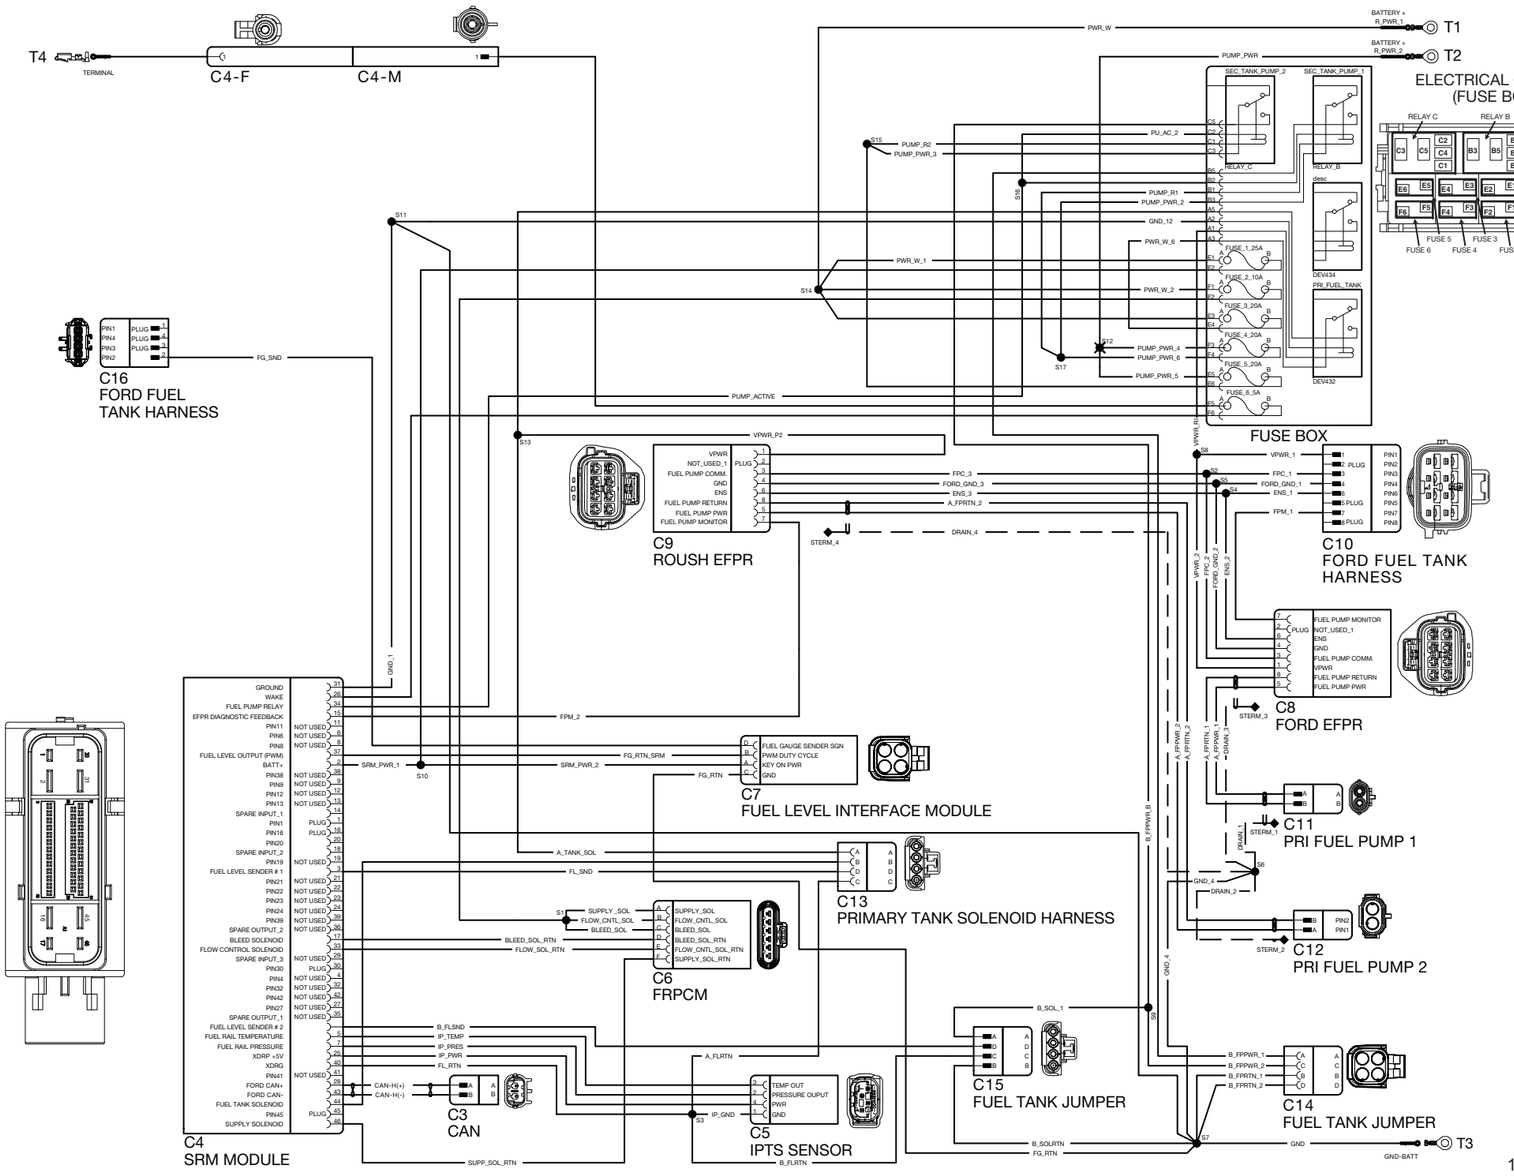

## F-53/59 CAN Harness

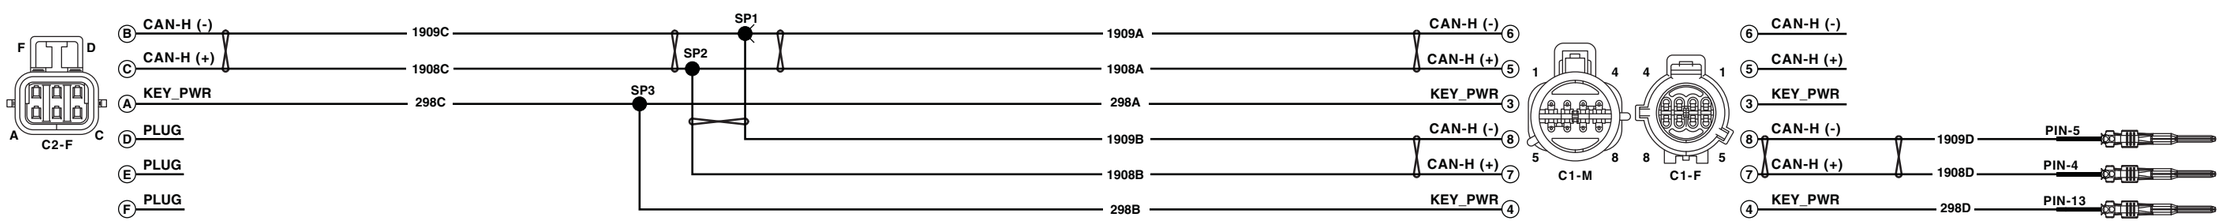


100263a

## F-53/59/250/350/450 Rear Frame Harness Electrical Schematic

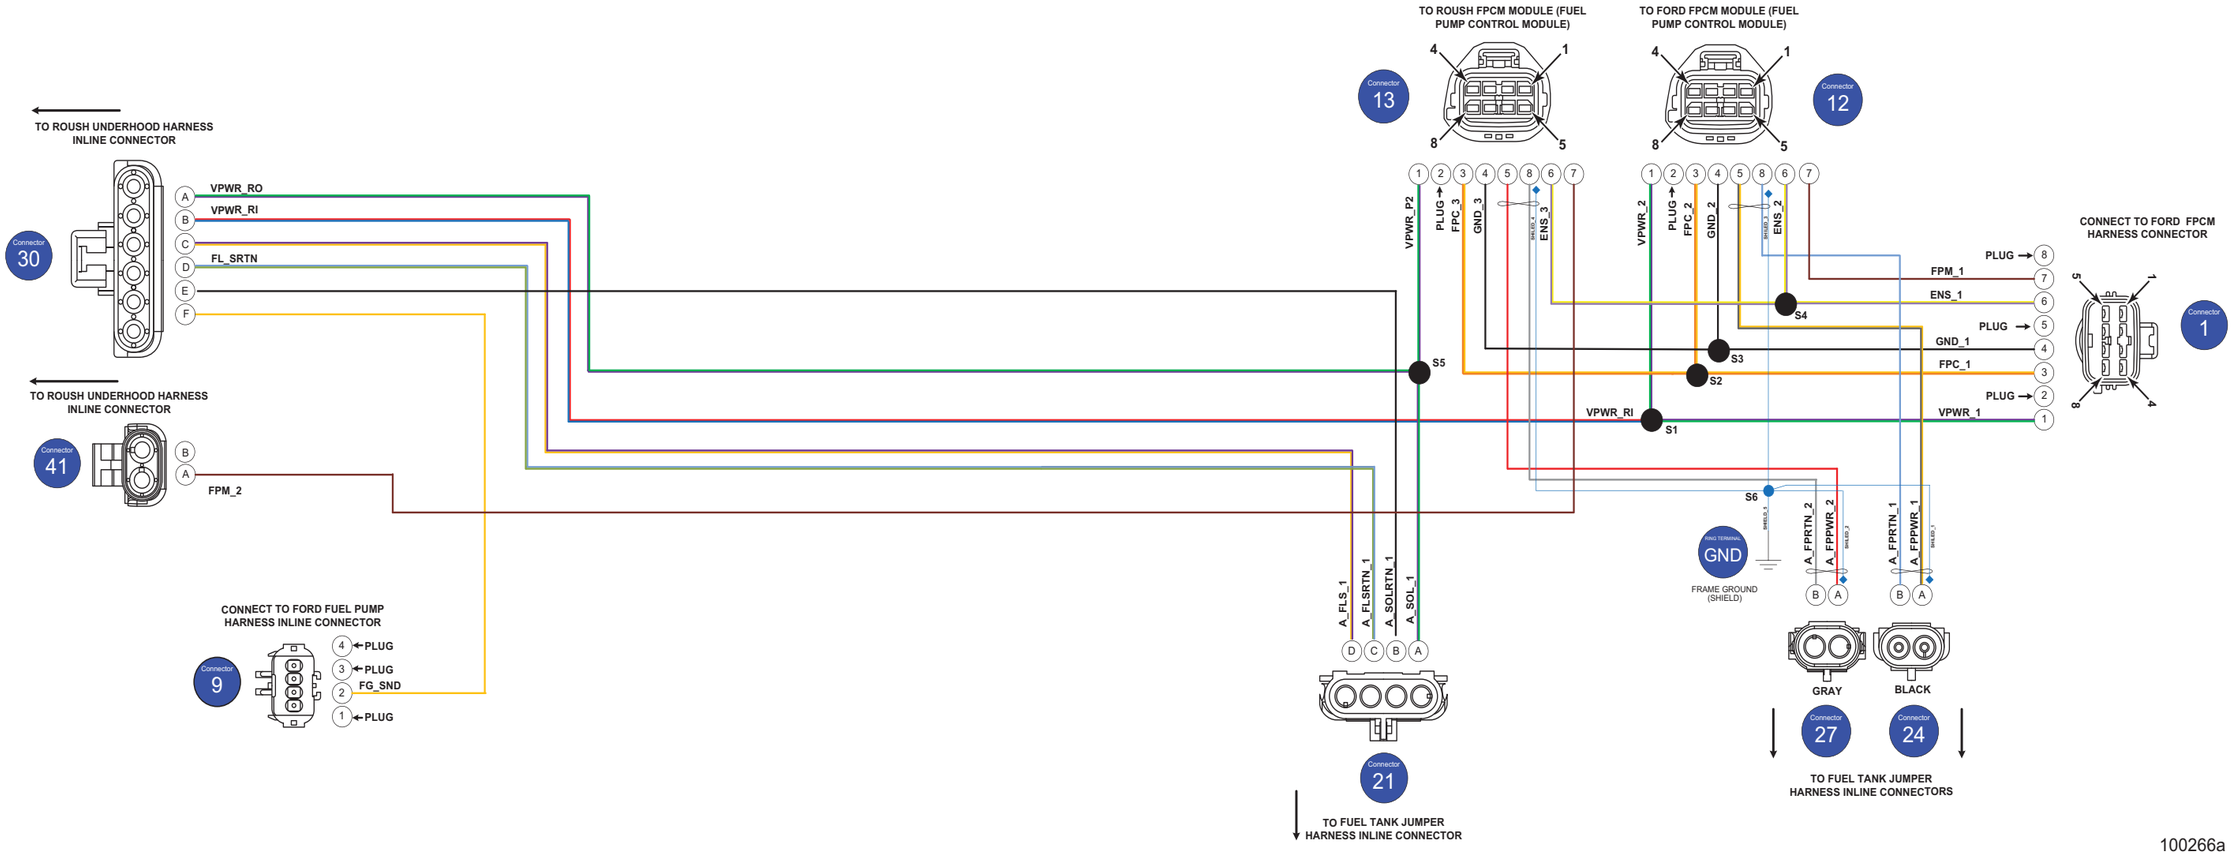

## F-53/59/250/350/450 Underhood Harness Electrical Schematic

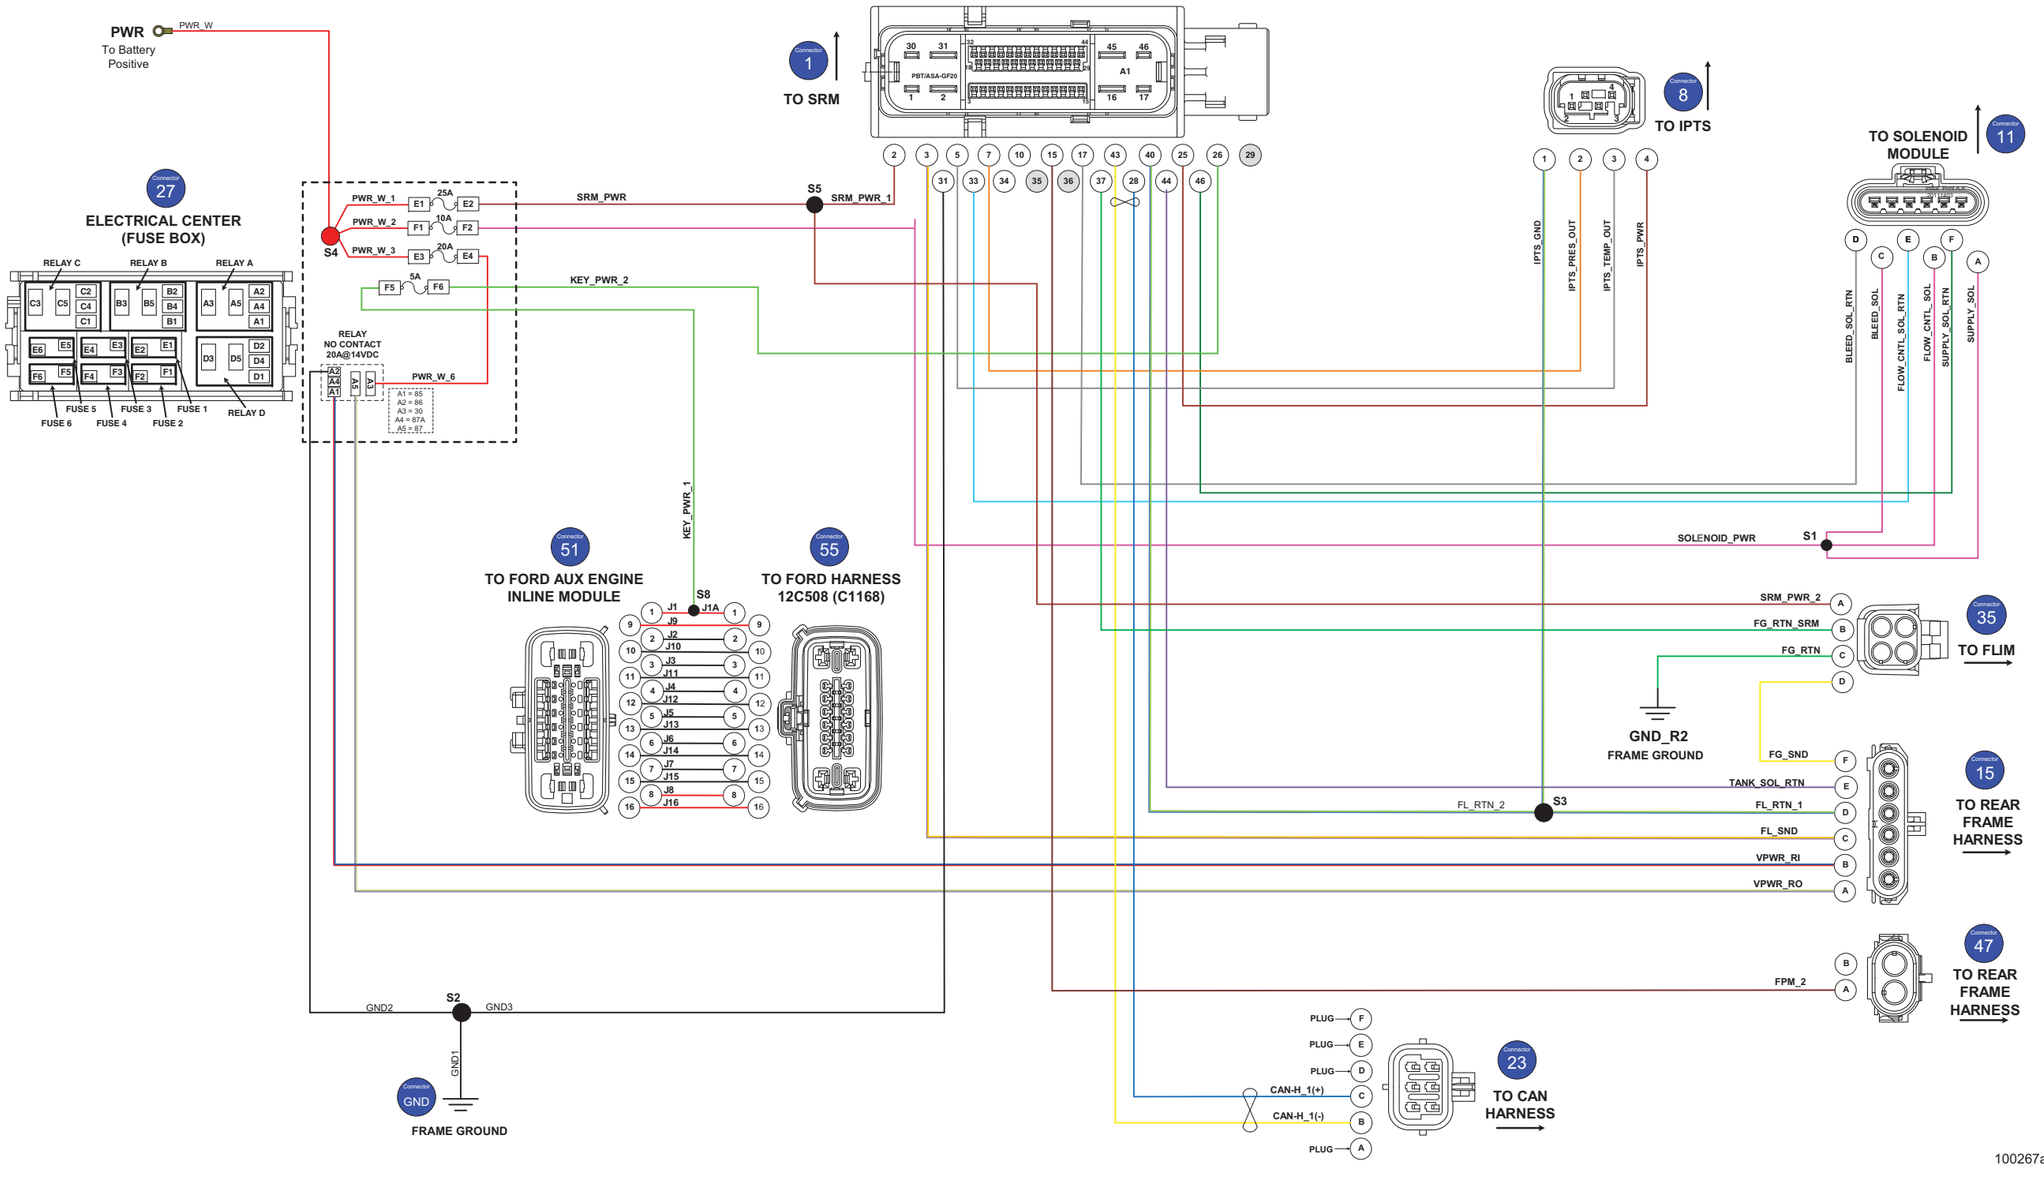


100267a

## F-53/59/450 Fuel Tank Jumper Harness Electrical Schematic

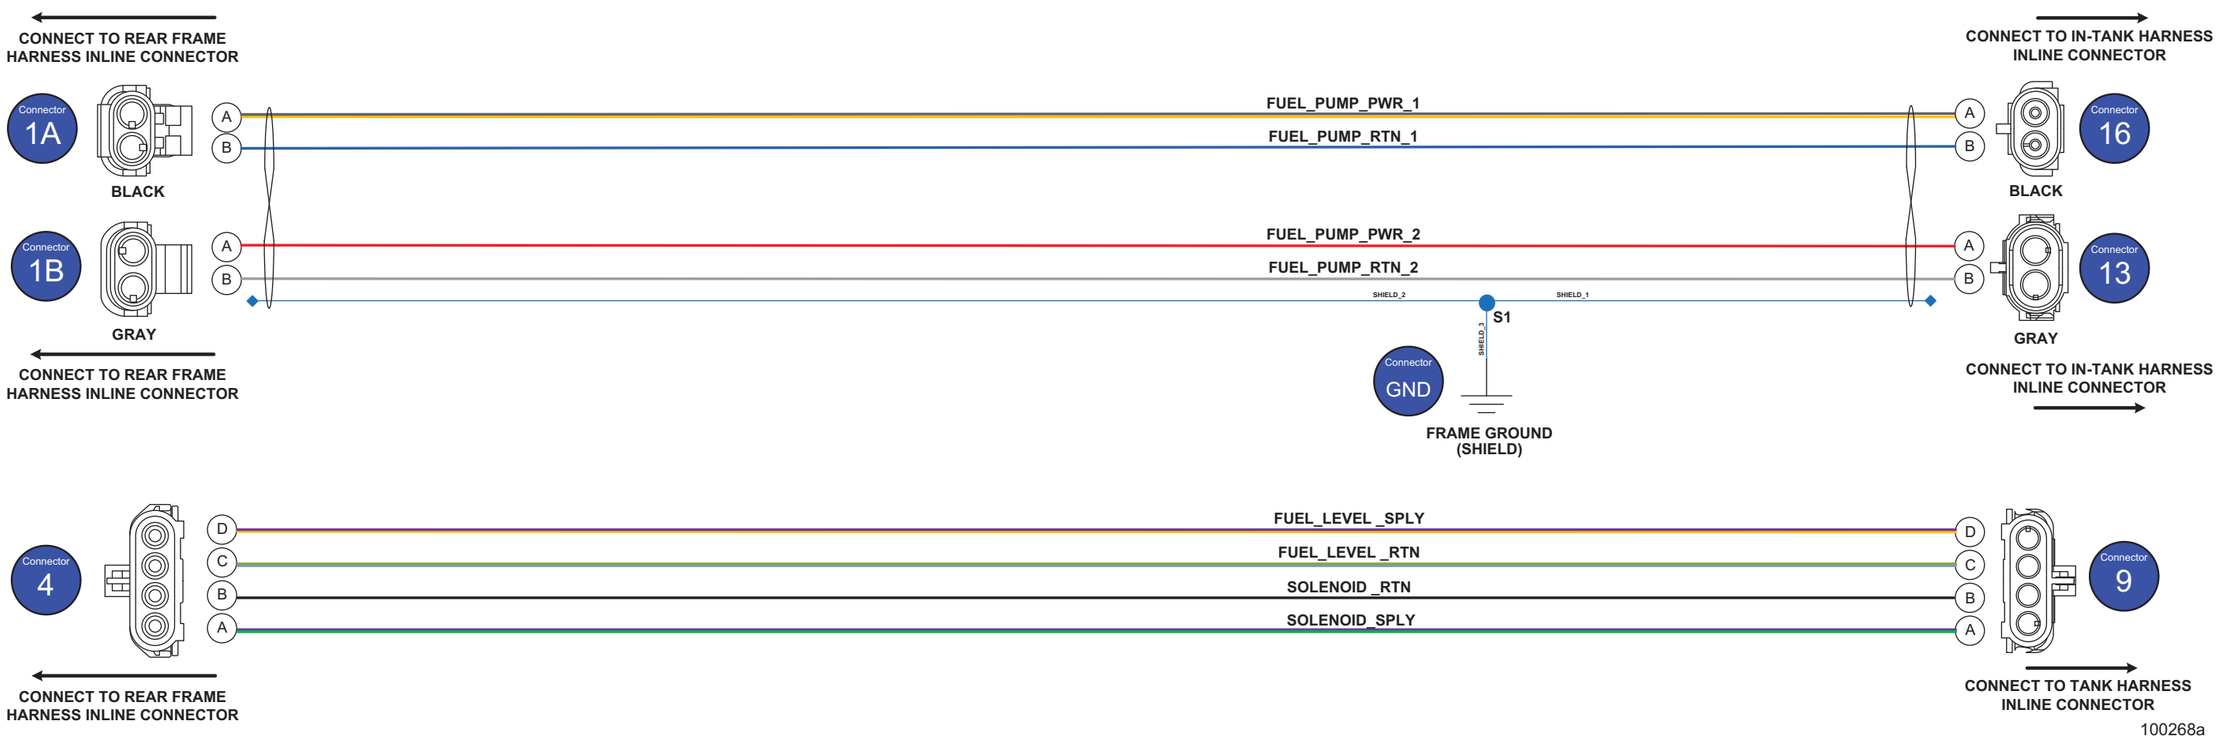


100268a

©2014 by ROUSH CleanTech.
All rights reserved.

The information in this publication was accurate and effective at the time the publication was approved for publishing and is subject to change without notice or liability. ROUSH CleanTech reserves the right to revise the information herein and to make changes and discontinue production of described parts at any time.